



# Lenovo IdeaPad 110-15IBR Display Replacement

If your screen won't turn on, has some kind of damage, or is not visible, here is how to replace it.

Written By: Saddam Alsinai



## INTRODUCTION



This guide shows how to replace the screen on the Lenovo IdeaPad 110-15IBR. The steps show the process of removing the protective cover from the front of the screen, unscrewing the screws holding the screen in place, and unhooking the cable attaching the screen to the device.


---

### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Display

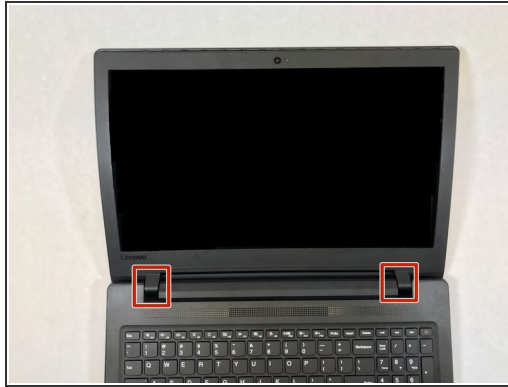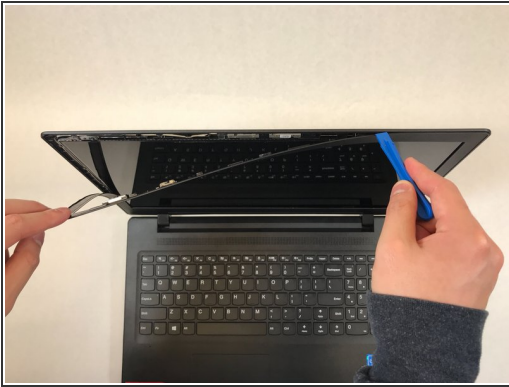

 Before you proceed, make sure your computer is turned off and it's not connected to any power source.

- Using a plastic opening tool, gently pry the cover off of the display.
- Lay screen flat down to remove the tabs from each corner.

## Step 2




- Using the #1 Phillips head screwdriver unscrew the 4 (9mmx6mm) screws holding the screen in place.


## Step 3



- Carefully lay the screen facing down on the keyboard.

 Careful not to lift the screen too high or tug on the screen due to a wire still being connected to the screen and display.

## Step 4

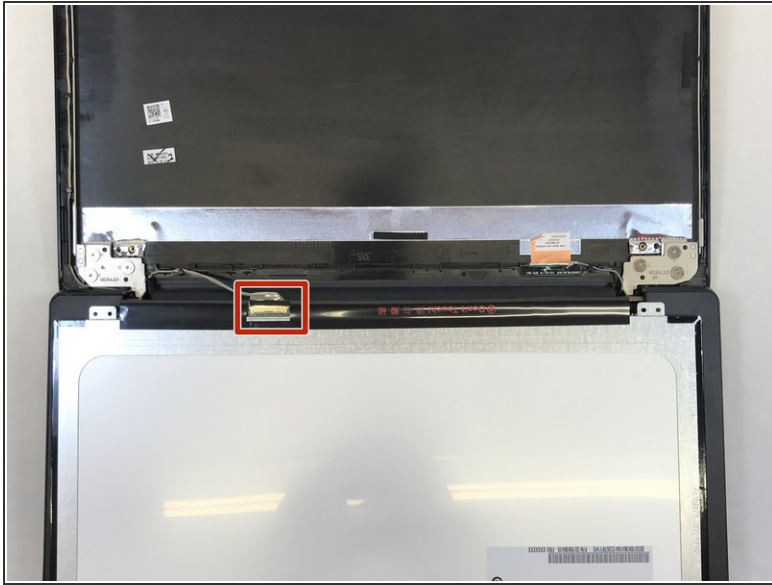

- Remove the tape holding the connected wire to the display.
- Gently remove the display wire from the connection.
- Remove the display from the device.

To reassemble your device, follow these instructions in reverse order.