



Dell Inspiron 17R-5737 Access Panel Replacement

This access panel is removed to gain access to the hard drive and RAM.

Written By: Mack Chabot





TOOLS:

- [JIS #00 Screwdriver](#) (1)
-

Step 1 — Battery



⚠ Make sure the laptop is off before attempting to remove the battery.

- Flip over your laptop so that the battery faces you.

Step 2



- Slide each latch away from the battery to unlock it.

Step 3



- Lift the battery upwards to remove it.
- ❗ Continue holding the latches when removing the battery.

Step 4 — Access Panel



- Remove two 4.8mm screws with a JIS #00 screwdriver.
- Remove the access panel.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-28 06:21:00 AM (MST).

