




# Ring Video Doorbell Pro Speaker Replacement

This guide will explain step-by-step how to replace the speaker in a Ring Video Doorbell Pro.

Written By: Jake Dixon

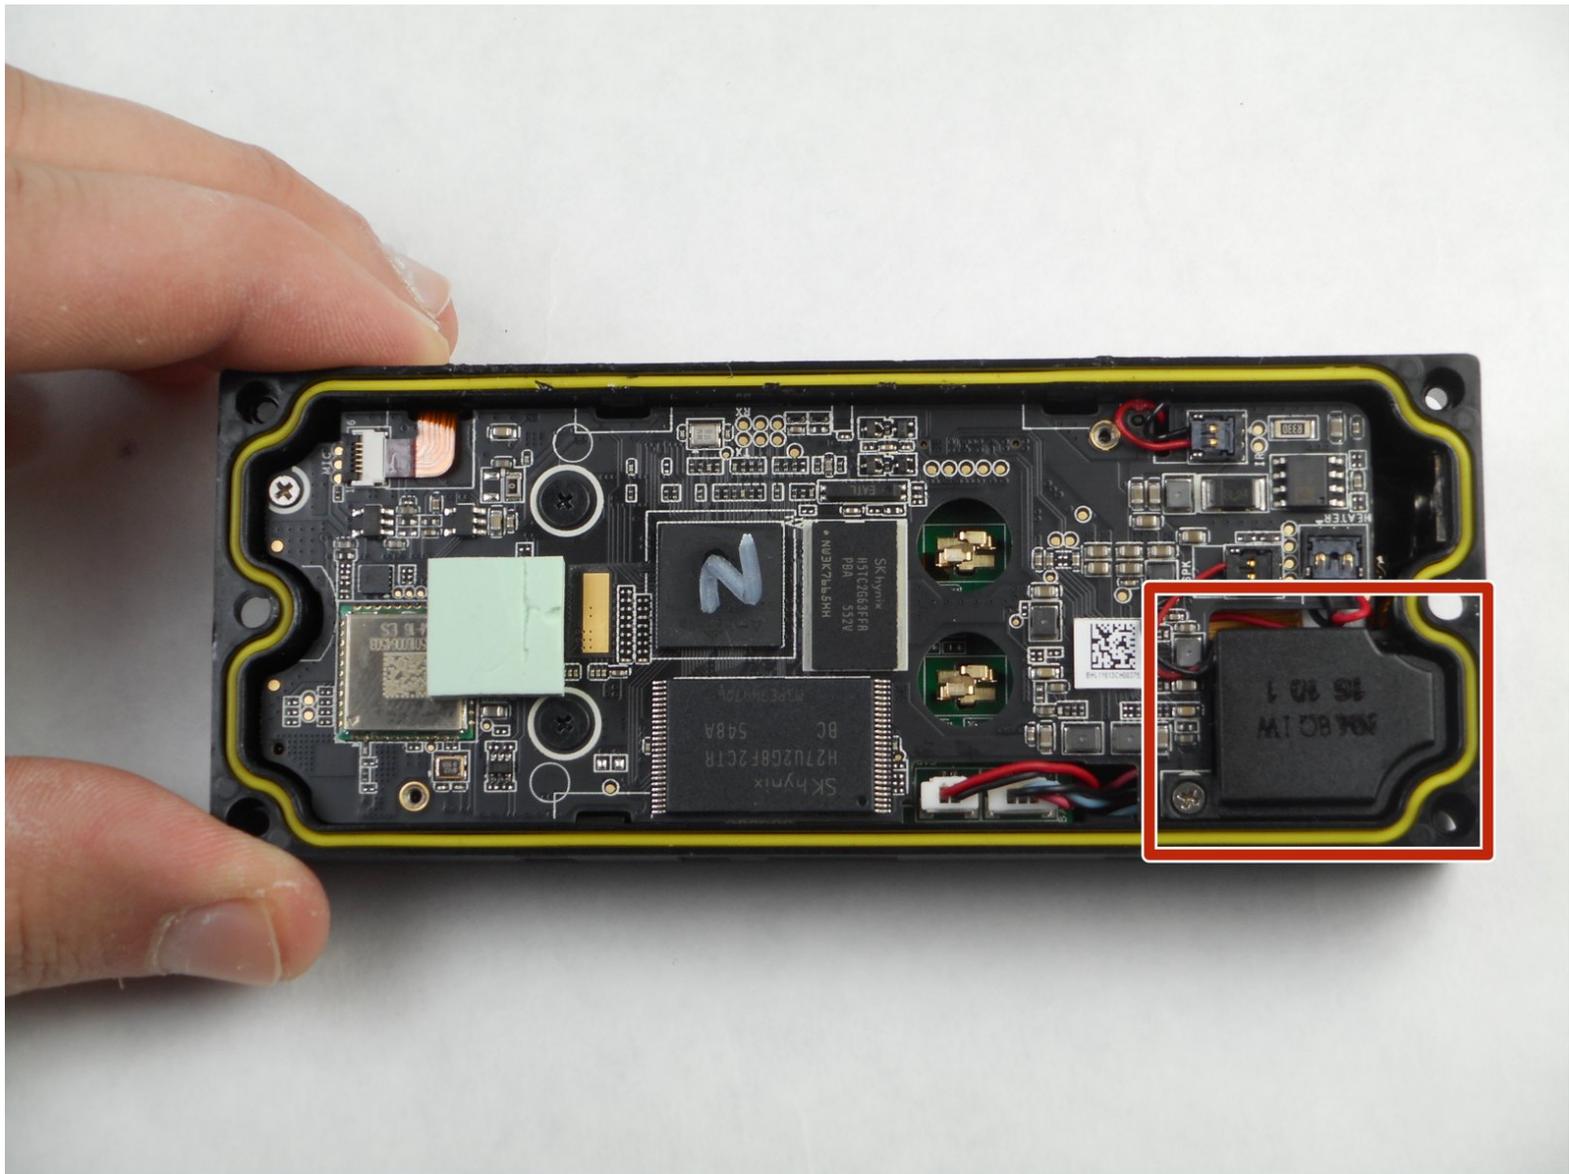

---

## INTRODUCTION

This guide will explain step-by-step how to replace the speaker in a Ring Video Doorbell Pro.

---

### TOOLS:

- [Phillips PH000 Screwdriver](#) (1)
  - [iFixit Opening Tool](#) (1)
-

## Step 1 — Housing




- Start by using the star-shaped end of the included Ring screwdriver to take out the 5 mm screw on the bottom of the device.

## Step 2




- Use your thumbs to apply downward pressure on the glass part of the device while pulling the faceplate up and off of the device.

### Step 3

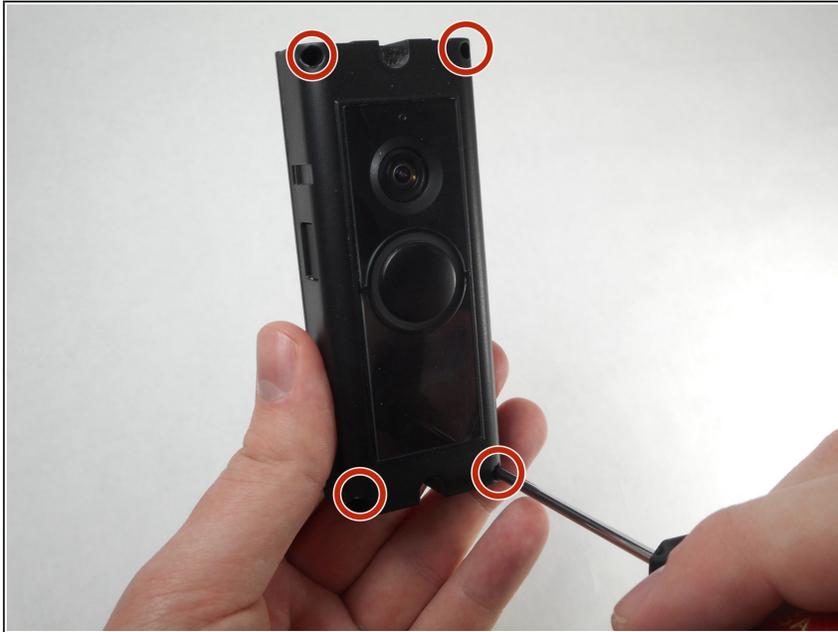


- Using a PH-000 screwdriver, unscrew and set aside all four of these 5.25 mm screws.

### Step 4

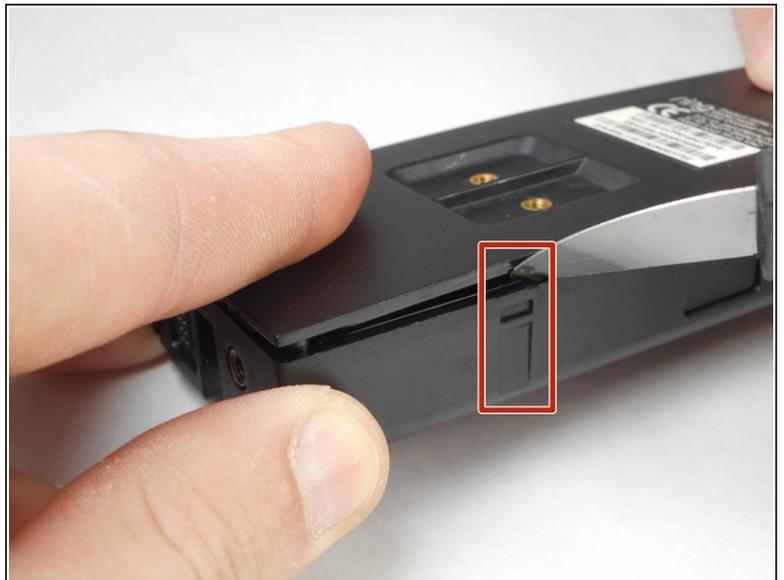


- Using a plastic pry tool, go along the edge of the device prying the device apart. While doing this, focus on the four clips, two of which are on either side of the device.

## Step 5

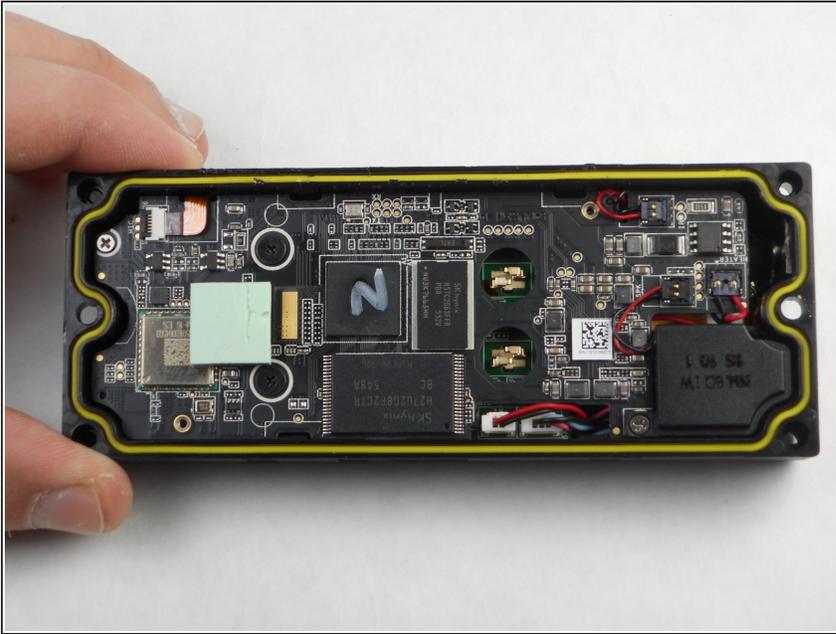


- Remove the front of the device from the back plate.

## Step 6 — Speaker

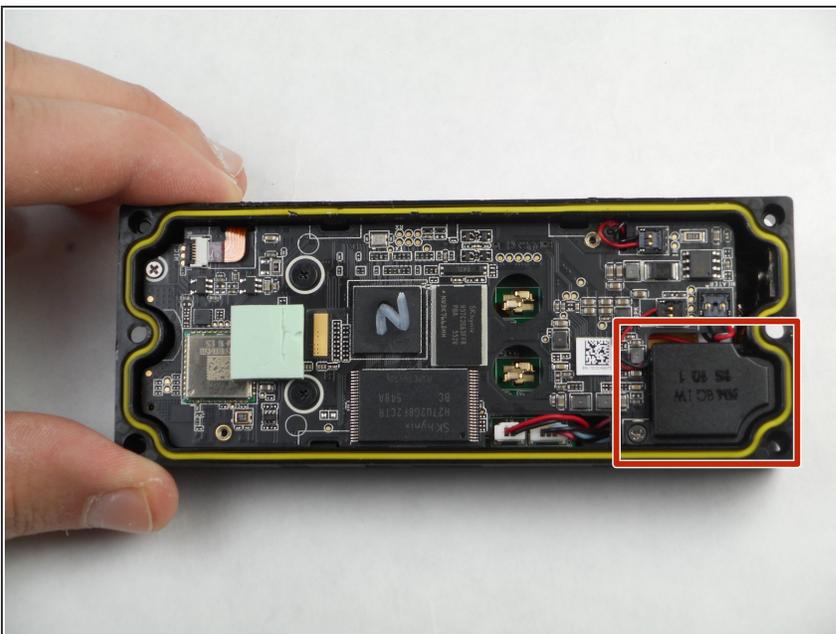


- With the Video Doorbell Pro opened up the speaker is exposed.

## Step 7

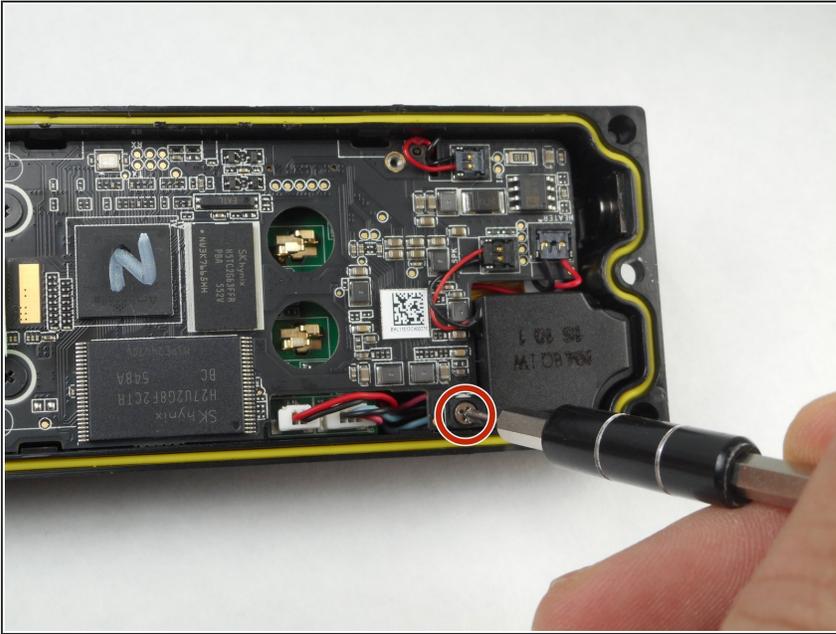


- Remove this 5.25 mm screw.

## Step 8

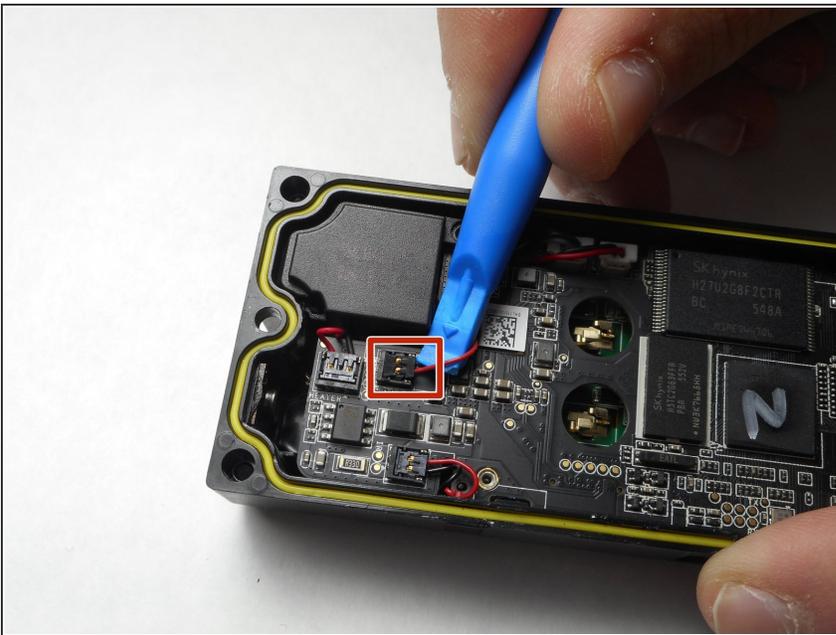

- Remove this wire connection by gently prying it off with a plastic pry tool.

## Step 9

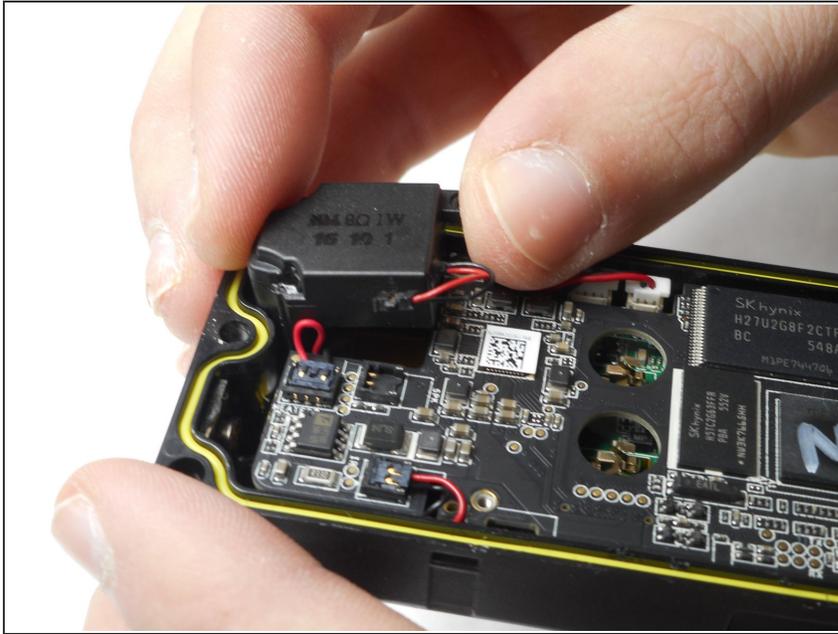

- Remove the speaker from the device.

To reassemble your device, insert the new speaker and follow these instructions in reverse order.