



# Panasonic ER430K Blade Replacement

How to replace the blade in the Panasonic ER430K.

Written By: Kyle



## INTRODUCTION

This guide will help to assist in replacement of the trimmer blade.

## Step 1 — Blade



- Remove the protective cap.

## Step 2




- Rotate the blade block counter-clockwise and remove.

### Step 3



- Turn blade block over, blade will be inside.

### Step 4

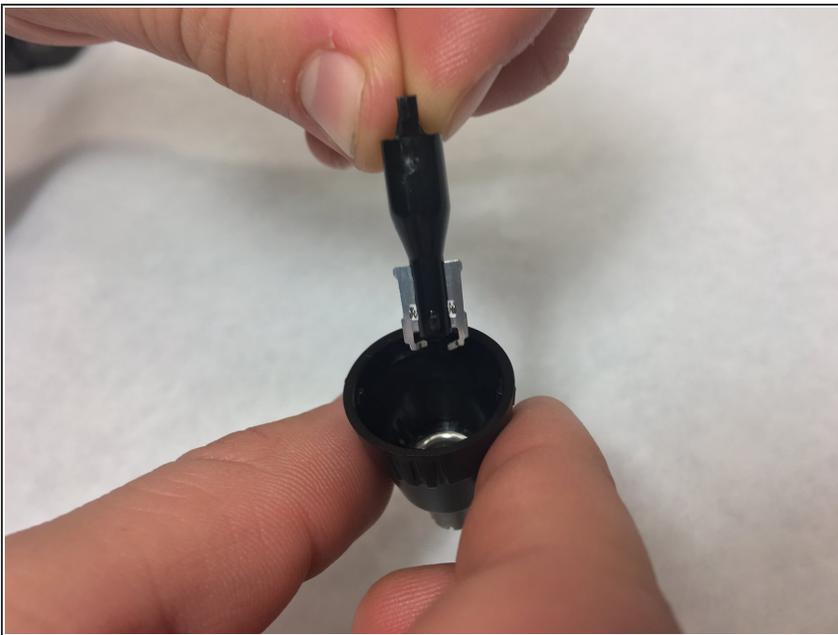

- Remove old blade from blade block and insert new blade.
- ⚠ Be careful blade is sharp even when broke or dull.

To reassemble your device, follow these instructions in reverse order.