



Philips Norelco BG2040 BodyGroom 7100 Trimmer Head Blades Replacement

Disassemble and replace trimmer head blades in the Philips Norelco Bodygroom series 7100.

Written By: August Post




INTRODUCTION

This guide will show how to take out both trimmer blades, and replace them with a new ones. You may need this if the trimmer blades on the Philips Norelco Bodygroom break, or for some reason become too dull to use. It is also necessary for this guide to show how to disassemble and reassemble the trimmer head in order to get to the blades. It is recommended to have the iFixit Pro Tech Toolkit since it will contain all tools necessary for this guide. Lastly, you will need to provide your own working blades to replace the broken ones.

TOOLS:



- [Spudger](#) (1)
-

Step 1 — Trimmer Head Blades

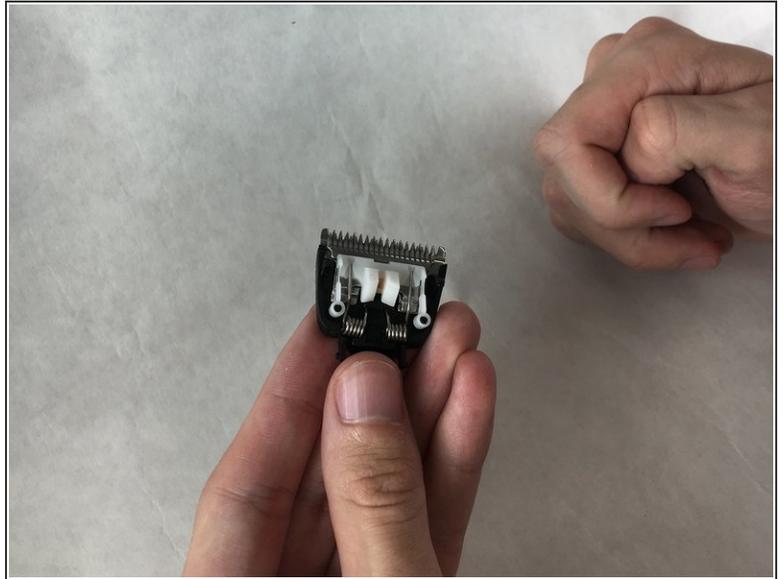

- Pop open the trimmer head by pushing against the blades.
- Slide off trimmer guard and open the hatch on the side.
- Remove the trimmer from the base.

Step 2

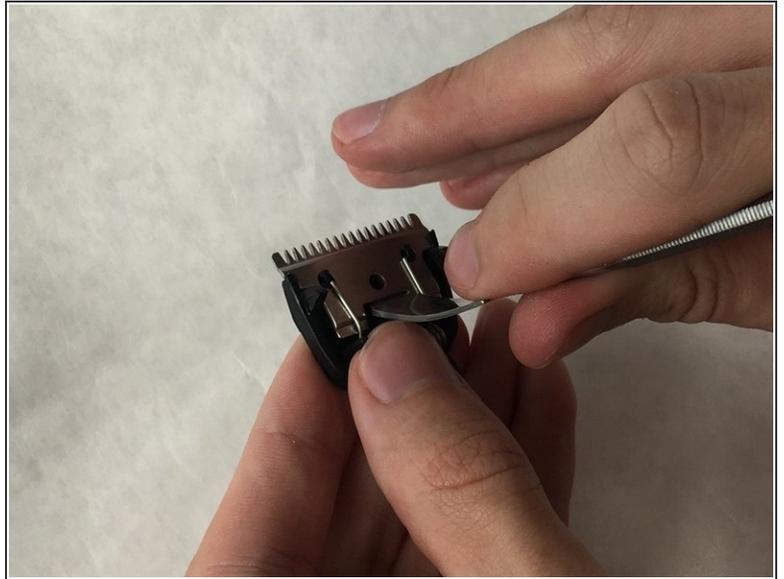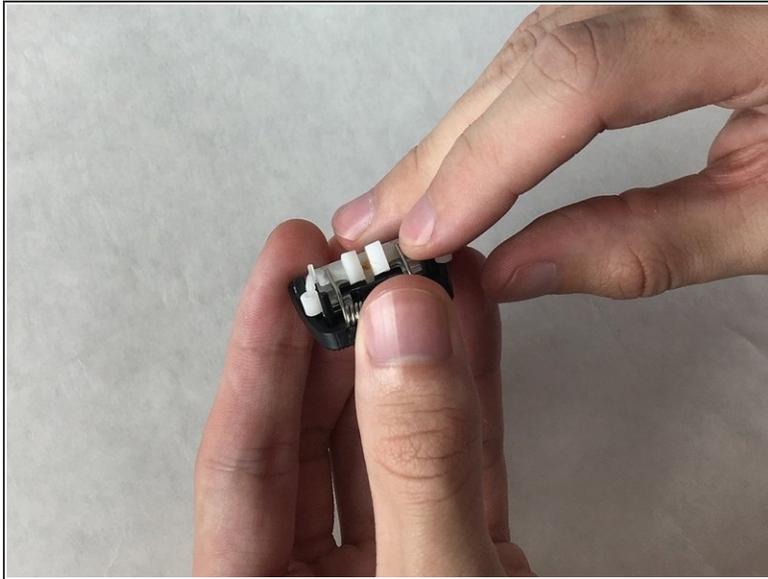

- Remove spring first, and then pull off white plastic along with the first, moving blade.
- Use spudger to pry off second, stationary blade.

To reassemble your device, follow these instructions in reverse order.