



iON SnapCam 1045 Wearable HD Video Camera Battery

Disassembly of the battery.

Written By: Olakunle



INTRODUCTION

This guide covers the disassembly of the iON SnapCam 1045 battery.



TOOLS:

- [Metal Spudger](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
-

Step 1 — Battery



- Detach the magnetic clip from the bottom of the camera.
- The magnetic clip gets in the way of disassembly because it constantly spins and therefore a distraction so it is imperative to detach.

Step 2



- Use a spudger to gently detach the memory card and USB slot cover.

Step 3



- Use a Phillips #000 Screwdriver to loosen the 0.008 mm screw located between the USB and memory card slots.

⚠ This screw is really tiny and can easily fall off and get lost! Make use of a magnetic mat to hold it in place or better still put the magnetic clip to use for keeping the screw safe.

Step 4



- Once again use the spudger to gently open the encasement.

⚠ The case is a little fragile and forceful entry could lead to damage of the plastic case. Thread carefully.

- The Battery can be safely detached and replaced.

This document was generated on 2020-11-23 01:04:02 AM (MST).

To reassemble your device, follow these instructions in reverse order.