



Instant Pot Smart-60 Plastic Base Replacement

How to remove the plastic base of the Instant Pot Smart-60.

Written By: paola alvarez



INTRODUCTION

The plastic base covers the electronic components inside the instant pot. Before you can touch anything inside of the device the base must be removed.



TOOLS:

- [Phillips #2 Screwdriver](#) (1)
-

Step 1 — Plastic Base



- Take off the lid of the Instant Pot. Grasp the handle and rotate the lid counter-clockwise, then lift up to separate the lid from the base.

Step 2



- Take out the inner pot and place it somewhere out of the way.

Step 3



- Flip the Instant Pot over on its top so that the base is facing upward.

Step 4



- Remove the single 12mm Phillips #2 screw holding the base to the device.

Step 5



- Rotate the base counter-clockwise, then gently lift the base off of the device.

To reassemble your device, follow these instructions in reverse order.