


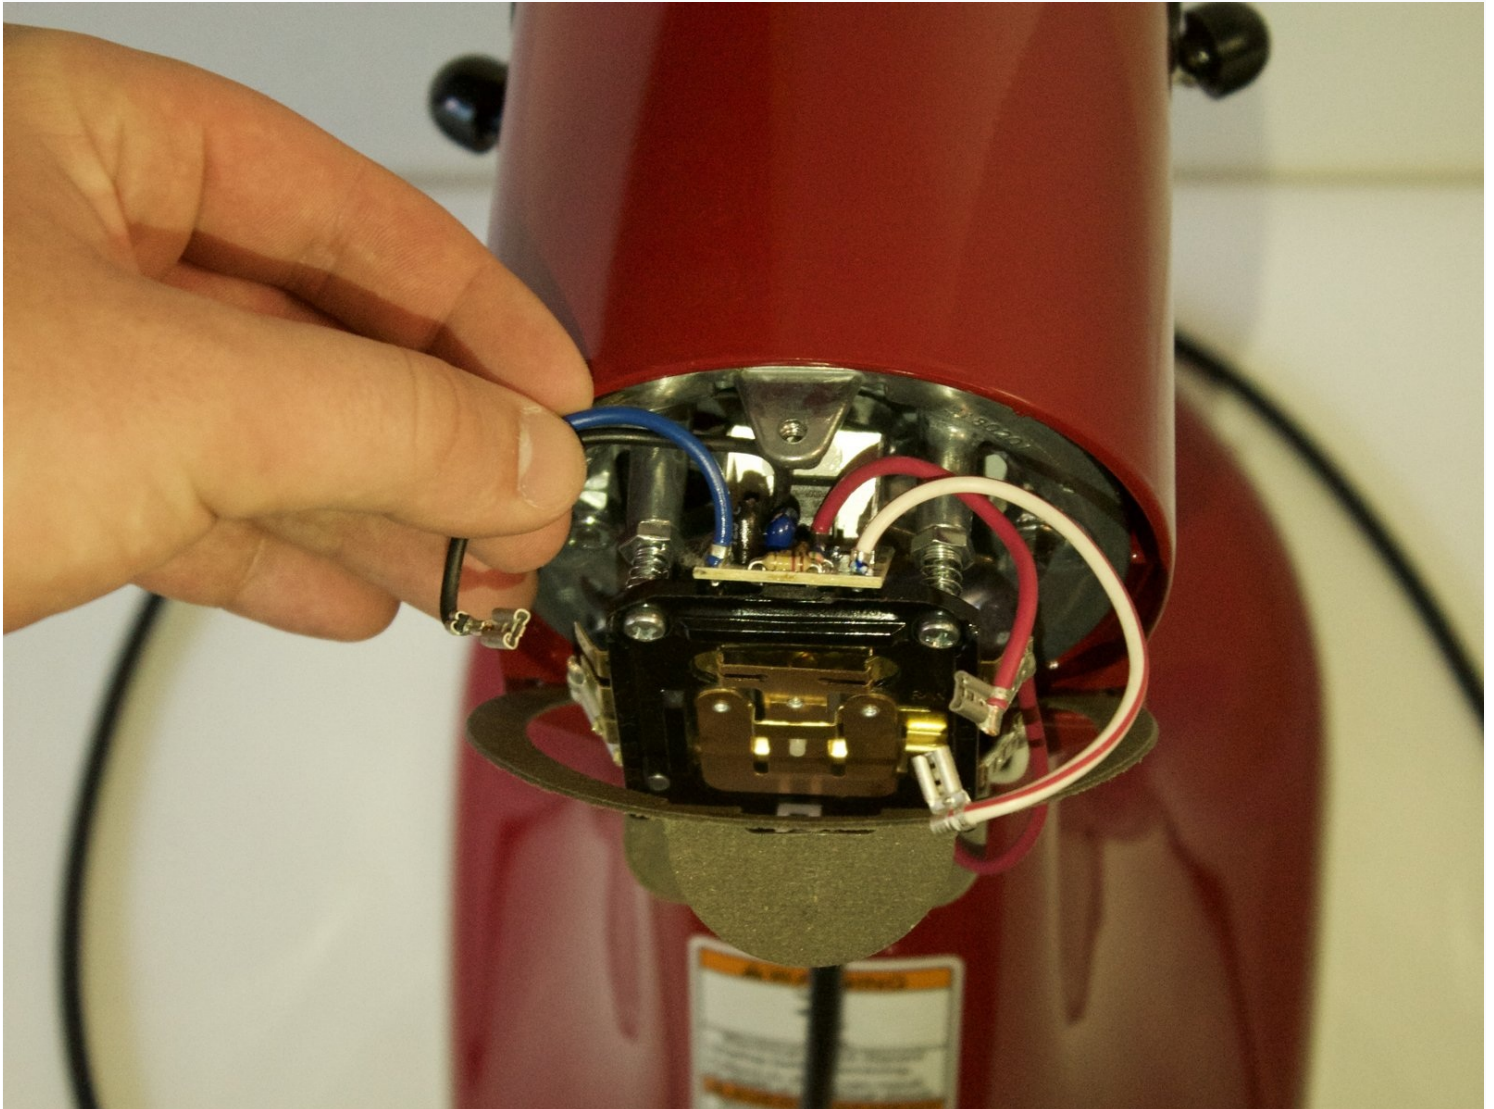

# KitchenAid KSM150PSE Circuit Board Replacement

The circuit board is a small part inside the...

Written By: Luke Leonard



# INTRODUCTION

The circuit board is a small part inside the back of the mixer. It is fairly easy to get to and doesn't require many steps.

---

## TOOLS:

Phillips #1 Screwdriver (1)


Phillips #2 Screwdriver (1)

Large Needle Nose Pliers (1)



---

## Step 1 — Circuit Board





- Using a Phillips #2 screwdriver, remove the 10mm screw on the back cover by rotating it counterclockwise.
  - The back cover is now free. Remove it by pulling it back and up.
-  **Ensure that the mixer is disconnected from any electrical source prior to removing the back cover.**

## Step 2

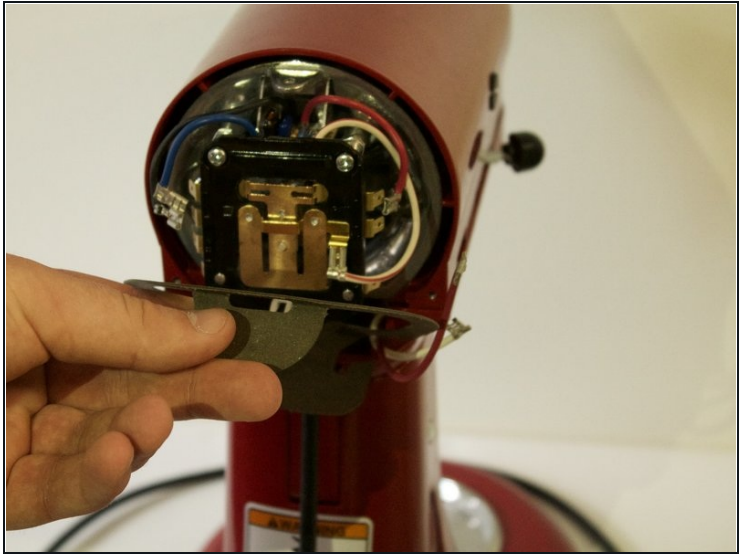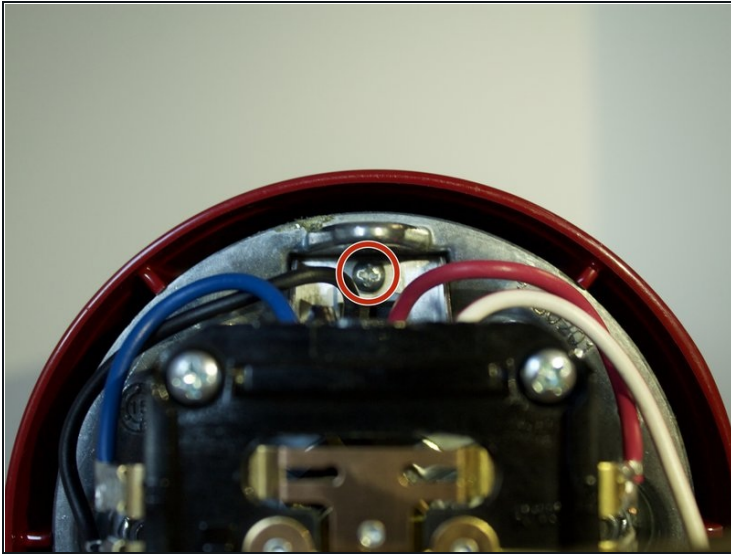


- Using a Phillips #1 screwdriver, remove the 9.5mm screw above the circuit board by rotating it counterclockwise.
- ① If you can't see the screw, try pulling the seal down past the wires to make the screw more accessible.

## Step 3

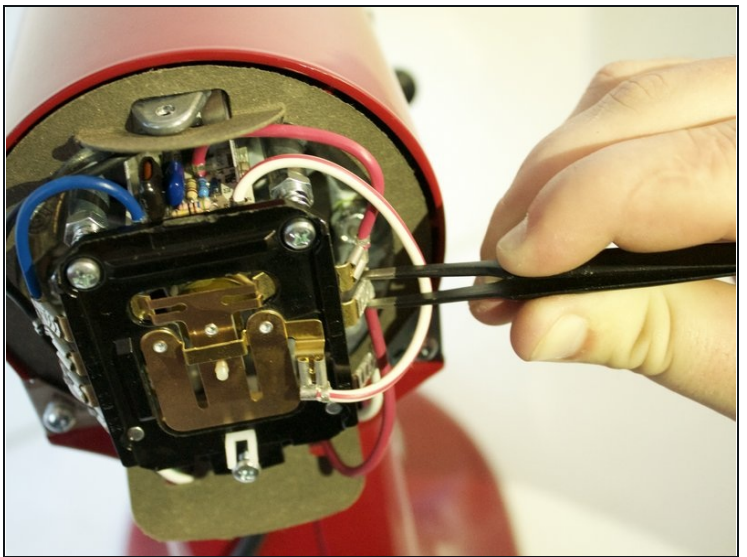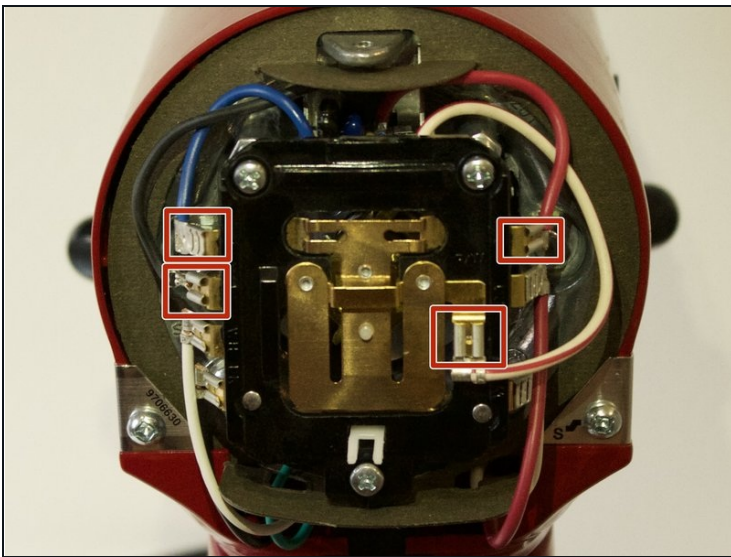

- Using pliers or [tweezers](#), remove the connectors of the four wires attached to the circuit board.

## Step 4

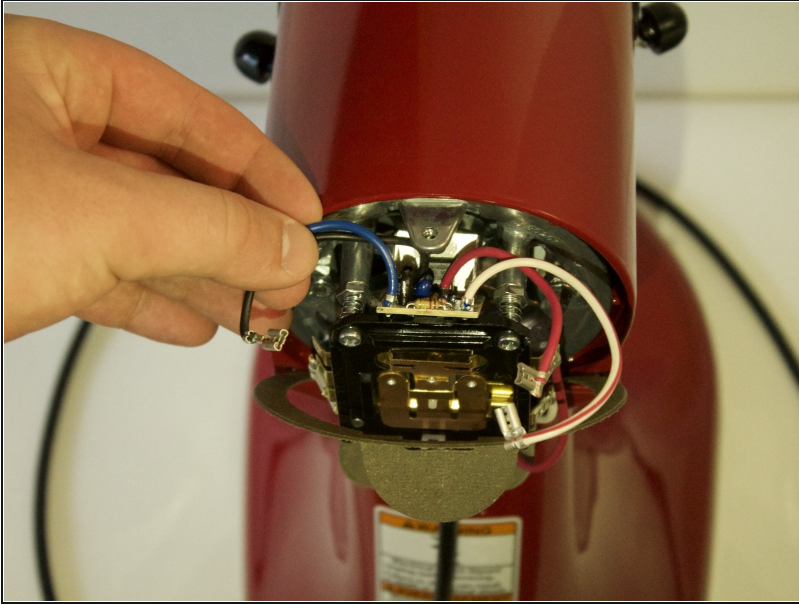

- Grab the wires and tilt the edge of the board up to lift the circuit board up and out.

---

To reassemble your device, follow these instructions in reverse order.