



# Archos Jukebox Recorder 20 Battery Replacement

This is a step-by-step guide for replacing the batteries in an Archos Jukebox Recorder 20.

Written By: Aidan Patterson



---

## INTRODUCTION

In this repair guide the user will learn how to replace the batteries in the Archos Jukebox Recorder 20.



### TOOLS:


- [iFixit Opening Tools](#) (1)
-

## Step 1 — Battery



- Remove the plastic cover over the batteries on both sides of the device.

## Step 2

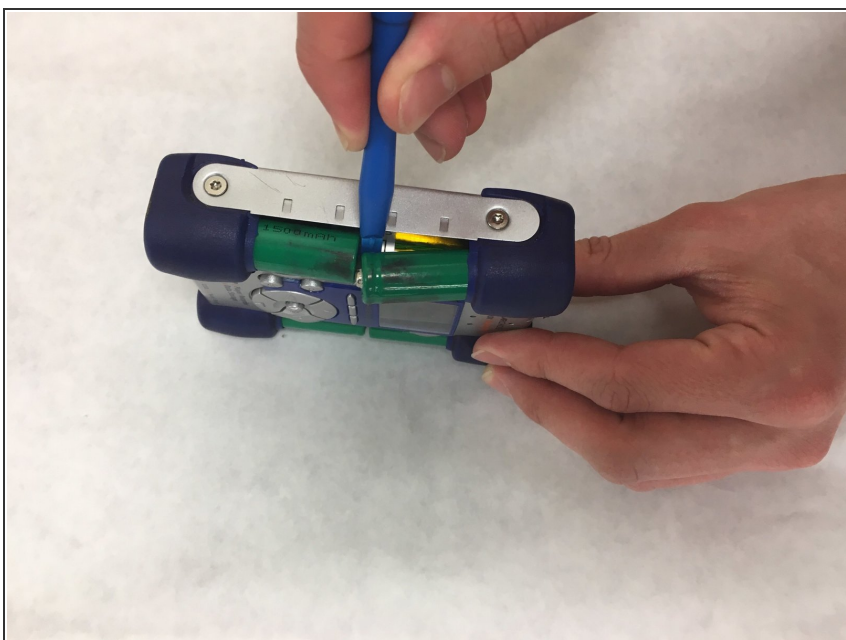

- Remove the batteries (may require a plastic opening tool or spudger to pop the batteries out).

To reassemble your device, follow these instructions in reverse order.