




Alienware M15x RAM Replacement

This guide will explain how to carefully and safely remove the RAM from an Alienware M15x laptop.

Written By: Aria Saberi

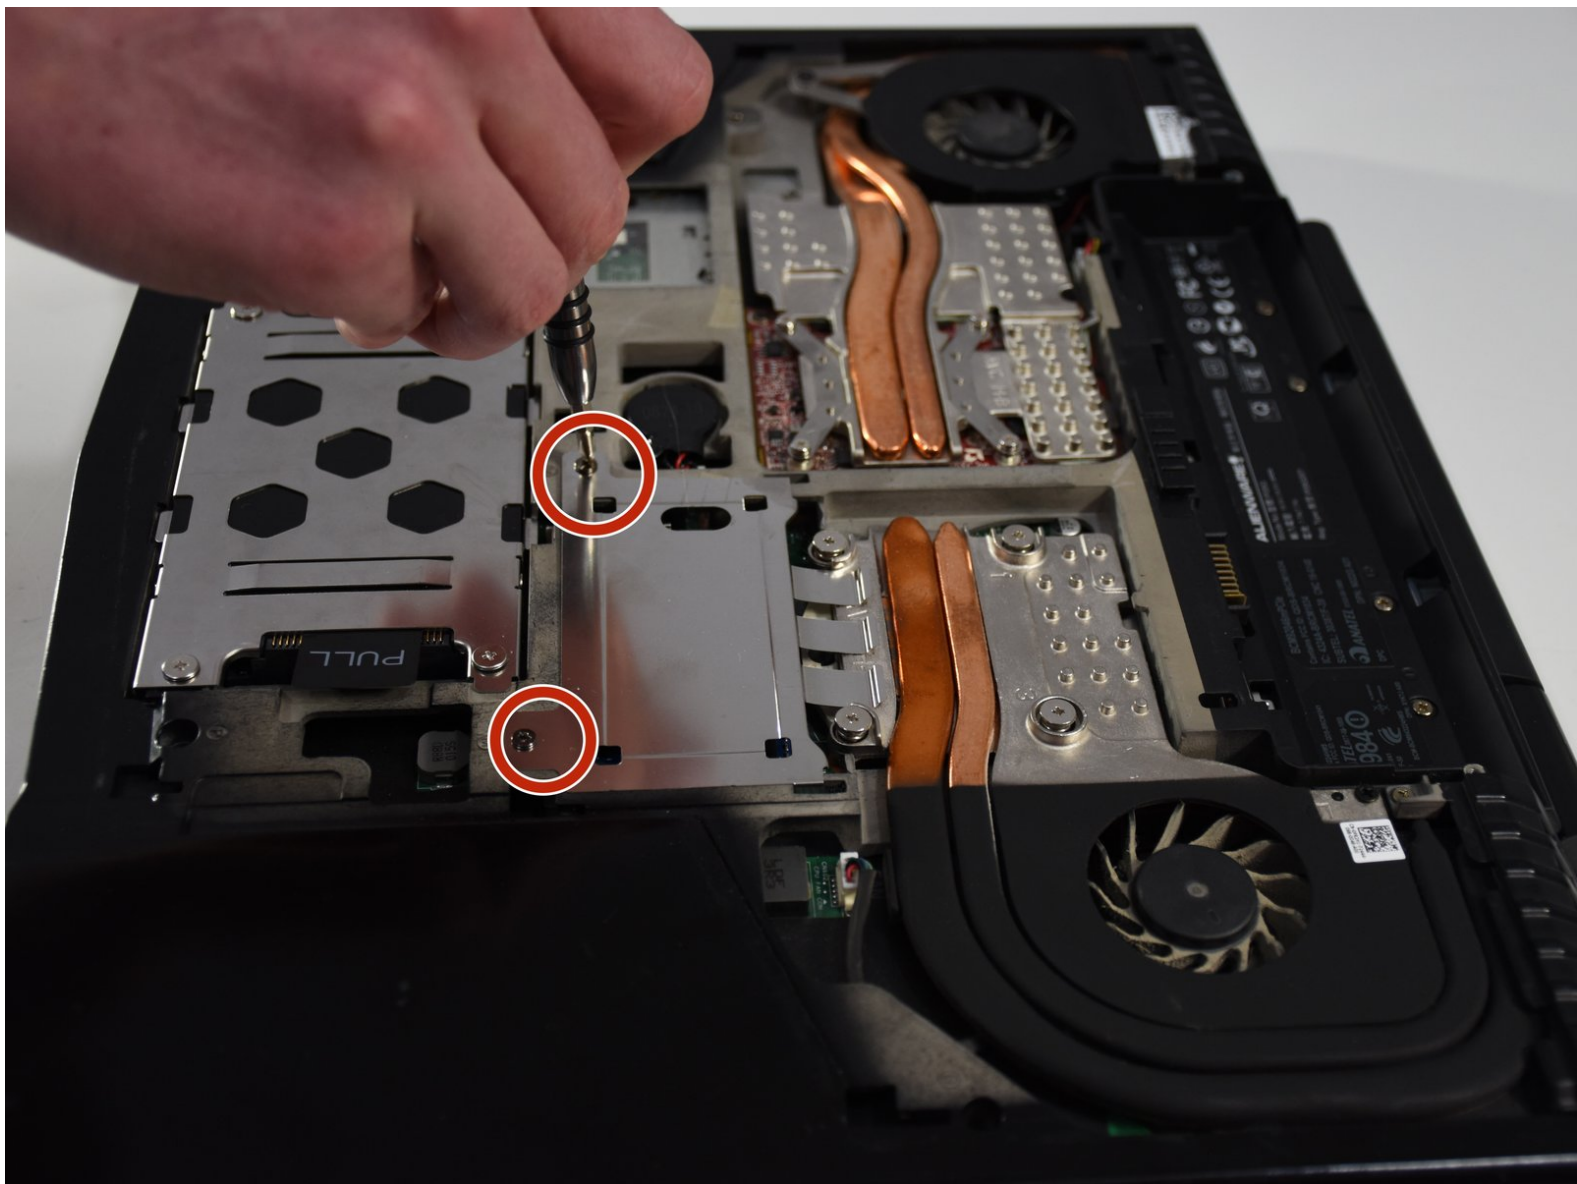

INTRODUCTION

This guide will explain how to carefully and safely remove the RAM from an Alienware M15x laptop.



TOOLS:


- [Fingers](#) (1)
- [Phillips #0 Screwdriver](#) (1)
- [Phillips #1 Screwdriver](#) (1)



PARTS:

- [PC3-12800 8 GB RAM Chip](#) (1)

Step 1 — Battery

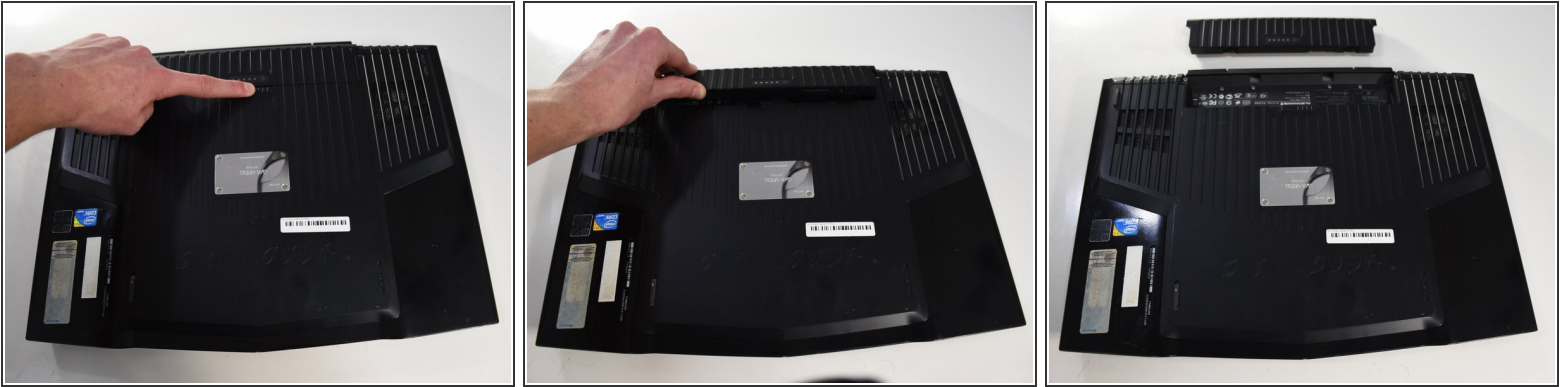


- Remove the battery by sliding the latch to the left and pulling the battery up.

Step 2 — Compartment Door




- Remove the two 4-mm screws that hold the compartment door to the rest of the computer using a PH#0 screwdriver tip.

Step 3

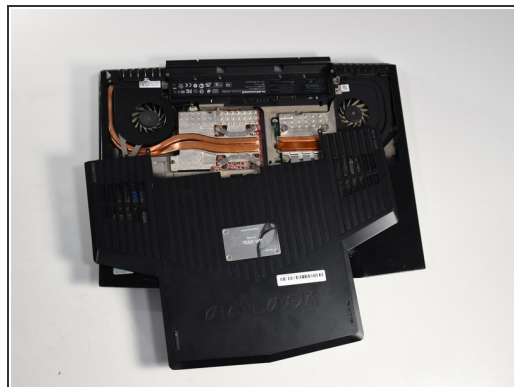


- Slide the compartment door towards the front of the computer and lift.

Step 4 — RAM

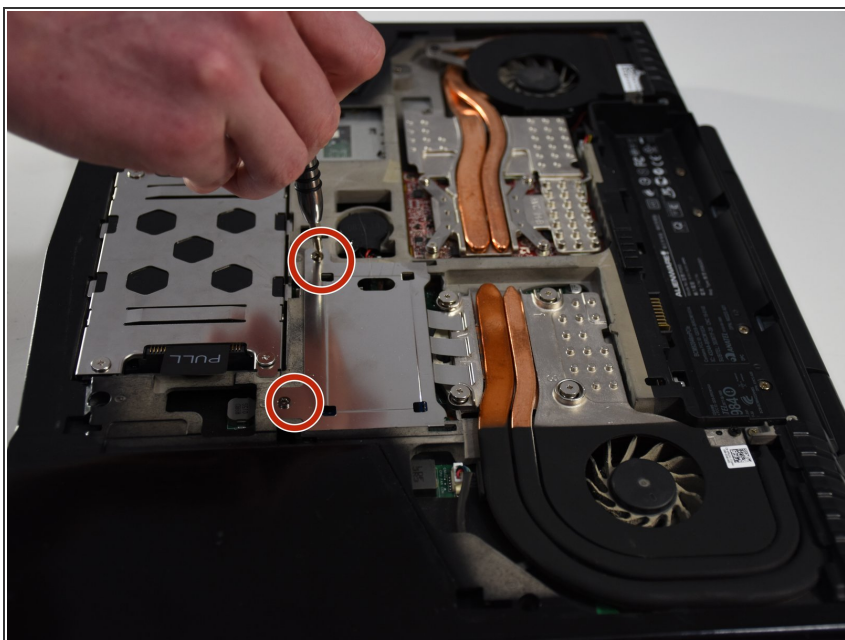


- Remove the two indicated screws for the RAM cover.

Step 5

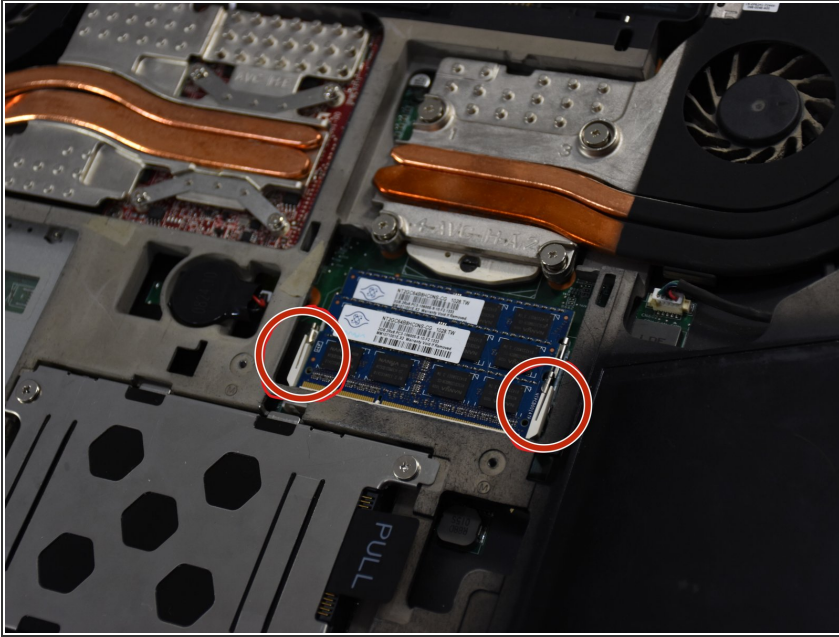


- Push the two retaining clips on either side of the ram outwards, allowing the RAM chip to pop up.

Step 6

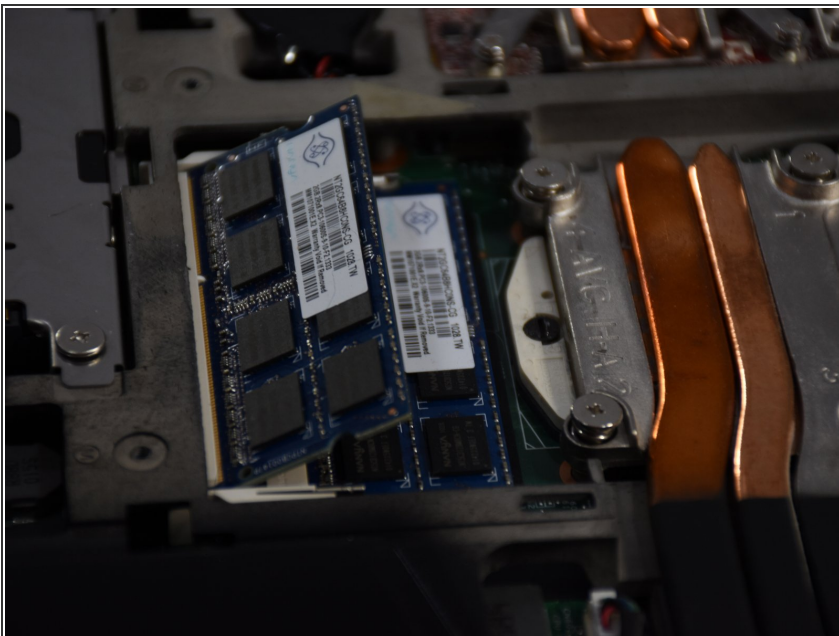

- Pull it straight out of its pocket.

Step 7

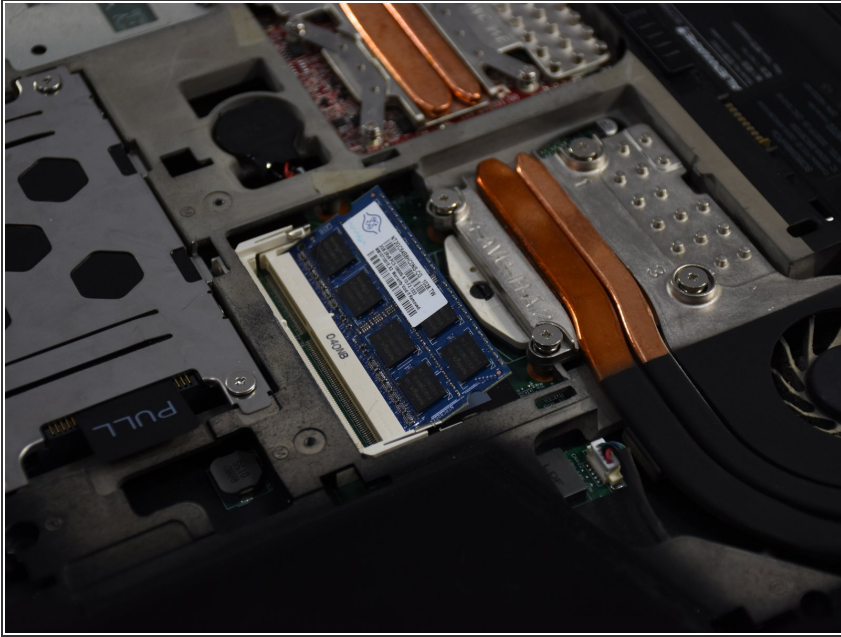

- Repeat the same process if there are additional RAM chips.

To reassemble your device, follow these instructions in reverse order.