




Hoover Power Path Pro Advanced Power Switch Replacement

This guide will show how to replace the power switch on your Hoover Power Path Pro Advanced.

Written By: Jose Andres Gonzalez Valdes

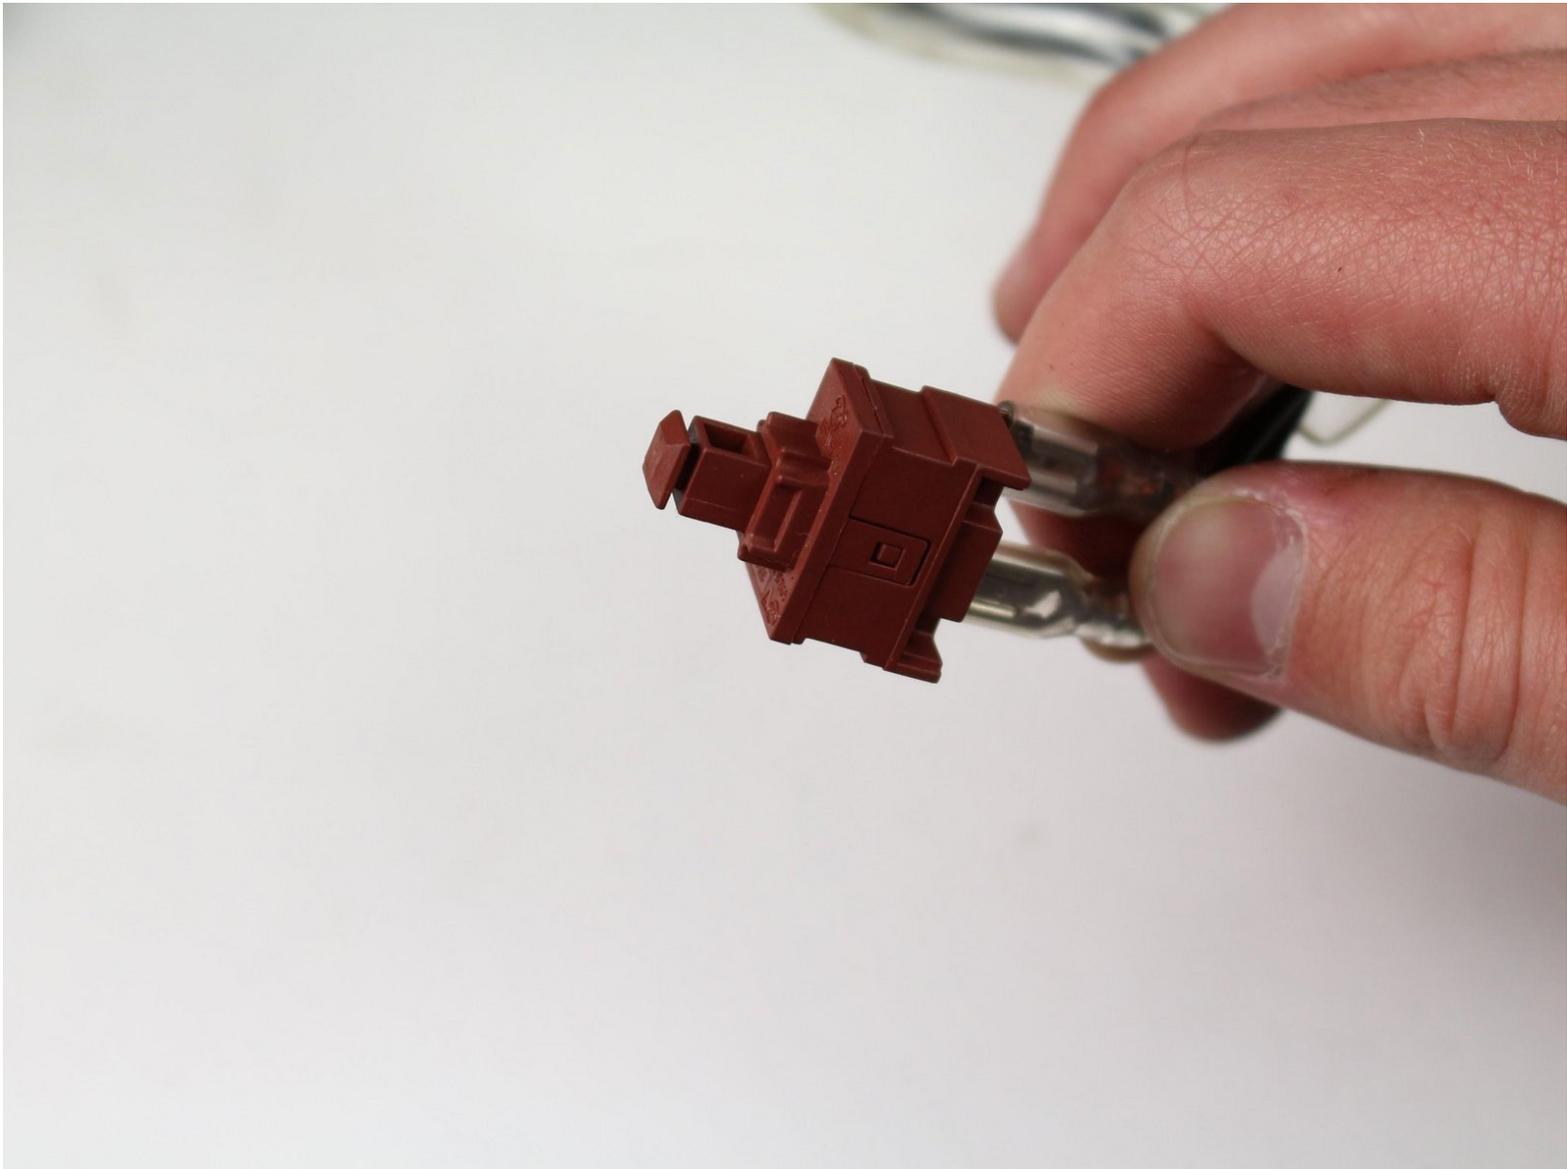


INTRODUCTION

The power switch allows the Hoover Power Path Pro Advanced to turn on with the press of the power button. A defective power switch will not allow the user to control the on and off state of the device and needs to be replaced.

TOOLS:


- [Phillips #2 Screwdriver](#) (1)

Step 1 — Power Switch

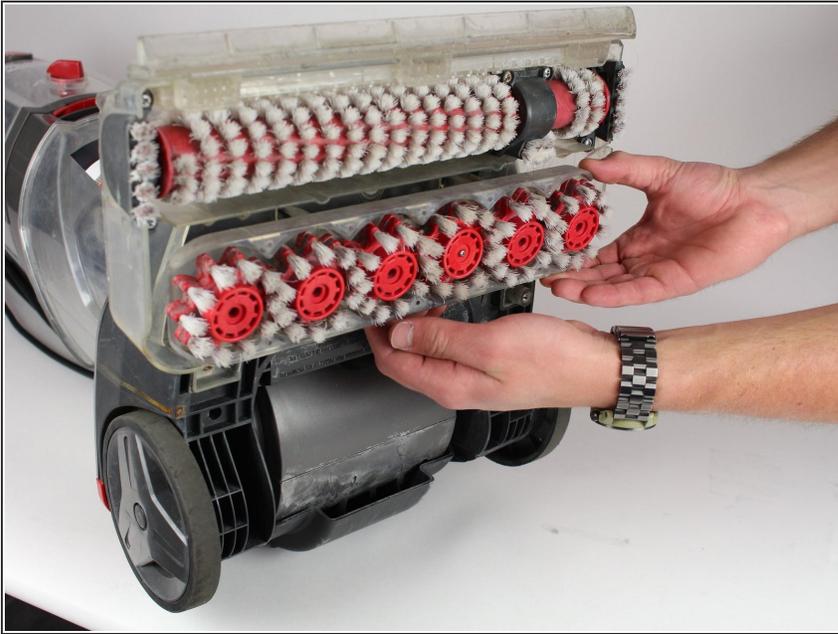

- Remove the lower brushroll from the bottom of the cleaner.

Step 2

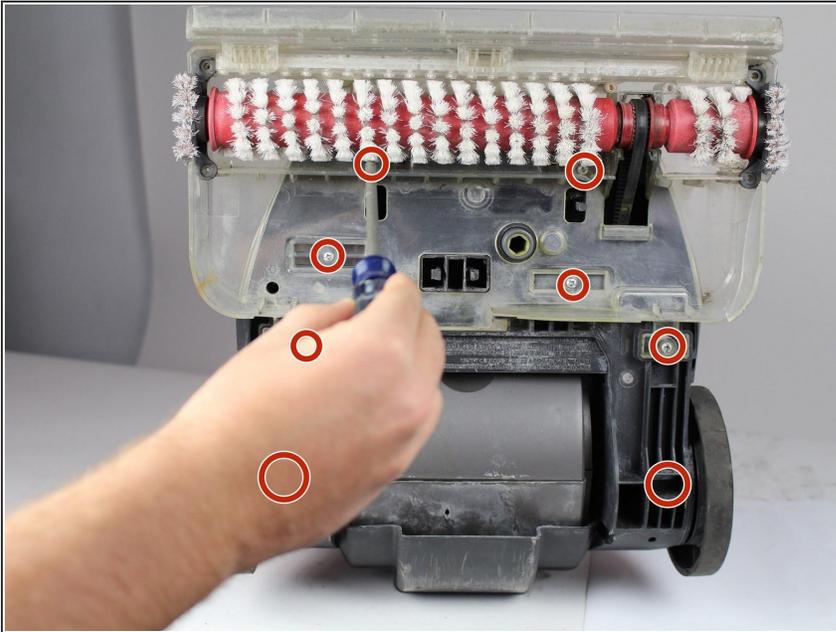

- Use a long #2 Philips head to remove the 8 numbered screws on the bottom of the cleaner (They will also be indicated on the bottom of the vacuum).

Step 3



- Pull the red handle to remove the front suction unit from the cleaner.

Step 4



- Unscrew the hose by using a Phillips #2 to detach it from the top cover of the cleaner.


Step 5



- Push down on the handle release button. Lift the edge of top cover connected to this button.
- Repeat the above step for the "On/Off" button.
- Pull entire top cover off.


 Caution: when pulling the handle release button, make sure the top of the cleaner does not fall.

Step 6

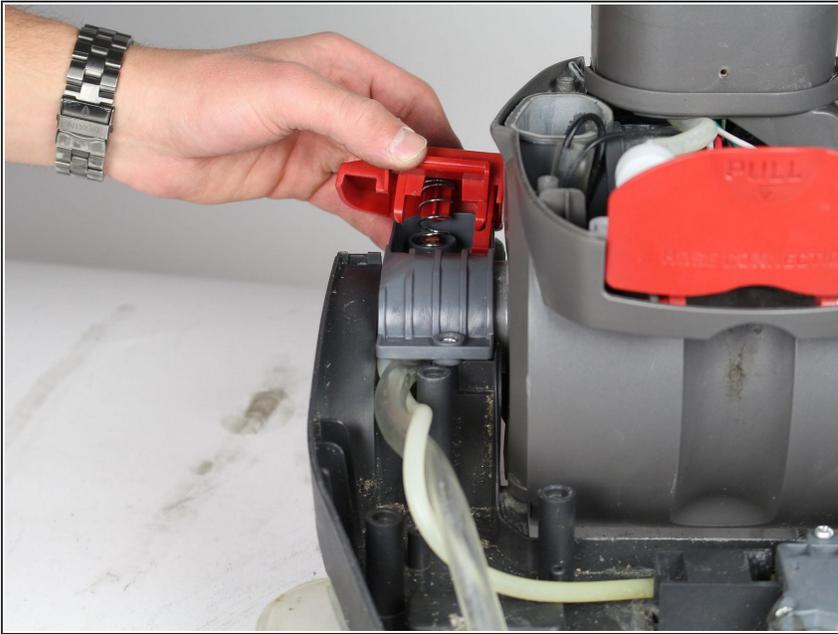


- Remove the "On/Off" cap by pulling it upwards with caution.

Step 7

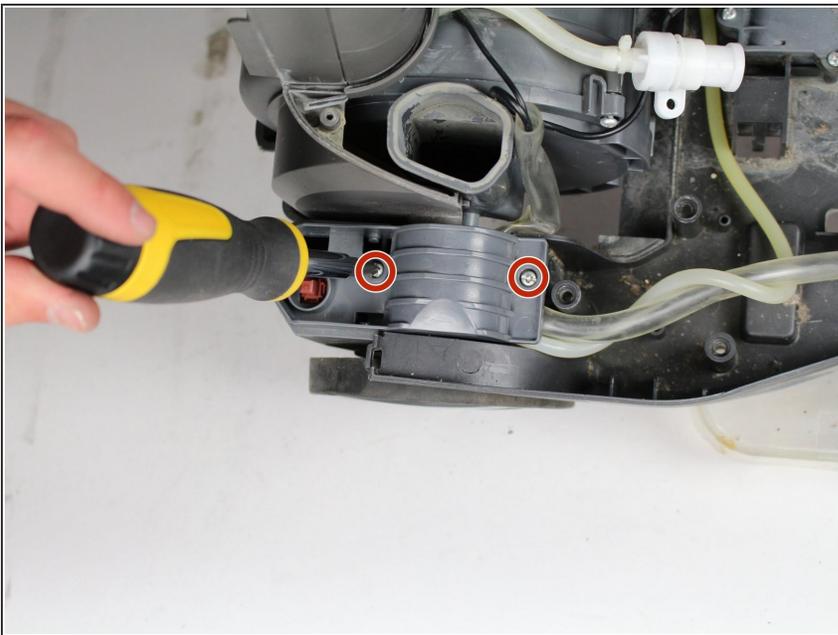

- Use a long #2 Philips head to remove the two screws from the arched grey piece.

Step 8

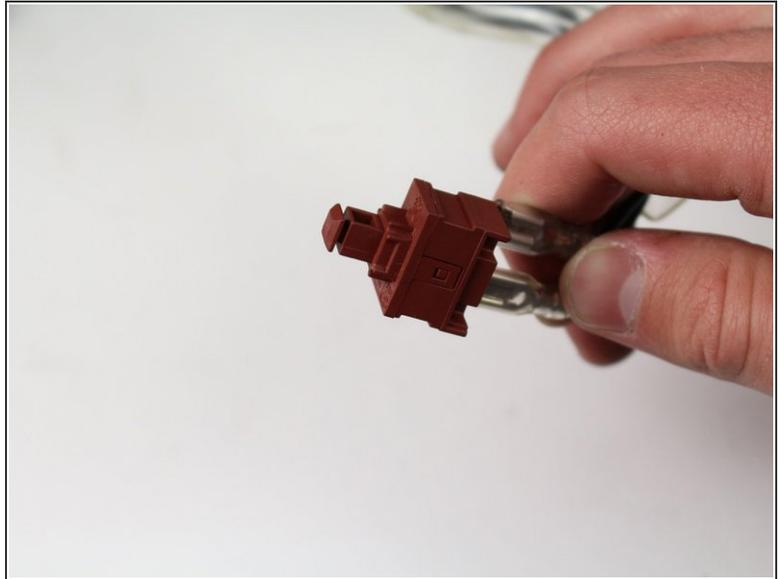

- Pull out the red power the red power switch.

To reassemble your device, follow these instructions in reverse order.