


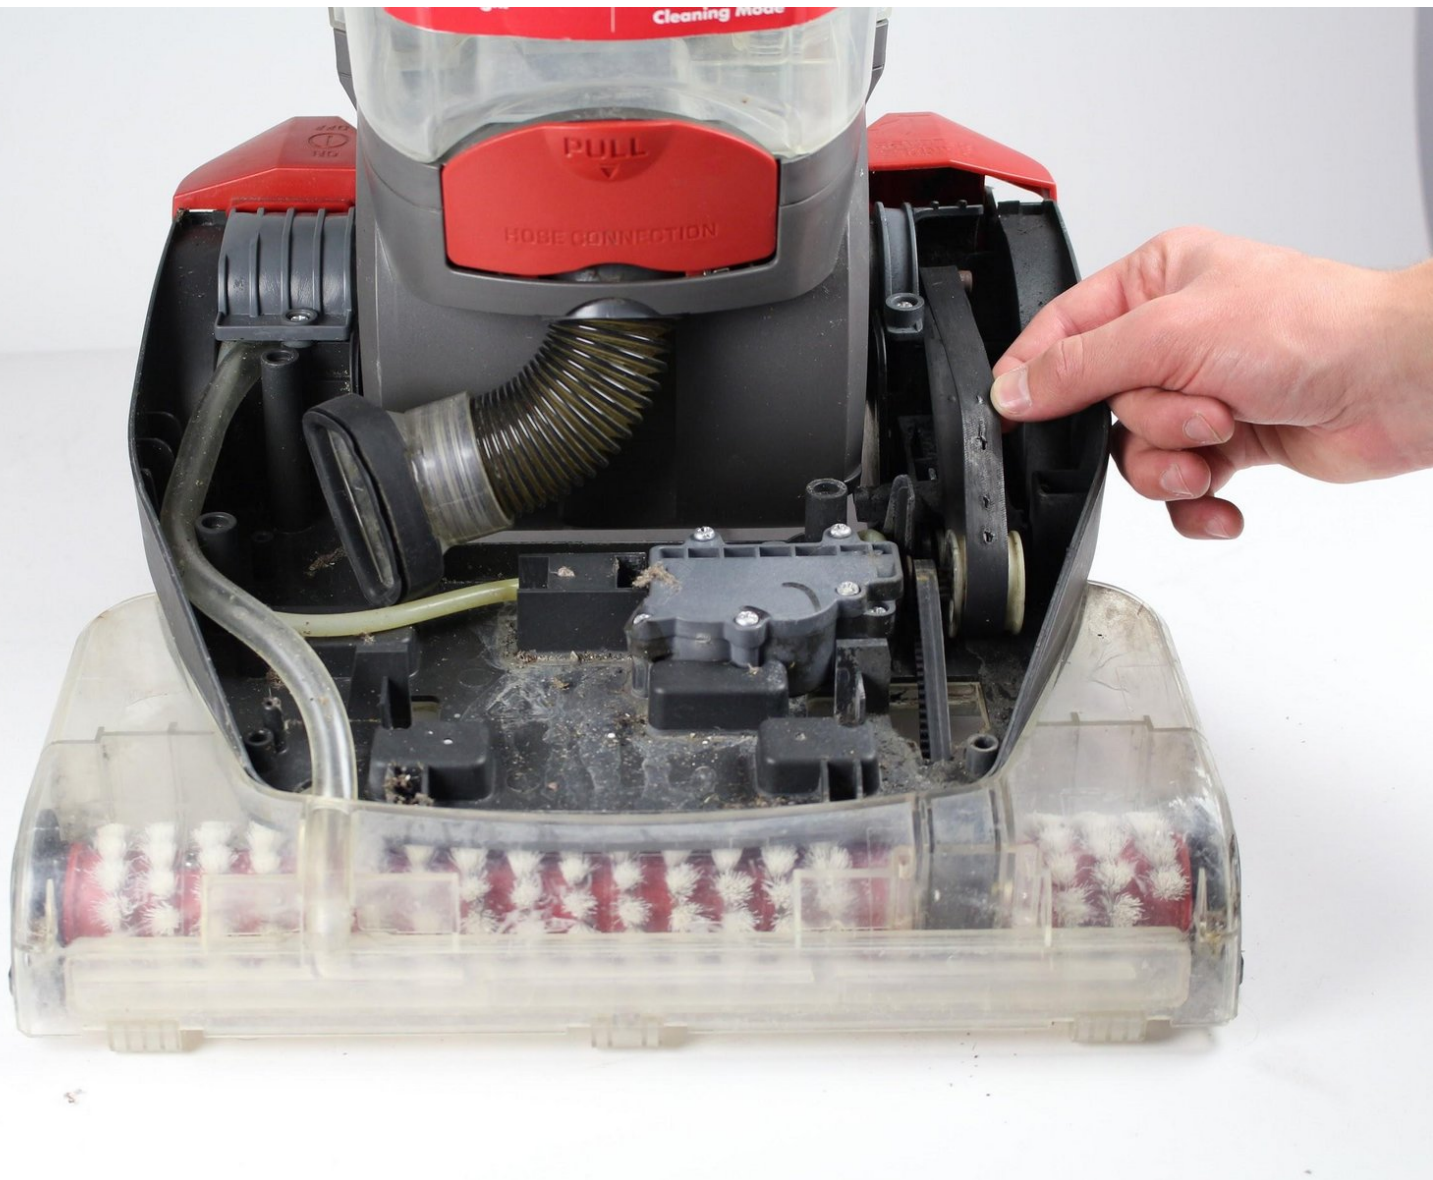

# Hoover Power Path Pro Advanced Belt Replacement

This guide will show how to replace the belt on your Hoover Power Path Pro Advanced.

Written By: Jose Andres Gonzalez Valdes



---

## INTRODUCTION

The belt on the Hoover Power Path Pro Advanced allows the brush rolls to spin while the power is on. If the brush rolls are not spinning, then it is likely that the brush rolls need to be replaced.

---




### TOOLS:

- [Phillips #2 Screwdriver](#) (1)
-



## Step 1 — Brush Roller



 Unplug the vacuum cleaner from the wall outlet before starting. Make sure the water tanks are empty.

- Lay the cleaner down horizontally with its wheels closest to the floor.


## Step 2

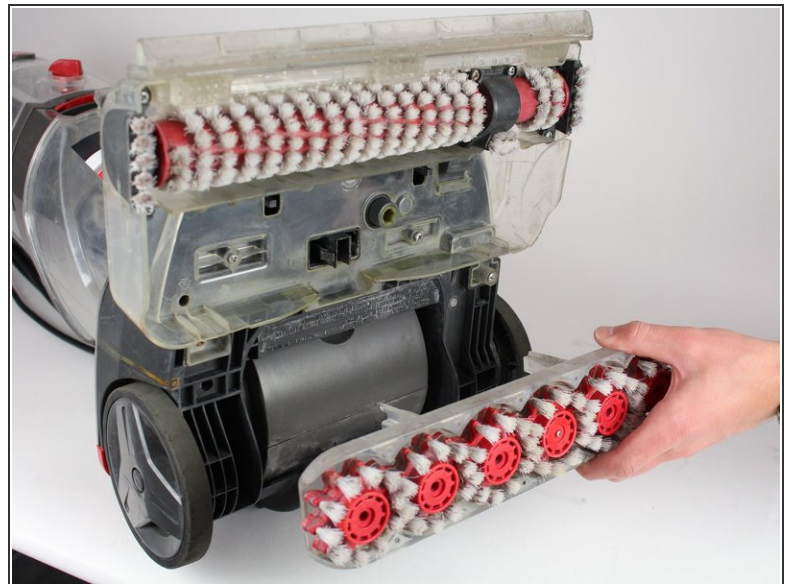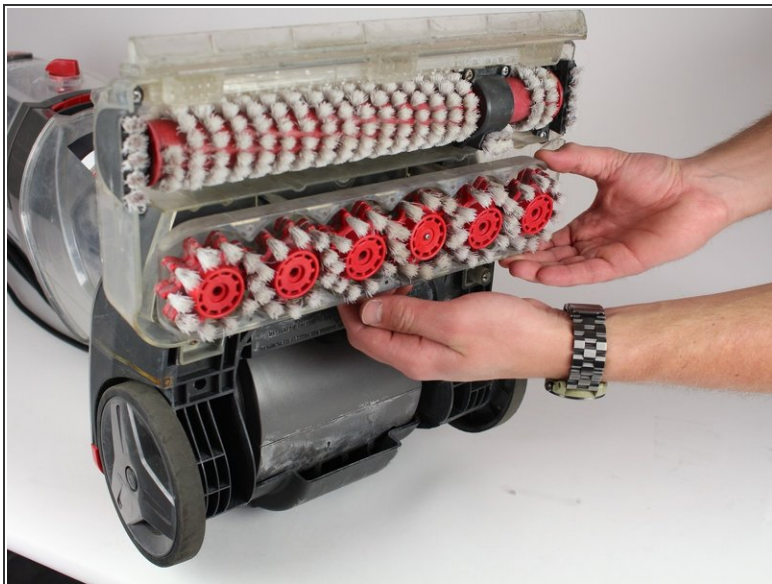

- Hold the lower brush roll with both hands and pull outwards until it is detached.




### Step 3

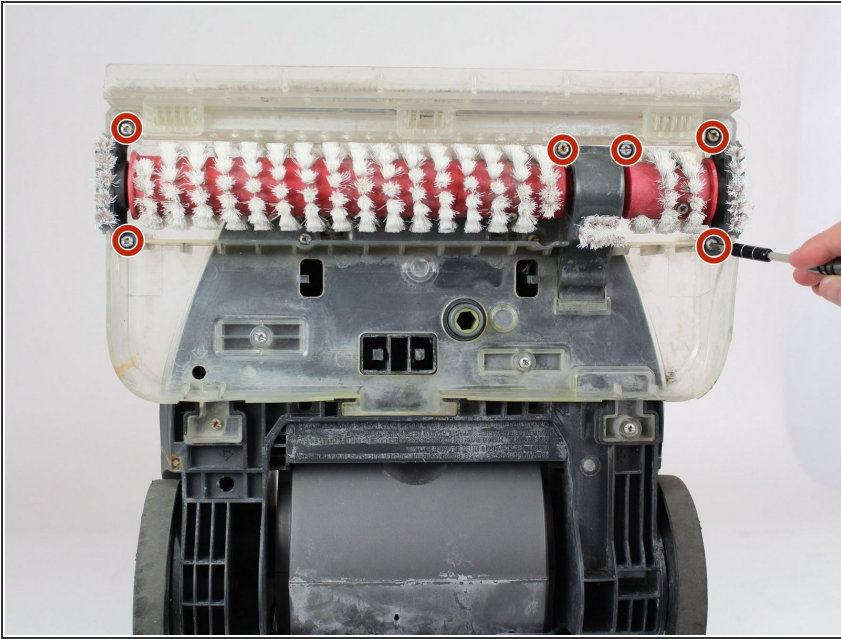

- Unscrew the 6 marked screws using a Phillips #2 head screwdriver.
- Remove the brush roller.

### Step 4 — Belt

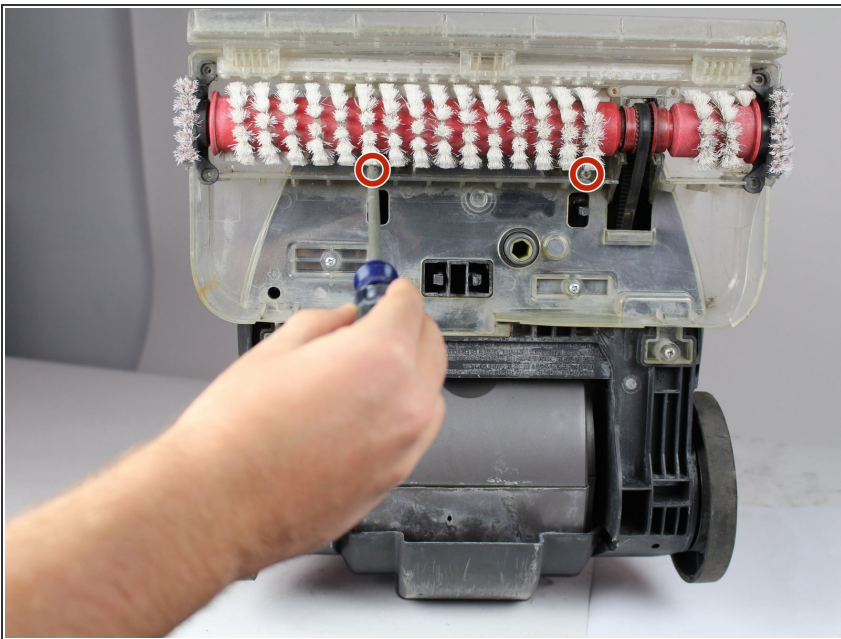

- Use a long #2 Philips head screwdriver to remove the 8 numbered screws on the bottom of the cleaner.

## Step 5



- Pull the red handle shown to remove the front suction unit from the cleaner.


## Step 6




- Unscrew the Phillips #2 screw at the bottom of the hose.




## Step 7

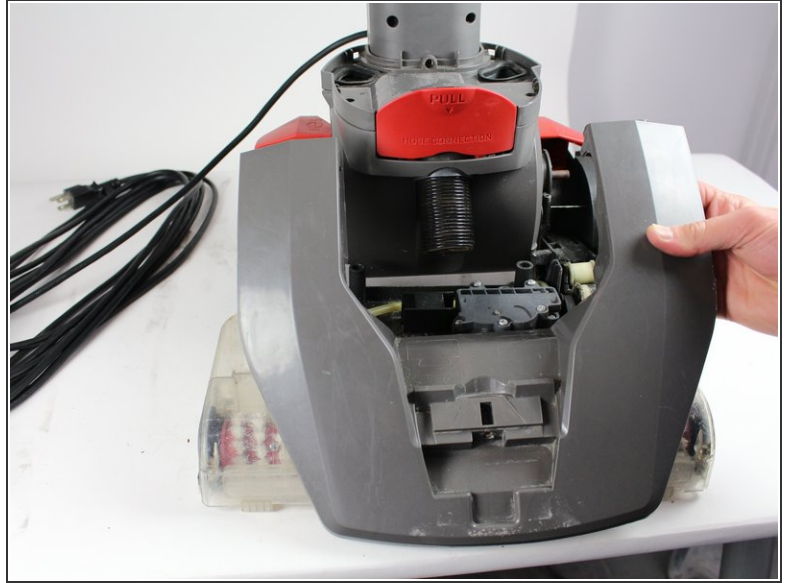

- Push down on the handle release button. Pull and disconnect the edge of the top cover on the side of the handle release button.
- Repeat the above step for the "On/Off" button.

 When pulling the handle release button, make sure the top of the cleaner does not fall.

## Step 8

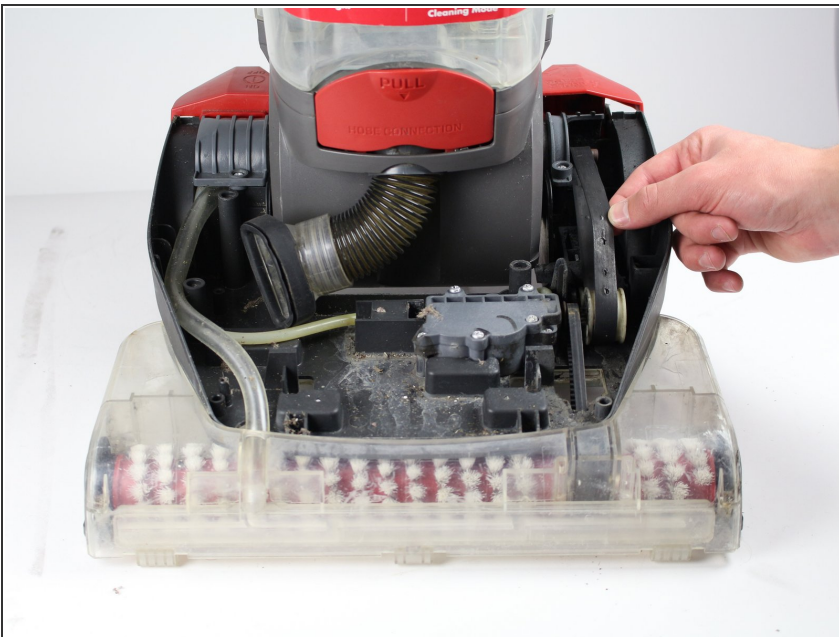

- Gently grab the belt and pry it off from the rollers.

To reassemble your device, follow these instructions in reverse order.