



# HP Officejet 4630 Power Supply Replacement

A common cause of boot failure is a faulty power supply. Replacing the power supply can fix this problem.

Written By: Maya Willis



---

## INTRODUCTION

This guide will show you how to replace the power supply in your HP Officejet 4630. The power supply is easy to replace and can be done with only a screwdriver.

---

### TOOLS:

- [T10 Torx Screwdriver](#) (1)
-

## Step 1 — Power Supply



- Lift the hood of the printer.

## Step 2




- Remove the two T10 11mm screws.

### Step 3



- Remove the panels covering the power brick and cord.

### Step 4

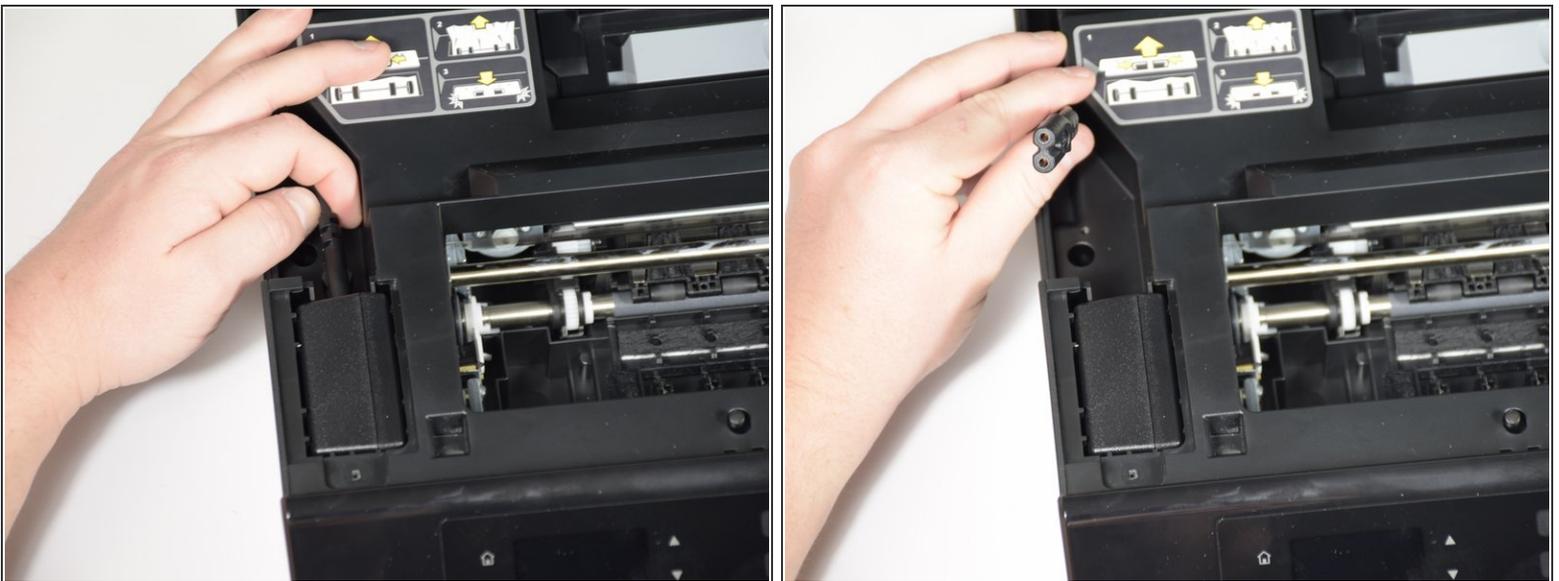

- Remove the cord from the power supply.

## Step 5



- Slide the power supply out from the chassis.
- ⓘ The power supply is still attached; don't pull too quickly.

## Step 6



- Remove final cable from power supply.

To reassemble your device, follow these instructions in reverse order.