



# Insignia 6-Quart Pressure Cooker Rubber Gasket Replacement

Replace the rubber gasket.

Written By: Savannah Webb



## INTRODUCTION

Rubber gaskets may wear out over time, preventing the lid from closing/opening properly. This guide will show you how to replace the rubber gasket.

## Step 1 — Rubber Gasket



- Remove lid and place upside down on a flat surface.

## Step 2



- Grab the edge of the clear rubber gasket and slowly peel it off the lid.
- Continue peeling off the gasket until it is completely detached from the lid.

To reassemble your device, follow these instructions in reverse order.