

Dell Alienware 13 R2 Display Hinges Replacement

In this guide, we will show you how to remove and replace the display hinges.

Written By: Terrence15



This document was generated on 2021-01-26 01:30:55 PM (MST).

INTRODUCTION


In this guide, we will show you how to remove and replace the display hinges.



F TOOLS:


Pro Tech Toolkit (1)

Step 1 — Turning Over the PC

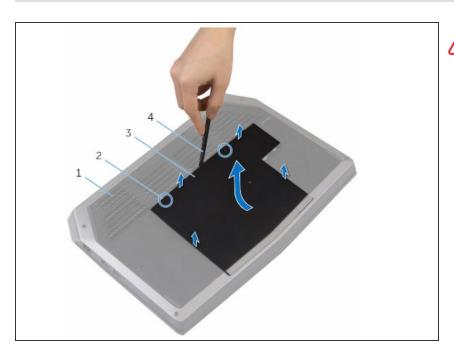


- WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before Working Inside Your
 Computer
 After Working Inside Your Computer For more safety best practices, see the regulatory compliance home page.
 - Close the display and turn the computer over.

Step 2 — Loosen the screws

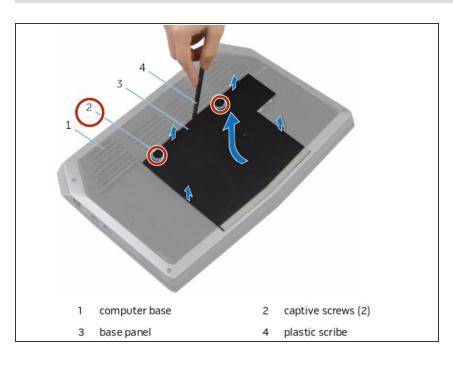

 Loosen the captive screws that secure the base panel to the computer base.


Step 3 — Releasing the Tabs

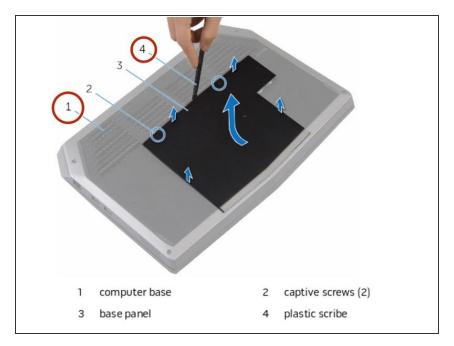

 Using a plastic scribe, gently release the tabs that secure the base panel to the computer base.


Step 4 — Disconnecting the Battery Cable



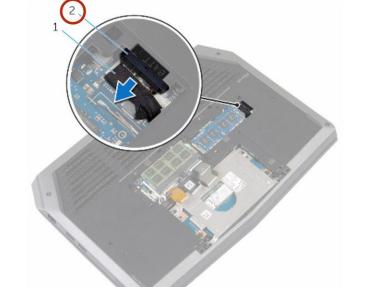


- Disconnect the battery cable from the battery-cable connector.
- Turn the computer over.

Step 5 — Power Button

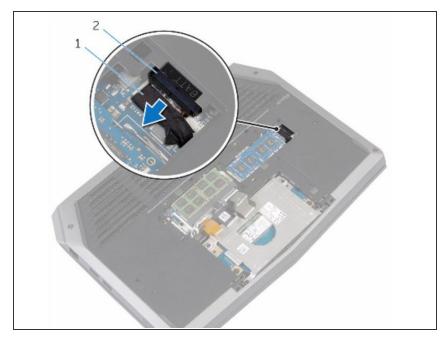


 Press and hold the power button for 5 seconds to ground the system board.

Step 6 — Connect the Battery Cable

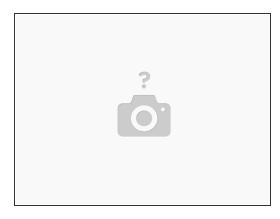


• Connect the battery cable to the battery-cable connector.

Step 7 — Aligning the tabs

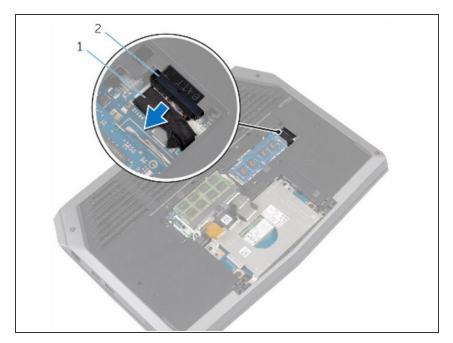


 Align the tabs on the base panel with the slots on the computer base and snap the base panel into place.


Step 8 — Tighten the screws

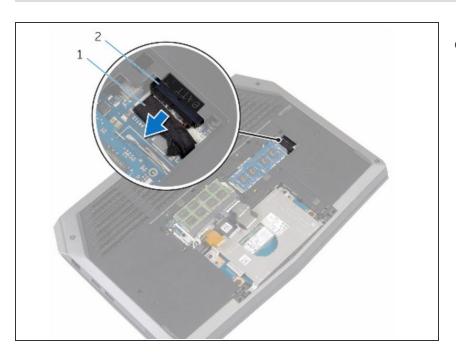

 Tighten the captive screws that secure the base panel to the computer base.


Step 9 — Removing the Screws

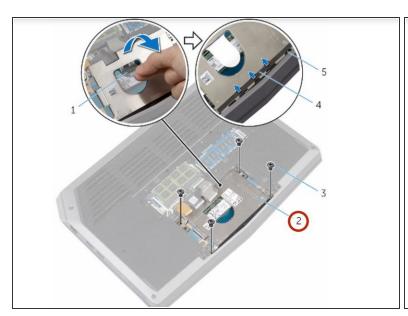


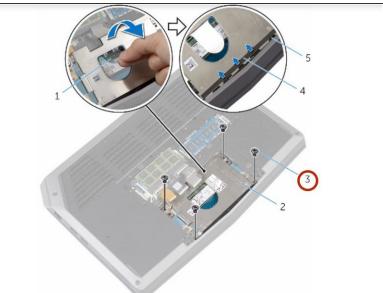

- MARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before Working Inside Your Computer</u>. After working inside your computer, follow the instructions in <u>After Working Inside Your Computer</u>.
 - Remove the screws that secure the solid-state drive bracket to the solid-state drive assembly.


Step 10 — Peel off Computer Base Tabs

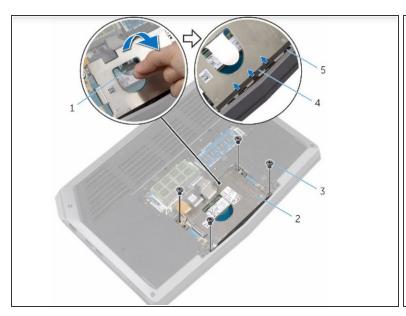

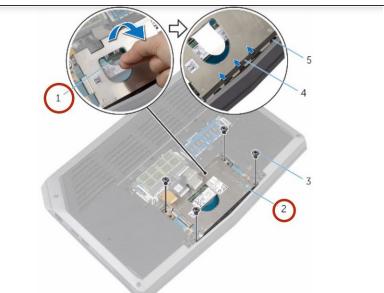


 Using the pull tab, pivot the solid-state drive bracket and peel off the bracket from the tabs on the computer base.


Step 11 — Disconnecting the Solid-State Drive Cable

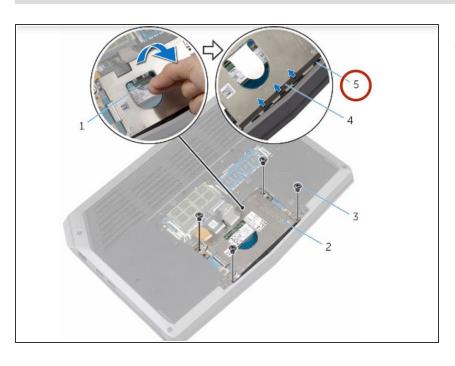

 Using the pull tab, disconnect the solid-state drive cable from the system board.


Step 12 — Removing the Solid-State Drive

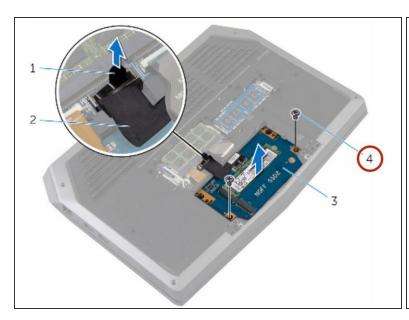

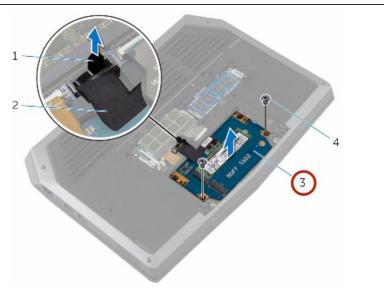


Remove the screws that secure the solid-state drive assembly to the computer base.

Step 13 — Lifting the Solid-State Assembly

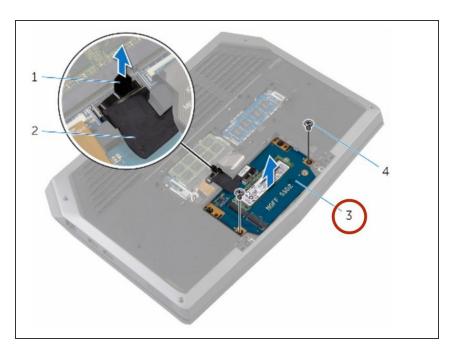


 Lift the solid-state drive assembly off the computer base.

Step 14 — Remove the Screw

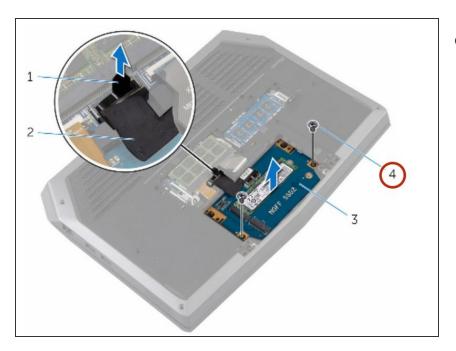


 Remove the screw that secures the solid-state drive to the solid-state drive assembly.

Step 15 — Lift the Solid-State Assembly.

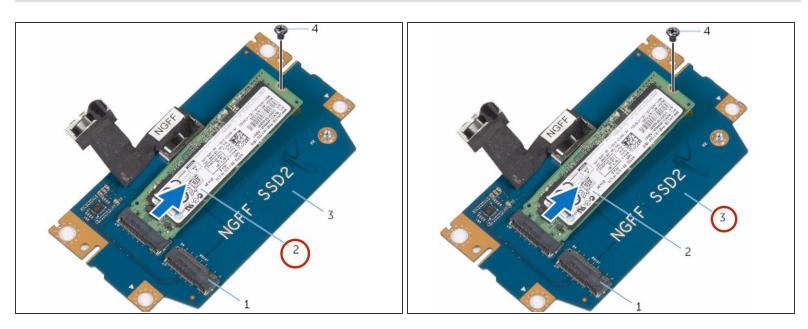


Slide and lift the solid-state drive off the solid-state drive assembly.


Step 16 — The New Solid-State Drive

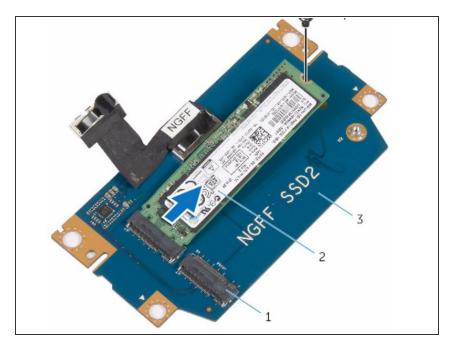

 Slide the **NEW** solid-state drive into the slot on the solid-state drive assembly.


Step 17 — Screw Replacement

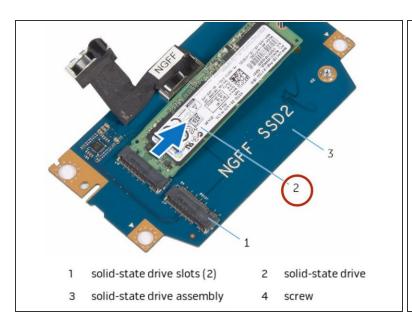


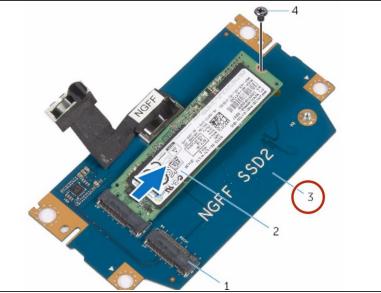

Replace the screw that secures the solid-state drive to the solid-state drive assembly.


Step 18 — Align the Screws

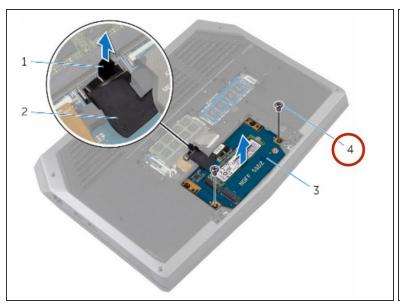

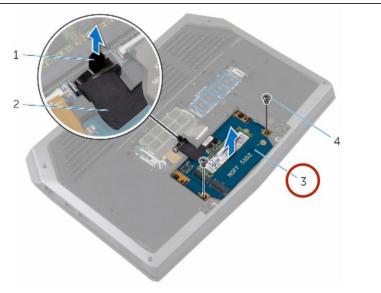

 Align the screw holes on the solid-state drive assembly with the screw holes on the computer base.

Step 19 — Replace the Screws

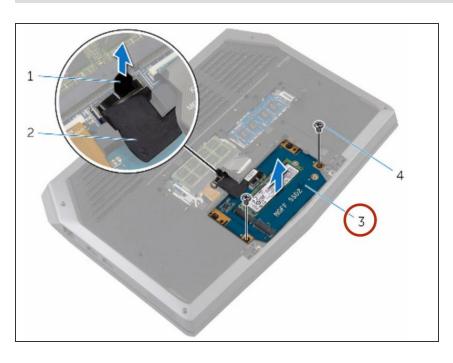


 Replace the screws that secure the solid-state drive assembly to the computer base.

Step 20 — Connect the Cable to the System Board




 Connect the solid-state drive cable to the system board.


Step 21 — Align the Screw Holes

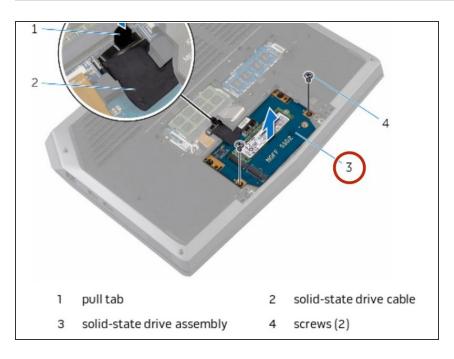

 Align the screw holes on the solidstate drive bracket with the screw holes on the solid-state drive assembly.


Step 22 — Replace the Screws

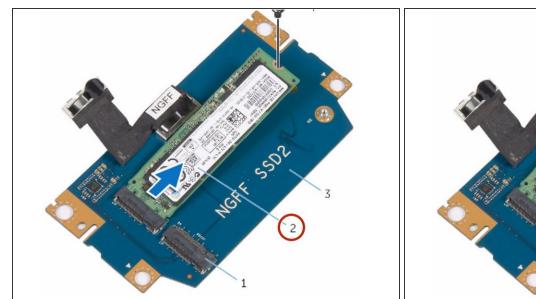

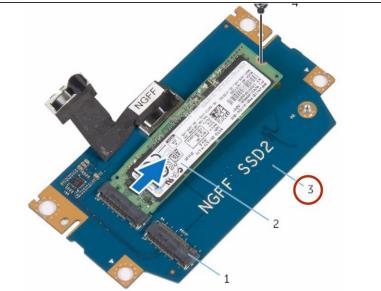


Replace the screws that secure the solid-state drive bracket to the solid-state drive assembly.

Step 23 — Lifting the Latches

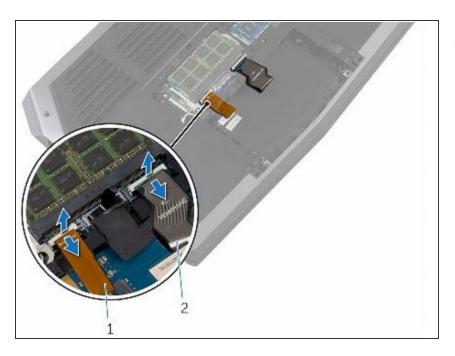


 Lift the latches and disconnect the keyboard and keyboard-backlight cables from the system board.

Step 24 — Remove the Screws

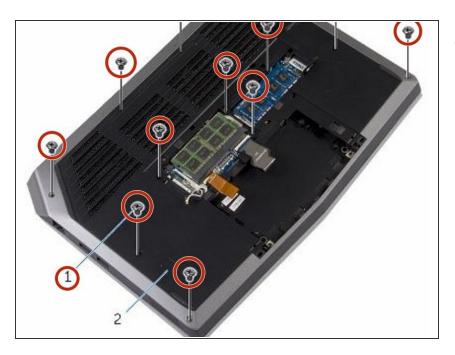


 Remove the screws that secure the palm-rest assembly to the computer base.

Step 25 — Lift the Computer Base

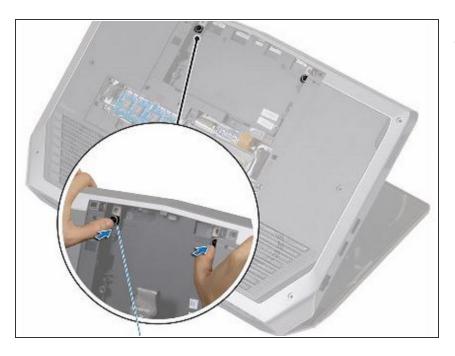

 Lift the computer base slightly and push the release tabs on the palmrest assembly until it pops out.

Step 26 — Turning the Computer Over

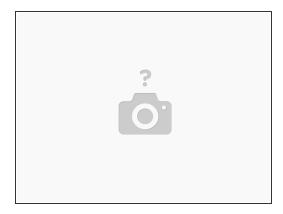

• Turn the computer over and open the display as far as possible.

Step 27 — Prying the Palm-Rest Assembly




 Using a plastic scribe, pry up along the edges of the palm-rest assembly.

Step 28 — Lift the Palm-Rest Assembly




 Gently lift the palm-rest assembly and turn it over.

Step 29 — Lift the Connector Latch

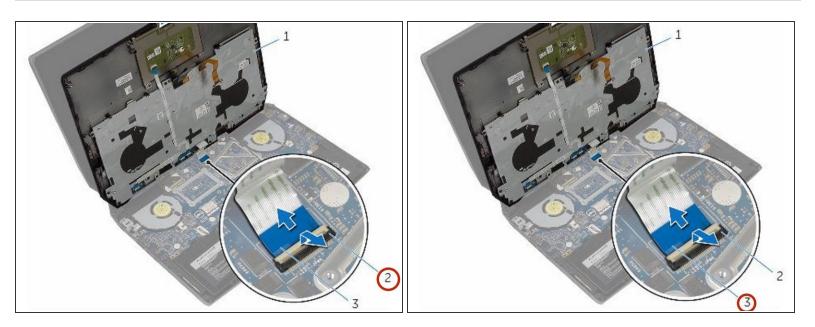


• Lift the connector latch and disconnect the power-button board cable from the system board.

Step 30 — Lift the Palm-Rest Assembly

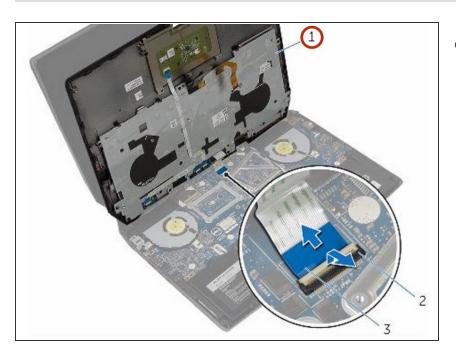


 Lift the palm-rest assembly off the computer base.

Step 31 — Removing

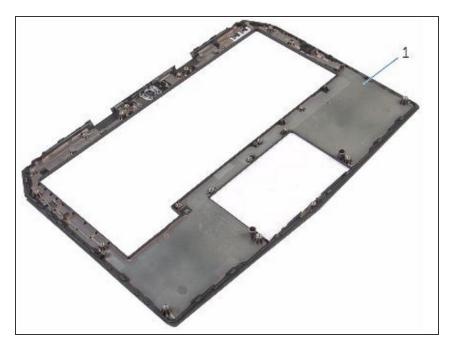


- Remove the keyboard.
- Remove the power-button board.
- Remove the status-light board.
- Remove the Touchpad.

Step 32 — Replacement

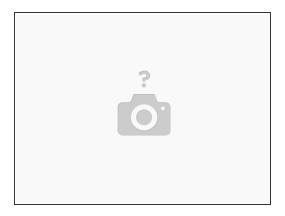


- Replace the touchpad.
- Replace the status-light board.
- Replace the power-button board.
- Replace the keyboard.

Step 33 — Connecting the Power-Button Board Cable

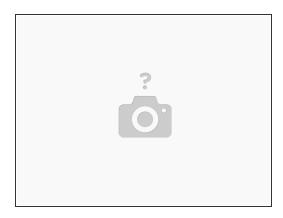


• Connect the power-button board cable to the system board.

Step 34 — Align the Palm-Rest Assembly

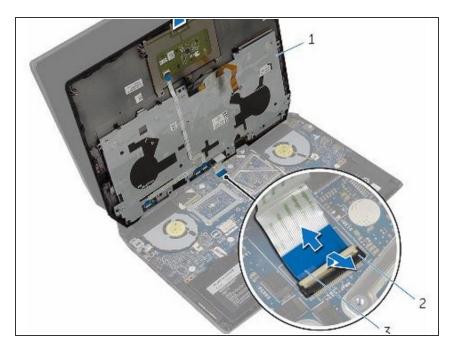


 Align the palm-rest assembly on the computer base and snap it into place.

Step 35 — Close the Display

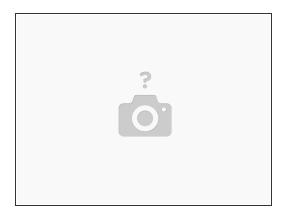


Close the display and turn the computer over.

Step 36 — Replace the Screws

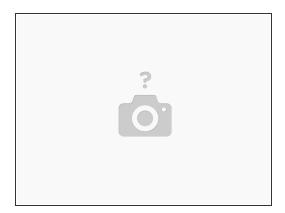


Replace the screws that secure the palm-rest assembly to the computer base.

Step 37 — Connect the Keyboard Cable

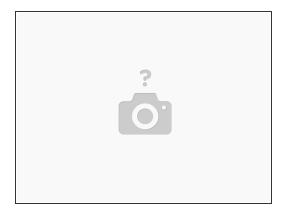


Connect the keyboard cable and the keyboard-backlight cable to the system board.

Step 38 — Open the Display

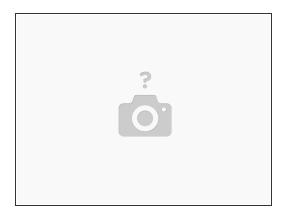

- MARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before Working Inside Your Computer. After working inside your computer, follow the instructions in Before Working Inside Your Computer.
- Open the display as far as possible.

Step 39 — Remove the Screws

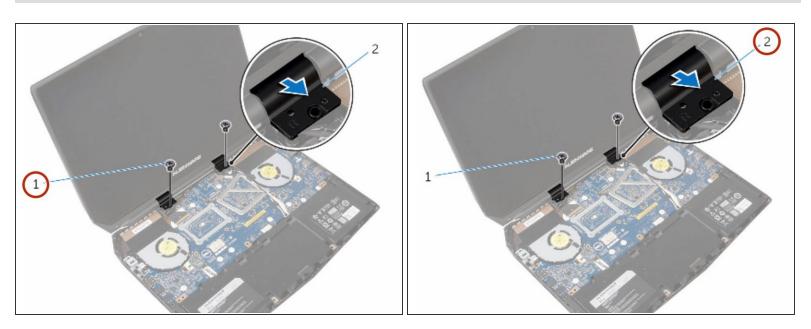


Remove the screws that secure the hinge caps to the display hinges.

Step 40 — Lifting the Hinge Caps




 Slide and lift the hinge caps off the display hinges.

Step 41 — Close the Display

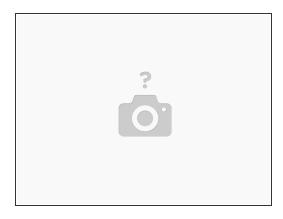


Close the display and turn the computer over.

Step 42 — Remove the Screw

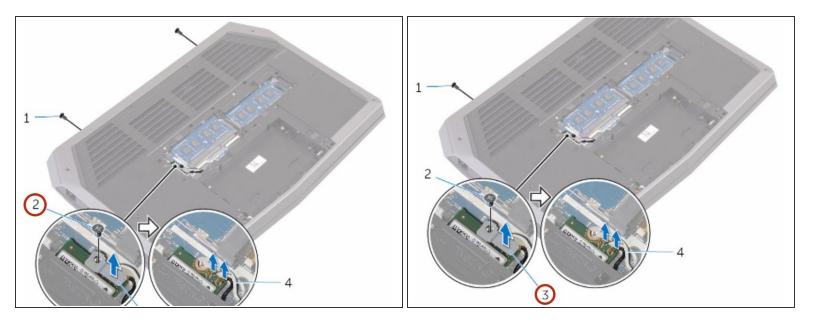


Remove the screw that secures the wireless-card bracket to the wireless card.

Step 43 — **Disconnect the Antenna Cables**

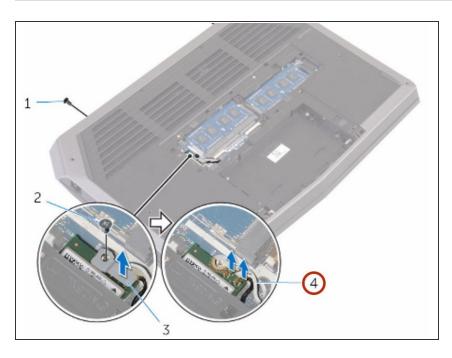


 Disconnect the antenna cables from the wireless card.

Step 44 — Turn the Computer Over

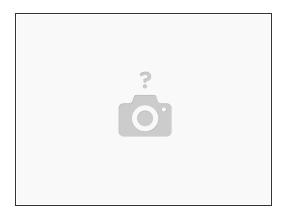


Turn the computer over and open the display.

Step 45 — Remove the Antenna Cables

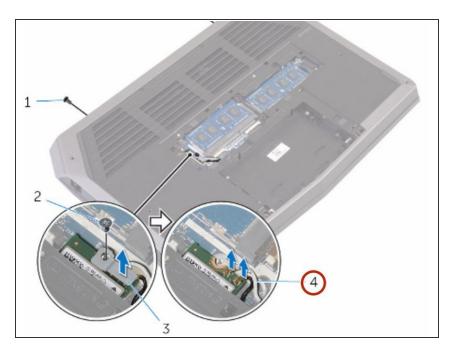


 Remove the antenna cables from the routing guides on the display hinges.

Step 46 — **Disconnect the Display Cable**

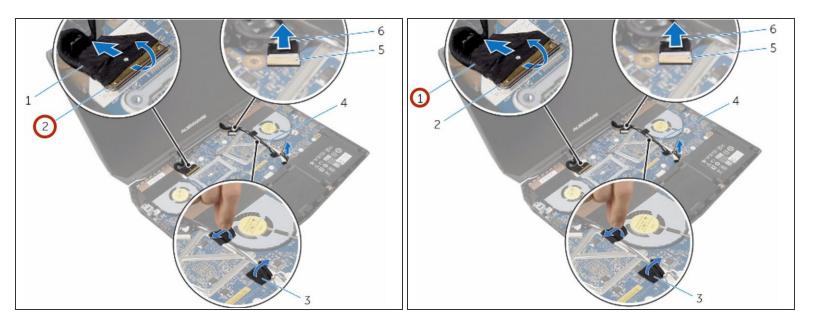


Lift the connector latch and disconnect the display cable from the system board.

Step 47 — Remove the Display Cable

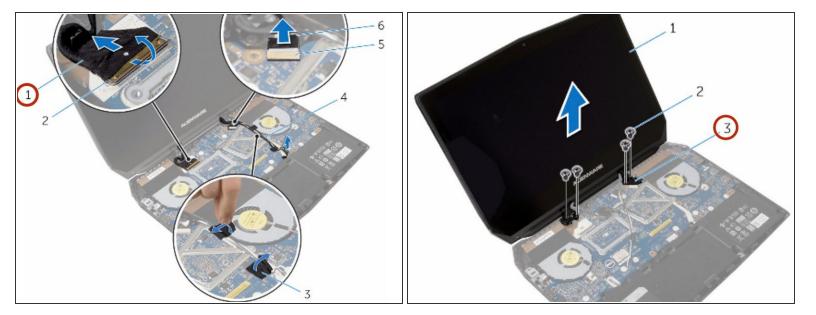


Remove the display cable from the routing guides on the display hinges.

Step 48 — **Disconnect the Logo-Board Cable**

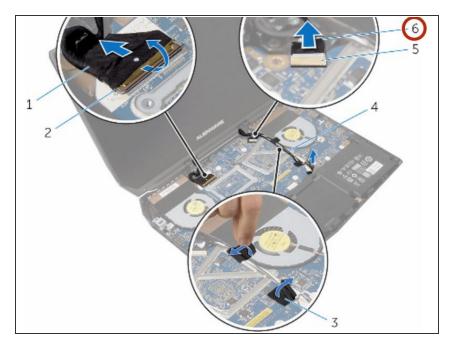


 Disconnect the logo-board cable from the system board and remove it from the routing guides on the display hinges.

Step 49 — Remove the Screws

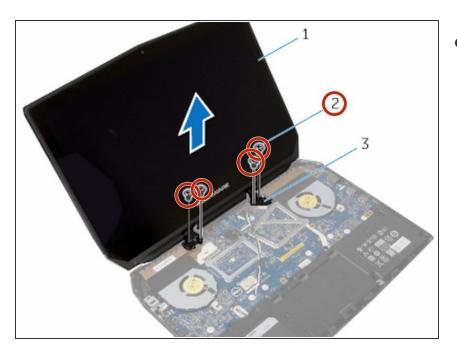


 Remove the screws that secure the display assembly to the computer base.

Step 50 — Lifting the Display Assembly

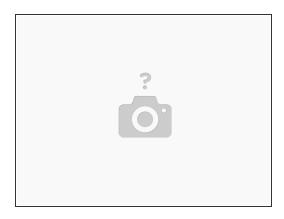


Lift the display assembly off the computer base.

Step 51 — Align the Screw Holes

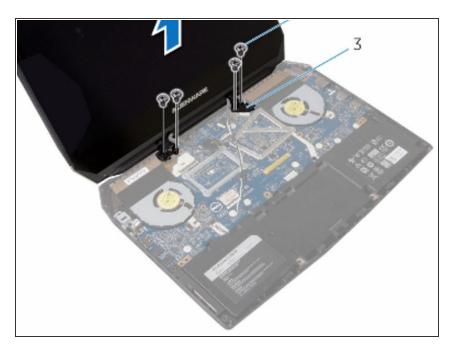


 Align the screw holes on the display hinges with the screw holes on the computer base.

Step 52 — Replace the Screws

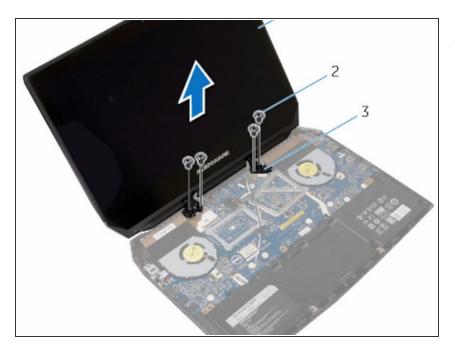


 Replace the screws that secure the display hinges to the computer base.

Step 53 — Routing the Logo-Board Cable

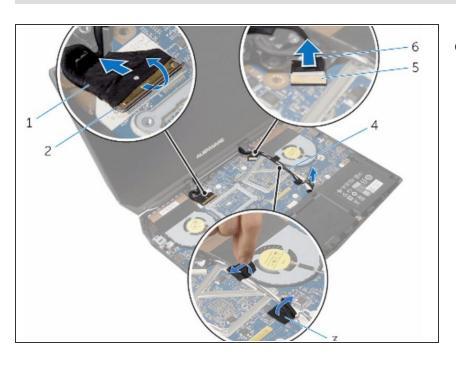


 Route the logo-board cable through the routing guides on the display hinge and connect the logo-board cable to the system board.

Step 54 — Route the Cable

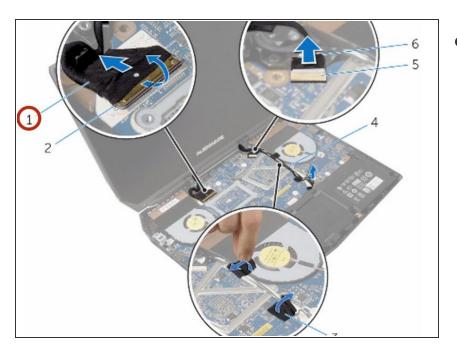


 Route the display cable through the routing guides on the display hinge.

Step 55 — Slide the Display Cable

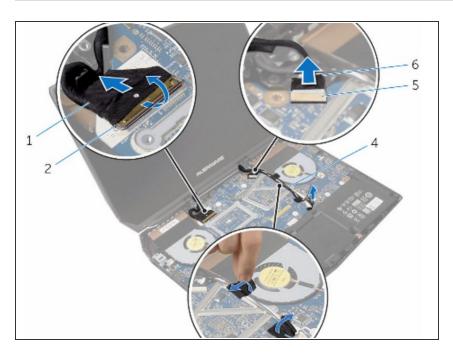


 Slide the display cable into the connector on the system board and press down the latch to secure the cable.

Step 56 — Route the Antenna Cables

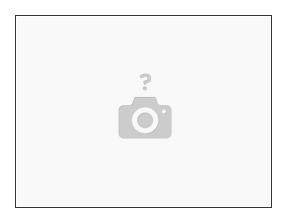


Route the antenna cables through the routing guides on the display hinges.

Step 57 — Adhere the Adhesive Tapes

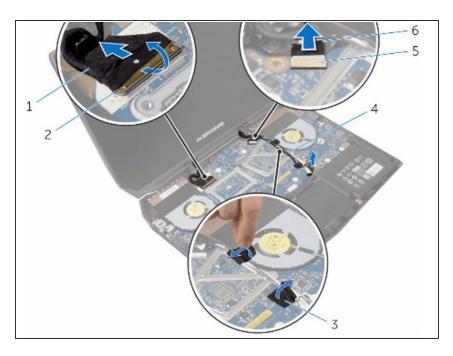


 Adhere the adhesive tapes that secure the antenna cables to the system board.

Step 58 — Close the Display

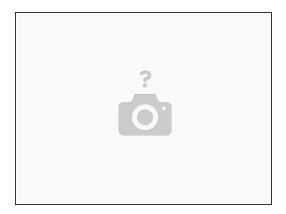


Close the display and turn the computer over.

Step 59 — Connect the Antenna Cables

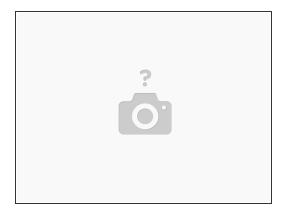


Connect the antenna cables to the wireless card.

Step 60 — Replace the Screw

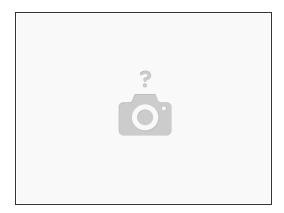


Replace the screw that secures the wireless-card bracket to the wireless card.

Step 61 — Open the Display

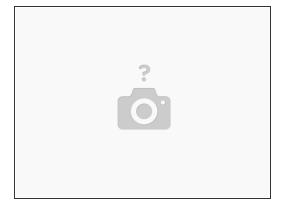


Turn the computer over and open the display.

Step 62 — Align the Screw Holes

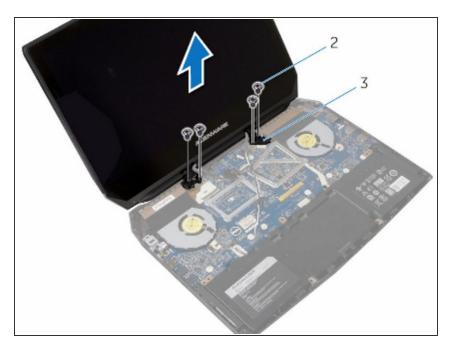

 Align the screw holes on the hinge caps with the screw holes on the display hinges.

Step 63 — Replace the Screws

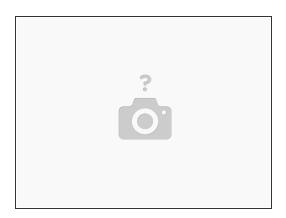


Replace the screws that secure the hinge caps to the display hinges.

Step 64 — Prying the Edges




- warning: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before Working Inside Your Computer. After working inside your computer, follow the instructions in After Working Inside Your Computer.
- Using your fingertips, carefully pry up the inside edges of the display bezel.

Step 65 — Turn it Over

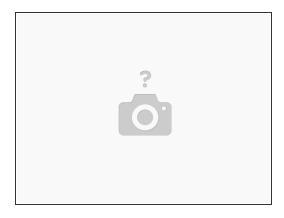


Carefully lift the display bezel and turn it over.

Step 66 — Lifting the Latches

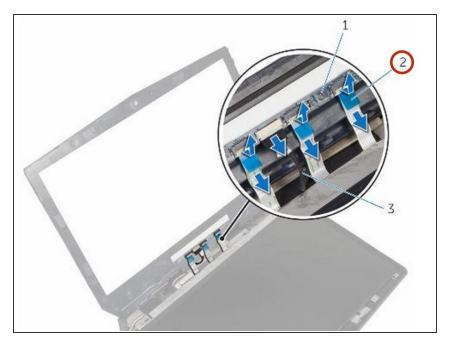


 Lift the connector latches and disconnect the display-board cables from the logo board.

Step 67 — Disconnect the Logo-Board Cable

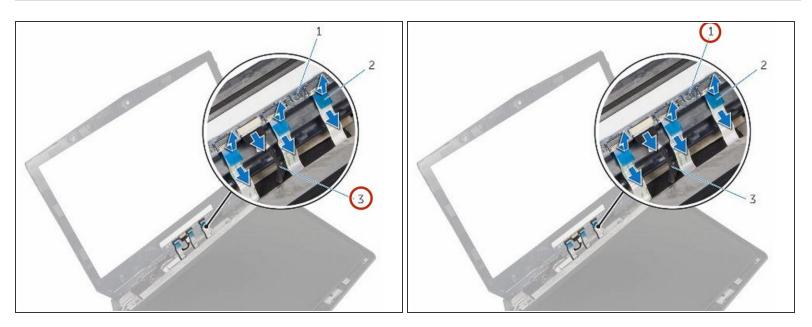

Disconnect the logo-board cable from the logo board.

Step 68 — Connect the Logo Board Cable

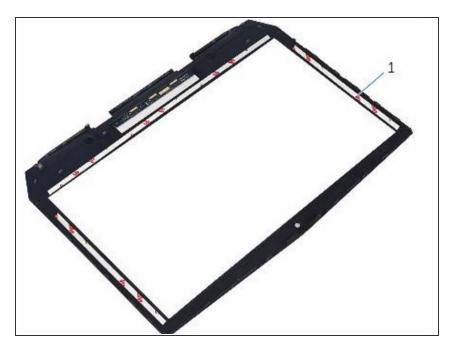


 Connect the logo-board cable to the logo board.

Step 69 — Slide the Display-Board Cables



 Slide the display-board cables to their respective connectors on the logo board and press down the latches to secure the cables.

Step 70 — Turn the Display Bezel Over

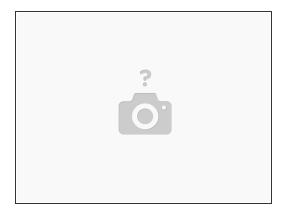


Turn the display bezel over.

Step 71 — Align the Bezel




 Align the display bezel with the display back-cover and gently snap the display bezel into place.

Step 72 — Remove the Screws

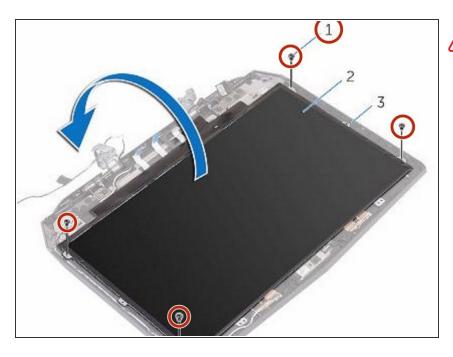


- WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before Working Inside Your Computer. After working inside your computer, follow the instructions in After Working Inside Your Computer.
- Remove the screws that secure the display panel to the display backcover.

Step 73 — Lift the Display Panel

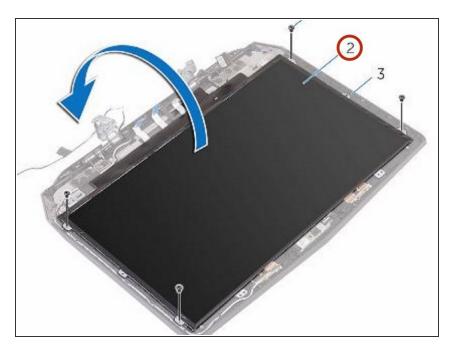


 Gently lift the display panel and turn it over.

Step 74 — **Disconnecting the Display Cable**

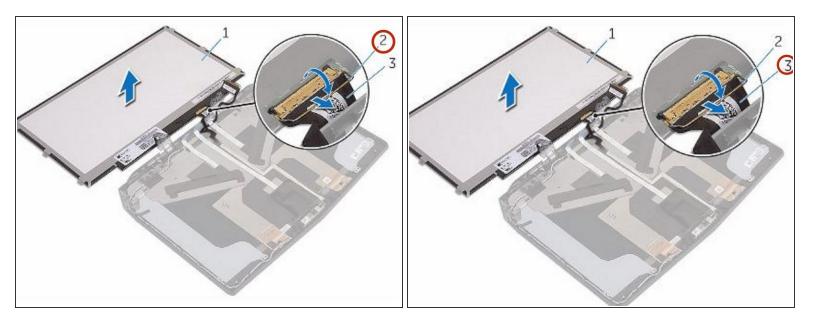


Lift the connector latch and disconnect the display cable from the display panel.

Step 75 — Connect the Display Cable

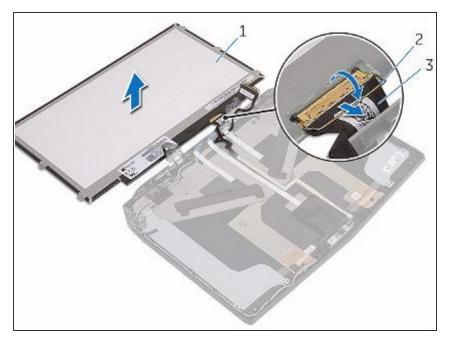


 Connect the **NEW** display cable to the display panel and press down on the connector latch to secure the cable.

Step 76 — Turn the Display Panel Over

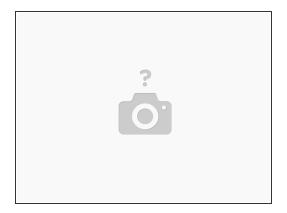


Turn the display panel over.

Step 77 — Gently Lift the Display Panel

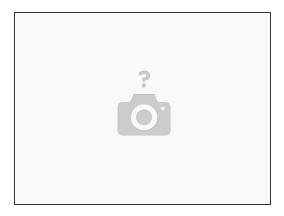


Gently lift the display panel and turn it over.

Step 78 — Lifting the Latch

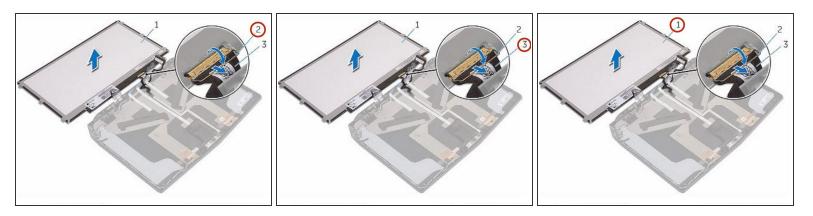


Lift the connector latch and disconnect the display cable from the display panel.

Step 79 — **Securing the Cable**

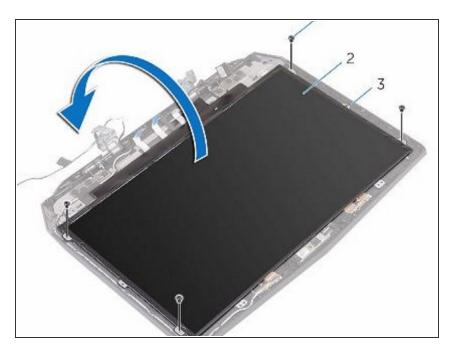


 Connect the **NEW** display cable to the display panel and press down on the connector latch to secure the cable.

Step 80 — Turn the Display Panel Over

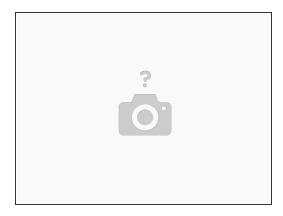


Turn the display panel over.

Step 81 — Align the Screw Holes

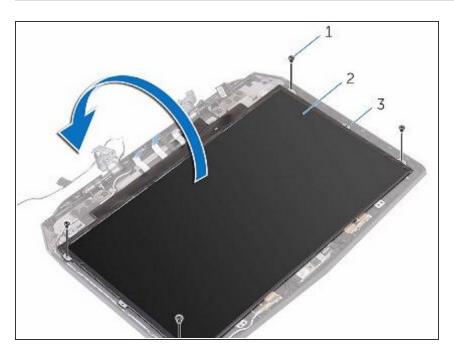


 Align the screw holes on the display panel with the screw holes on the display back-cover.

Step 82 — Replace the Screws

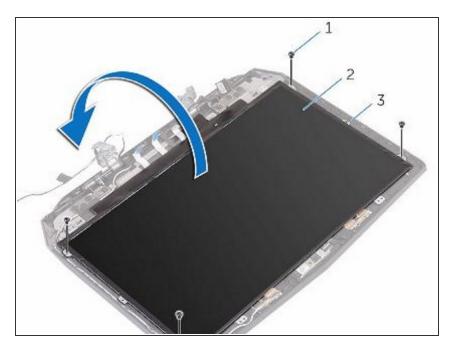


 Replace the screws that secure the display panel to the display backcover.

Step 83 — Remove the Screws

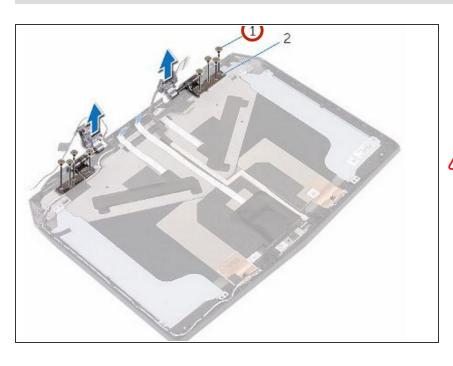


- WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before Working Inside Your Computer. After working inside your computer, follow the instructions in After Working Inside Your Computer.
- Remove the screws that secure the display hinges to the display backcover.

Step 84 — Lift the Display Hinges

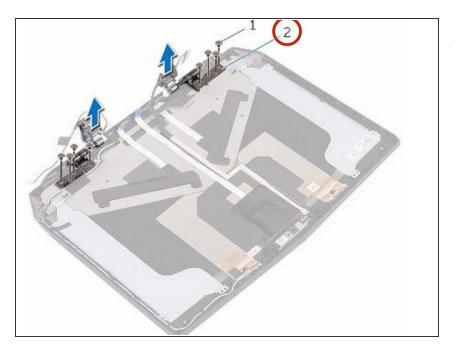


 Lift the display hinges off the display back-cover.

Step 85 — Align the Screw Holes

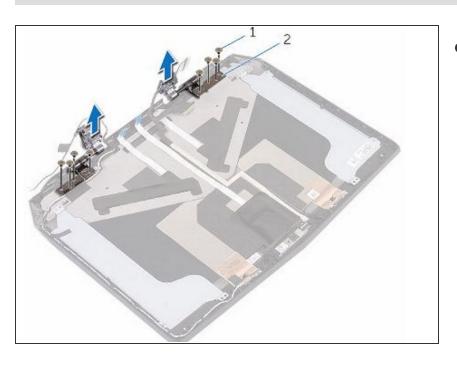

Align the screw holes on the NEW display hinges with the screw holes on the display back-cover.

Step 86 — Replace the Screws

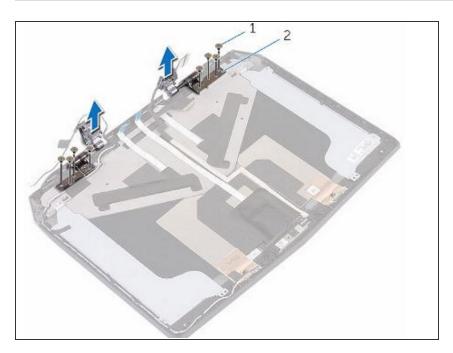

 Replace the screws that secure the display hinges to the display backcover.

To reassemble your device, follow these instructions in reverse order.