



# Logitech Extreme 3D Pro Disassembly of the base

This guide will show you how to safely take apart the base of the Logitech Extreme 3D Pro joystick.

Written By: Emanuel Canela



---

## INTRODUCTION

After extended use certain parts may require cleaning or replacement. This guide will assist you in safely disassembling the base portion of the joystick. This will require to have to handle already disassembled.

---

### TOOLS:

- [Phillips #1 Screwdriver](#) (1)

## Step 1 — Disassembly of the handle



- Remove these three Phillips #1 screws:
  - Two 10mm screws.
  - One 7mm screw.

## Step 2



- Using your fingers, lower the rubber boot to reveal two screws underneath the joystick.
- Remove the two 10mm Phillips #1 screws.

### Step 3



- Pull apart the joystick chassis by hand.
- Release this clip located underneath the hand rest
- ⓘ The circuit board will be loose and may fall down.

### Step 4 — Disassembly of the base



- Remove the eight 10mm Phillips #1 screws from the bottom.

## Step 5



- Flip the joystick upright.
  - Lift up the silver base cover and feed the loose circuit board through.
- ⚠ Careful with the wires still attached to the silver base cover from the bottom of the joystick.

To reassemble your device, follow these instructions in reverse order.