

Cuisinart DCC-1100 Drip Spring Replacement

Replacing the drip spring on your Cuisinart DCC-1100 filter holder.

Written By: Josh Harvey



INTRODUCTION

This replacement guide will help you get through all of the top pieces such as the filter element to get to the drip spring. It is possible for this spring to break causing issues with the drip function or rust possibly causing a strange taste.

Step 1 — Drip Spring



Unplug the coffee maker.

Step 2



 Remove the coffee pot and open the top lid.

Step 3





Remove the basket filter holder.

Step 4



 Remove the basket filter from the holder.

Step 5



 Press up on the drip spring mechanism.


Step 6





 While pressing up on the drip spring mechanism, remove the clear round plastic retainer holding the mechanism in place.

Step 7

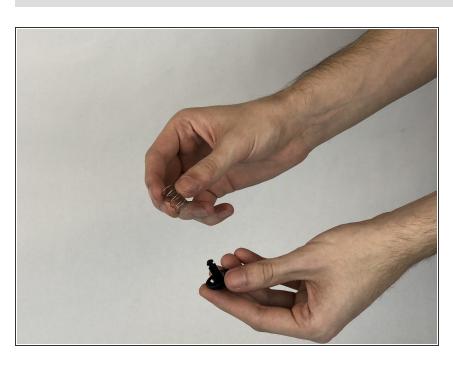

Remove the spring from the dripper.

To reassemble your device, follow these instructions in reverse order.