



# Dell Inspiron 15-3531 Keyboard Replacement

As laptop keyboards age, they may lose keys or...

Written By: Kody Dahlke



# INTRODUCTION

As laptop keyboards age, they may lose keys or stop responding to any interaction and may need to be replaced. Make sure the keyboard is not near any hazardous materials that could destroy the keyboard during the removal process.

## TOOLS:

6-in-1 Screwdriver (1)

Spudger (spatule antistatique) (1)



## Step 1 — Battery



 Remove the battery to avoid electrical discharge while working with this system.

- Flip the laptop over.
- Slide the latches toward the edges to unlock the battery.
- Lift the battery out of the laptop.


## Step 2 — Keyboard

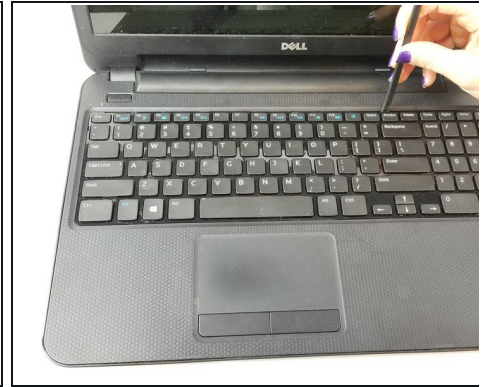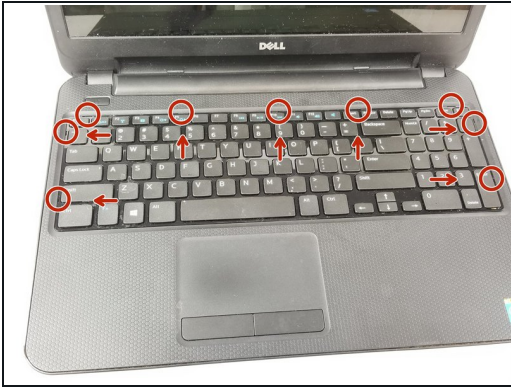

- Depress (push in, not down) the five tabs at the top of the keyboard and the two on each side of the keyboard with a flat head screwdriver.
- Pry the keyboard from the laptop using the spudger.

**⚠ Be careful when lifting it out because there is a cable connecting the keyboard to the laptop.**

## Step 3

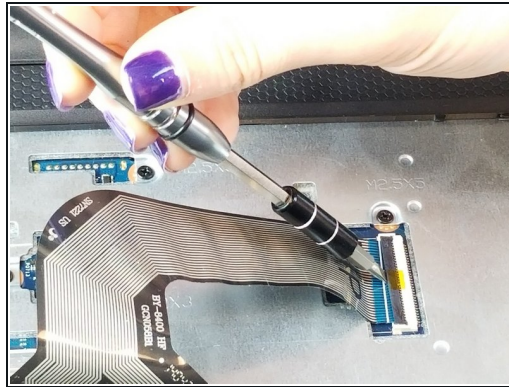

- Lift the latch holding down the cable using a flat head screwdriver.
  - Slide the cable out.
- i** This will free the keyboard from the laptop.

To reassemble your device, follow these instructions in reverse order.