

# **Dell Vostro 3450 Display Assembly Replacement**

Written By: Johnathan Hammond





Spudger (1)
Phillips #0 Screwdriver (1)

#### Step 1 — Unlocking the Battery



 Slide the left and the right battery release latches to the unlock position.

#### Step 2 — Removing the Battery



• Slide the battery and remove it from the computer.

#### Step 3 — Prying the Keyboard



 Press the keyboard down. Pry the keyboard with the use of a flat-head screwdriver towards the display to reveal the first keyboard retainer.

#### Step 4 — Prying the Keyboard retainer



 Pry up the second keyboard retainer.

## Step 5 — Pry up the Keyboard Retainer



• Pry up the third keyboard retainer.

#### Step 6 — Prying the Retainer




Pry up the fourth keyboard retainer.

## Step 7 — Pull up the Keyboard



• Pull up the keyboard from the palm rest.

# Step 8 — Release the Latch

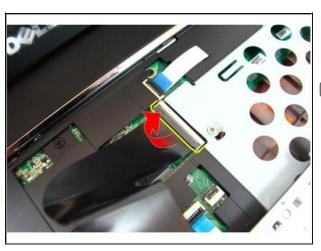


- Release the latch on the system board connector, then disconnect the keyboard cable.
- If this is all you are doing Follow Step In Reverse if not Go to Next Step.

#### Step 9 — Loosen the Screw



 Loosen the screw that secures the memory door.

#### Step 10 — Removing the Memory Door

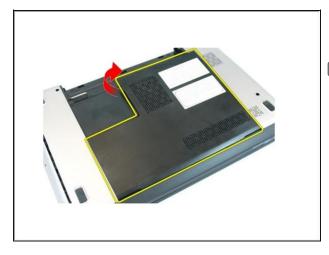


- Pry up the memory door near the screw hole, lift and remove it.
- If this is all you are doing Follow Step In Reverse if not Go to Next Step.

# Step 11 — Remove the Screw



• Remove the screw that secures the optical drive to the computer.

#### Step 12 — Prying the Drive

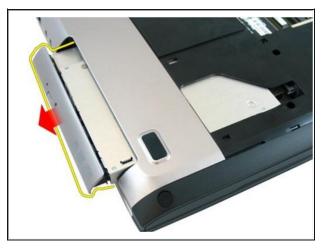

 Gently pry the optical drive out of the computer.

## Step 13 — Remove the Screws




Remove the screws that secure the optical drive bracket.

## Step 14 — Removing the Optical Drive



• Remove the optical drive bracket from the optical drive module.

#### Step 15 — Remove the Screws

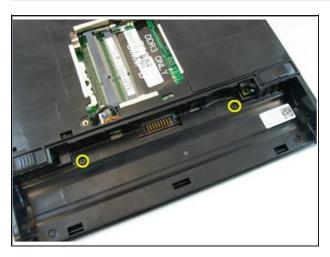

 Remove the screws in the battery compartment.

## Step 16 — Remove the Screws



 Remove the screws in the optical drive compartment.

## Step 17 — Remove the Rubber



 Remove the rubber from the bottom base on the right side.

#### Step 18 — Remove the Rubber




• Remove the rubber from the bottom base on the left side.

## Step 19 — Remove the Screws




 Remove all the screws from the bottom base.

## Step 20 — Remove the Screws

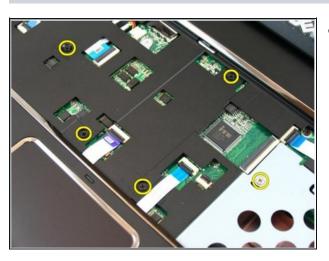


 Flip the computer around and remove the screws that secures the palm rest.

#### Step 21 — Release the Latches

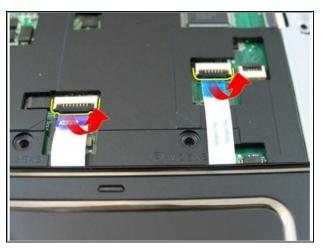


 Release the latches on the system board connector, then disconnect the touch pad cable and the finger printer cable.

#### Step 22 — Release the Latch

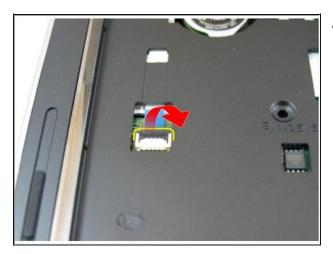

 Release the latch on the system board connector and then disconnect the power button cable.

#### Step 23 — Disconnecting the Key Cable

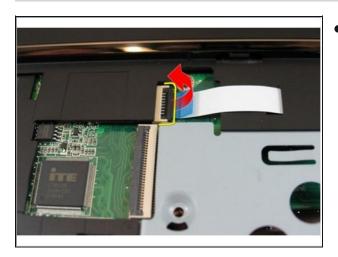

 Release the latch on the system board connector and then disconnect the hot key cable.

#### Step 24 — Prying the Palm Rest



 Pry up the right side of the palm rest.

#### Step 25 — Prying the Palm Rest



• Pry up the left side of the palm rest.

#### Step 26 — Prying the Sides




- Pry up the sides of the palm rest and remove it from the computer.
- If this is all you are doing Follow Step In Reverse if not Go to Next Step.

#### Step 27 — Remove the Screws



 Remove the screws that secure the display hinge.

#### Step 28 — Loosen the Screw

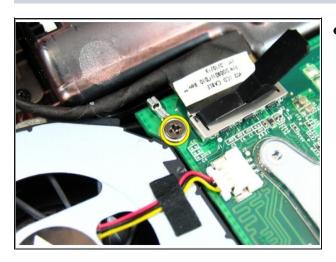


 Loosen the screw that secures the low-voltage differential signaling (LVDS) cable.

## Step 29 — Disconnecting the LVDS Cable




 Disconnect the LVDS cable from the system board.

#### **Step 30** — **Disconnecting the Wireless Cables**

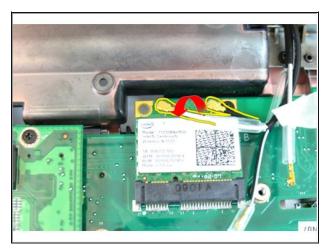

 Disconnect the wireless local area network (WLAN) antenna cable.

## Step 31 — Remove the Screws

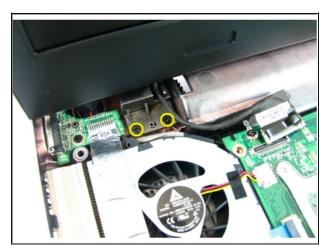

• Remove the screws that secure the left hinge.

## Step 32 — Remove the Screws



 Remove the screws that secure the right hinge.

## Step 33 — Lifting the Display Assembly



- Lift the display assembly and remove it from the computer.
- If this is all you are doing Follow Step In Reverse if not Go to Next Step.