


# HP Pavilion 15-ab243cl RAM Stick Replacement

This guide will demonstrate how to replace the RAM Stick. Useful for upgrading or replacing a failed RAM Stick.

Written By: Alexander Bicigo

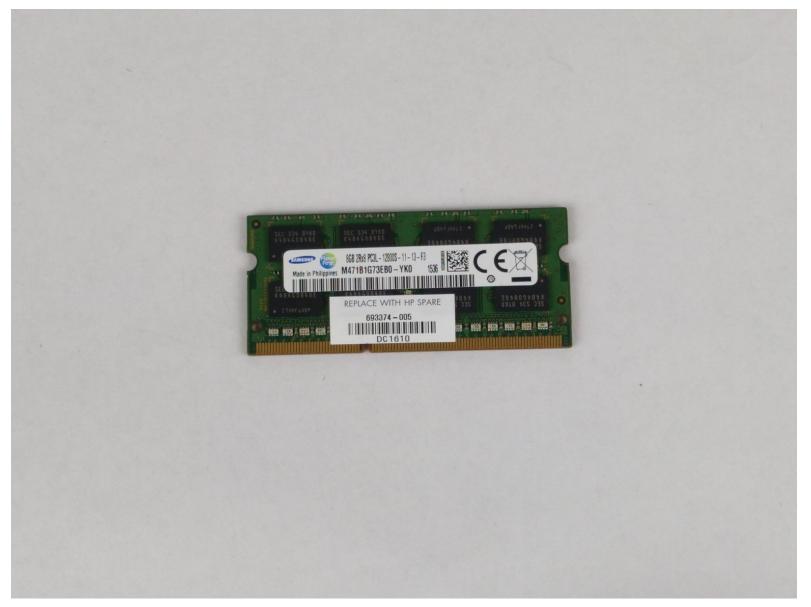


# INTRODUCTION

This guide will show you how to access your RAM and replace/upgrade the RAM. There are two slots allowing for an easy RAM expansion upgrade. The replacement of the current RAM is covered in this guide.

# **TOOLS:**

- Phillips #1 Screwdriver (1)
- Phillips #00 Screwdriver (1)
- Prying and Opening Tool Assortment (1)

## Step 1 — Battery

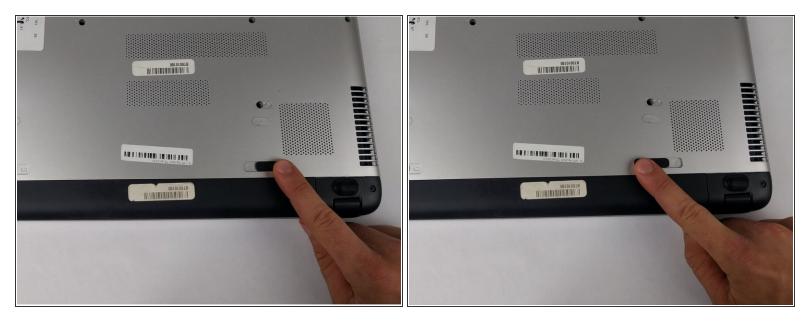

• Slide the battery lock tab toward the center of the battery to the unlock position.

## Step 2



• Slide the battery release switch to the right until the battery pops out.

#### Step 3



• Grabbing the top edge of the battery, rotate it toward you and then lift upward to relieve the battery from its slot.

#### Step 4 — Laptop Case



 With the battery removed, remove both black plastic covers with a plastic opening tool. Unscrew both 7.5 mm screws from the tabs, using a PH1 screw driver. Using a plastic opening tool, pry off both covers.

#### Step 5



Remove all 16 of the 3.5 mm screws with a PH1 screwdriver and pry/slide the CD drive out of laptop.

#### Step 6



• With the CD drive removed, unscrew the two 2mm silver screws with a PH00.

↑ These can strip easily, so take your time removing.

#### Step 7



• Using a plastic opening tool, begin to pry edge of case away from the laptop. Work around the edges until all sides, except back, are open.

#### Step 8




- On the back side of the laptop, where the battery is, there are 12 black plastic clips. Use a plastic opening tool and pry all of these clips, unlatching them from the case.
- Once clips are free, open the laptop. Rotating the case off, around the hinges, works best to remove the case.

#### Step 9 — RAM Stick



• Locate the RAM stick, will be next to hard drive. Unclip the two silver retainers on each side.

#### Step 10

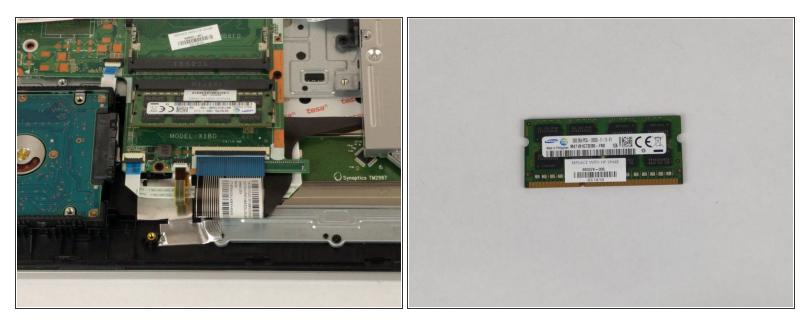

 The card will pop up when silver retainers are released. The card is ready to remove, pull straight out.

To reassemble your device, follow these instructions in reverse order.