


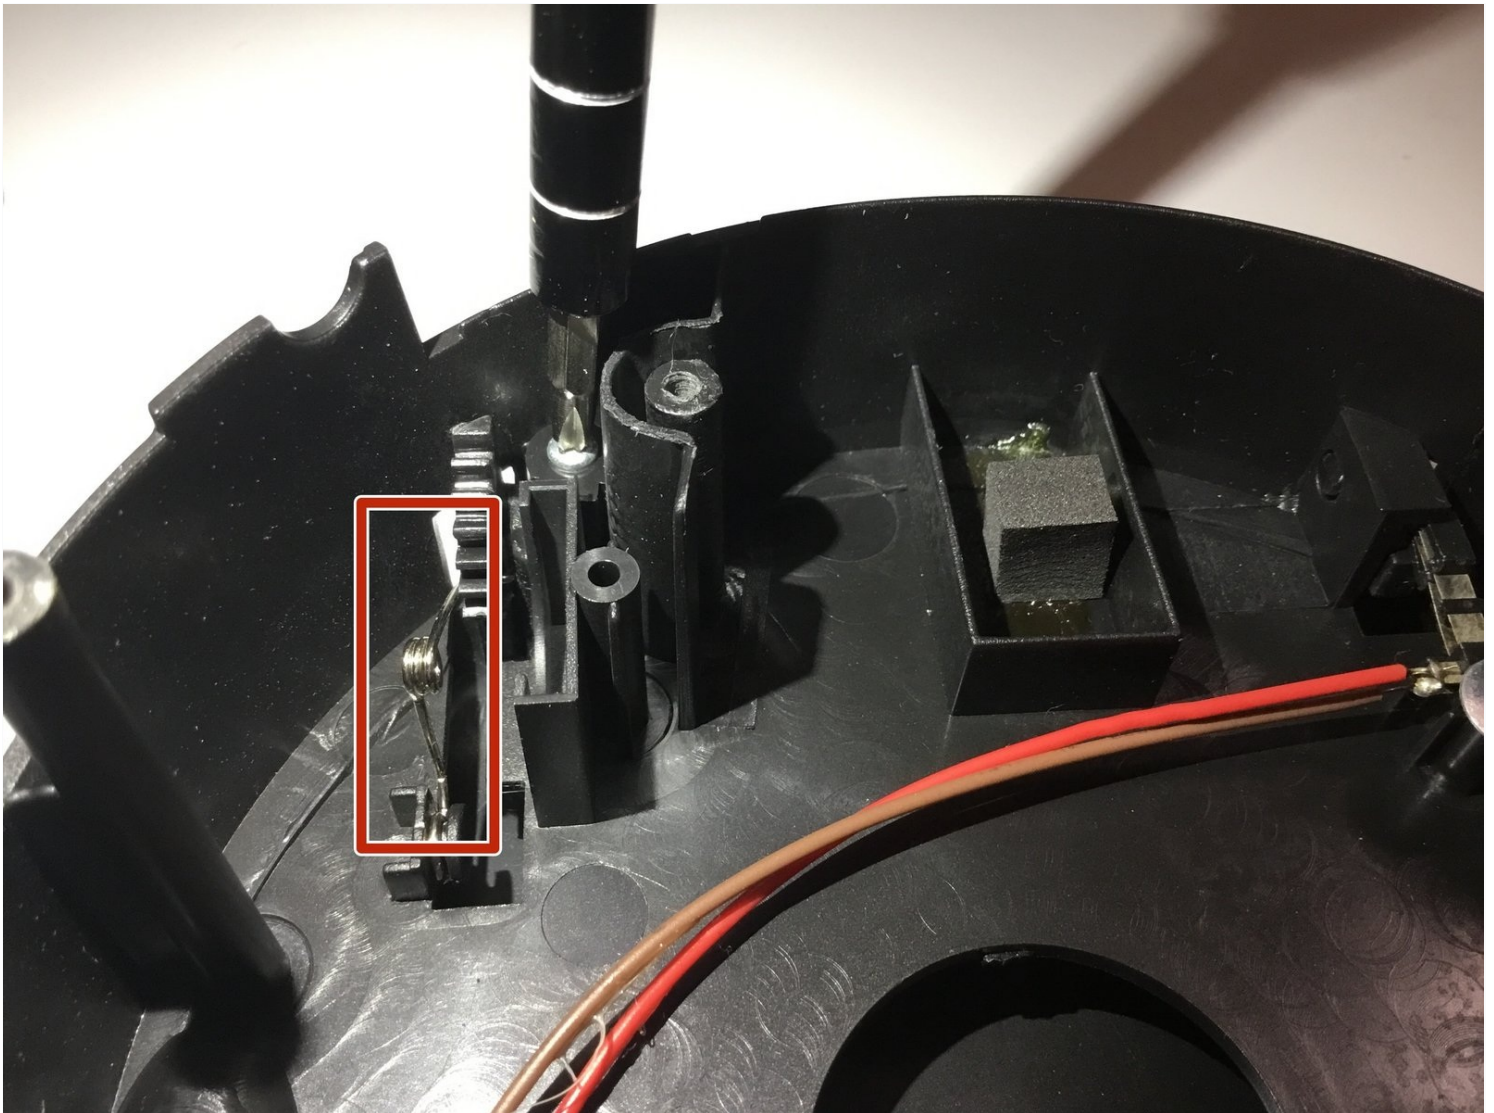

# Memorex CD Alarm Clock Radio CD Lid Spring Replacement

If the lid spring on your Memorex CD Alarm...

Written By: Aubrey Frank



# INTRODUCTION

If the lid spring on your Memorex CD Alarm Clock breaks, this guide will show you how to replace it.


## TOOLS:

Phillips #1 Screwdriver (1)

Phillips #0 Screwdriver (1)


Tweezers (1)

## Step 1 — Memorex CD Alarm Clock Radio

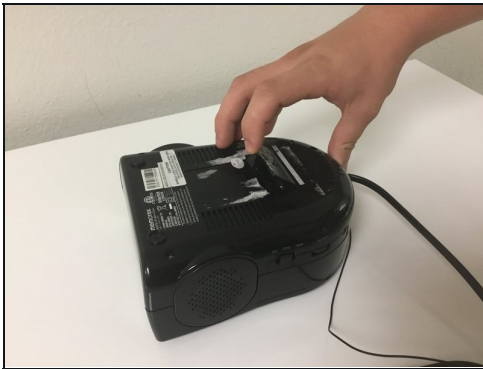



- Turn the clock radio over so the bottom is facing up.
- Pull the tab upward and remove the cover from the battery compartment.
- Remove the batteries.

## Step 2

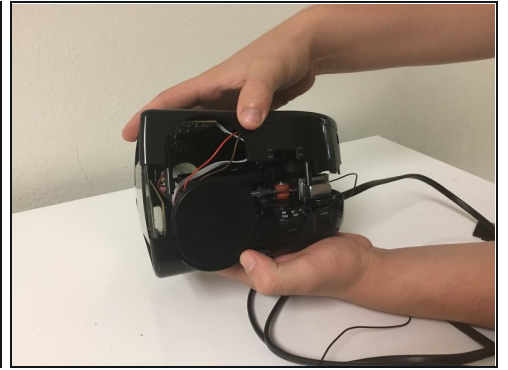

- Remove the five screws on the bottom of the device with a screwdriver.
- Grasp the top and bottom and gently pull apart.



## Step 3 — CD Lid Spring

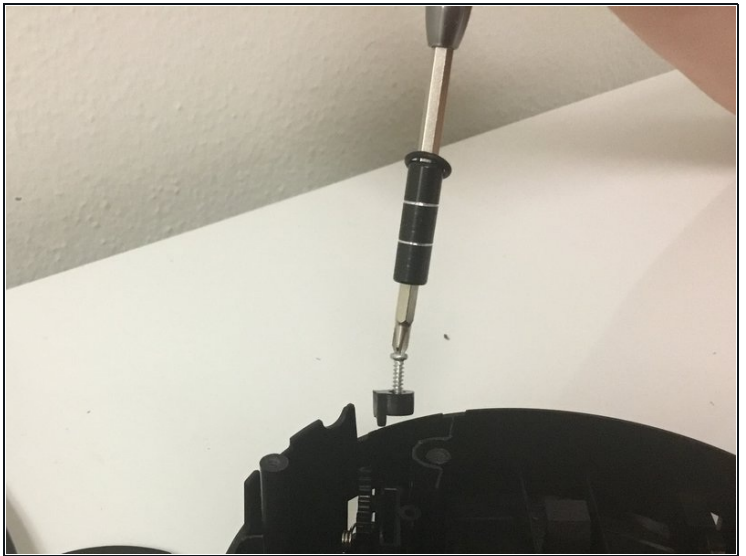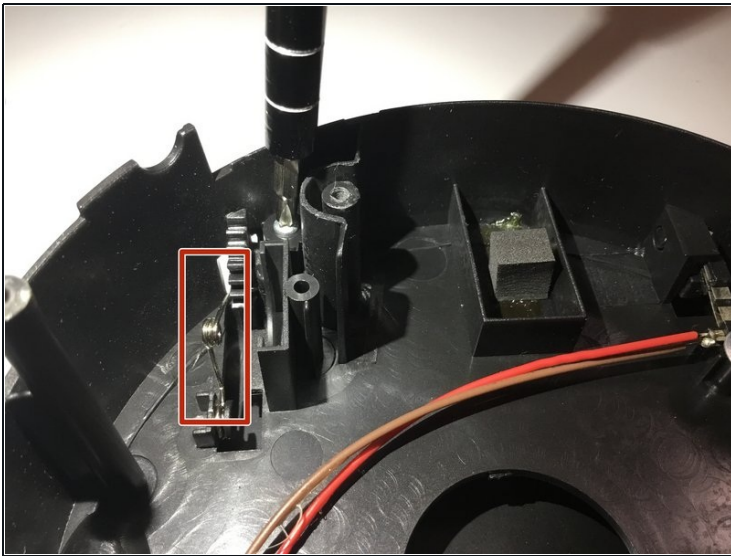

- Locate the spring and the spring's retaining piece.
- ① There will be a screw that holds the retaining piece in place.
- Use a screwdriver to remove the screw and the retaining piece.



## Step 4

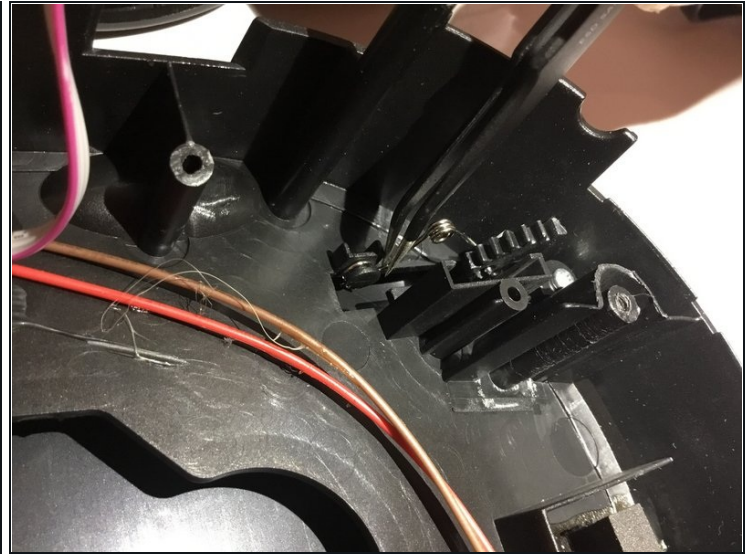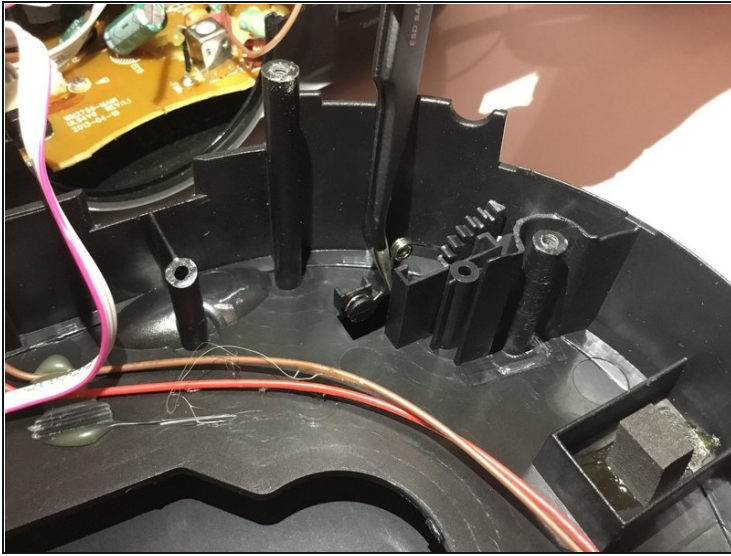

- Grasp and remove the spring using tweezers.

---

To reassemble your device, follow these instructions in reverse order.