



# Sirius XM Onyx Plus Screen Replacement

How to replace the scree on a Sirius XM Onyx Plus radio.

Written By: Angel Rivera



---

## INTRODUCTION

Screens can crack or wear out so you need to change the screen.

---

### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Case



- Wedge a plastic opening tool in between the case.

## Step 2





- Starting with the bottom left corner, press down on the plastic opening tool to unhook the latches on the inside of the device.
- ⓘ You have to start with the bottom left and right corners, and then flip the device to over and do the top of the device.

### Step 3




- Once unclipped, separate the back casing from the device.

### Step 4 — Motherboard

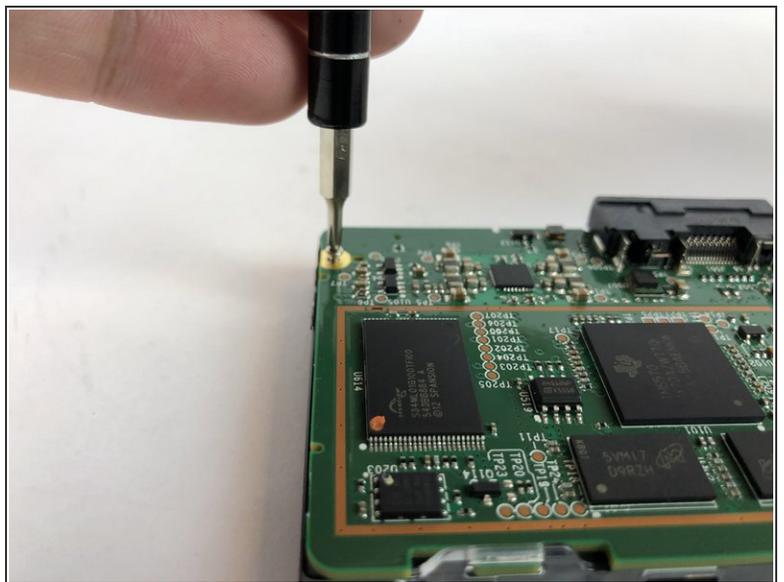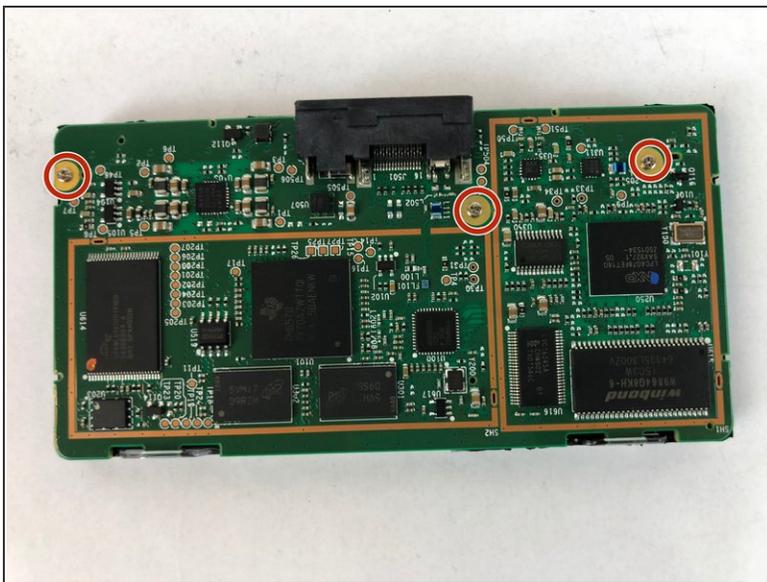


- Remove the three 5.4mm JIS #00 screws from the motherboard.

## Step 5

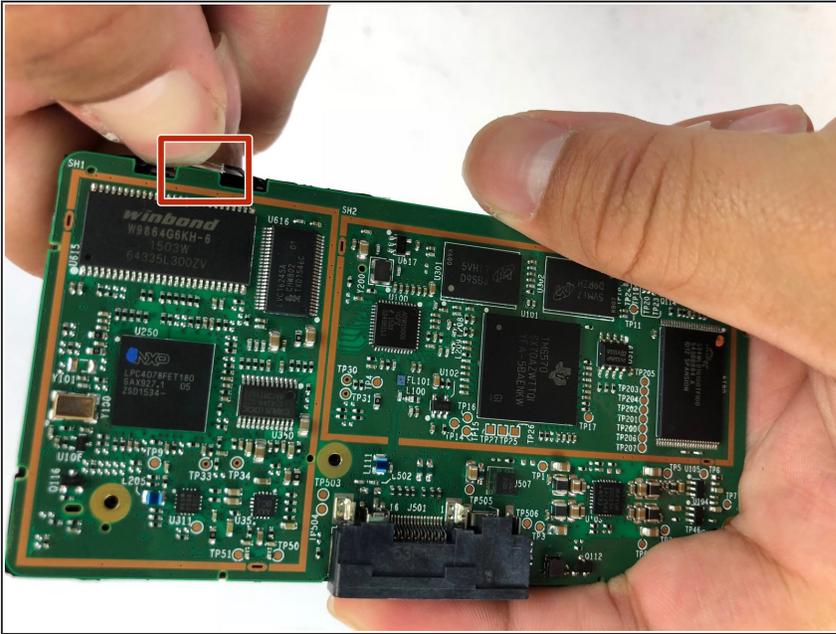


- Unlatch the two clips located at the top of the device that hold the motherboard in place.

## Step 6

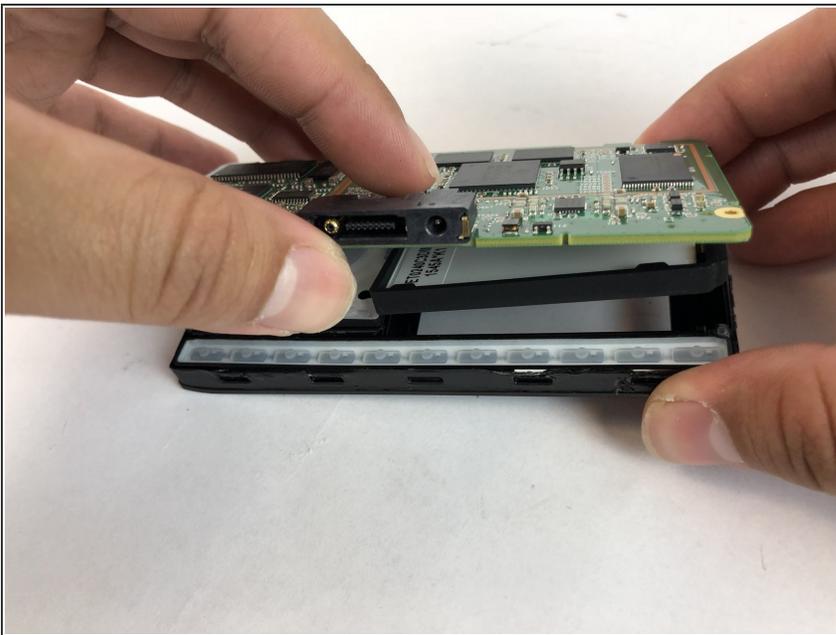


- Lift the motherboard up from the bottom.

## Step 7

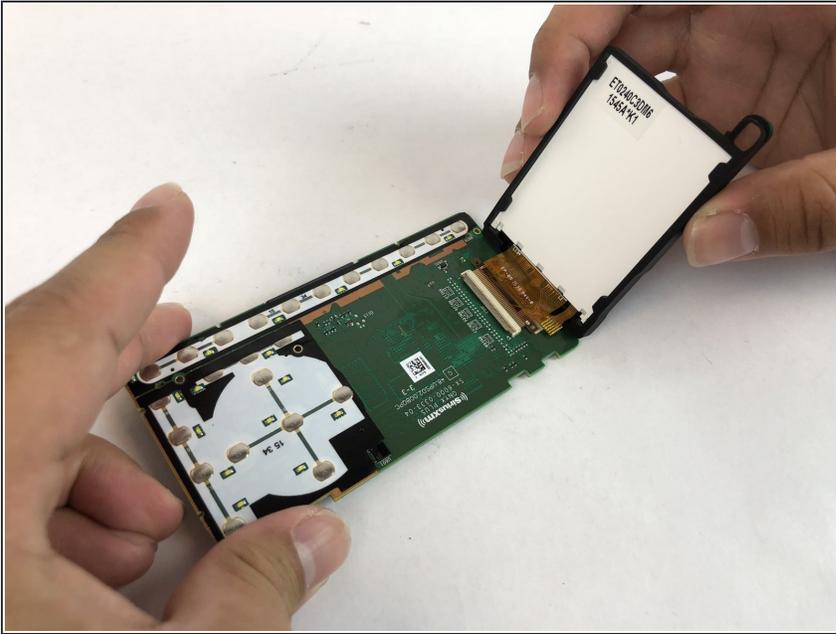


- Lift the screen up, so you can see where it is attached to the motherboard.

## Step 8

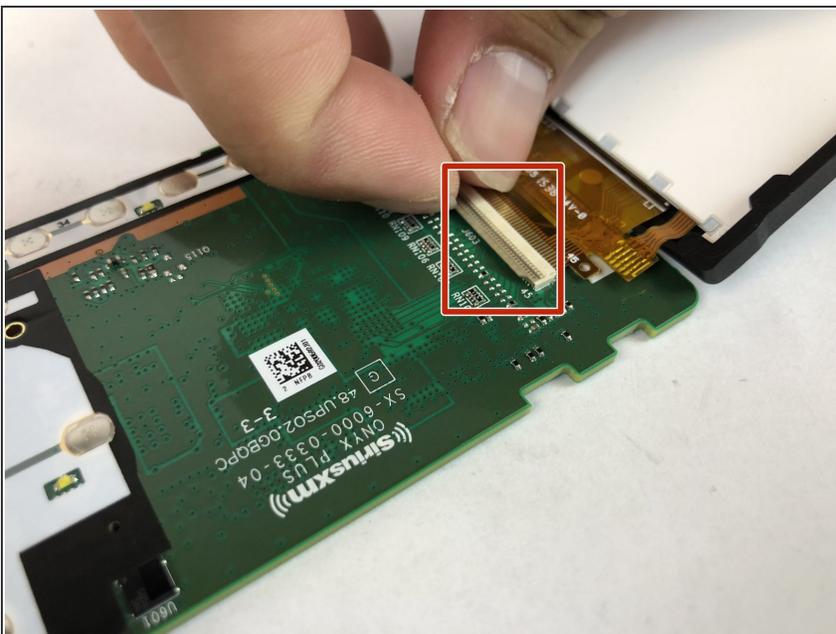

- Use a spudger to flip up the retaining flap on the display ribbon cable [ZIF](#) socket.

## Step 9

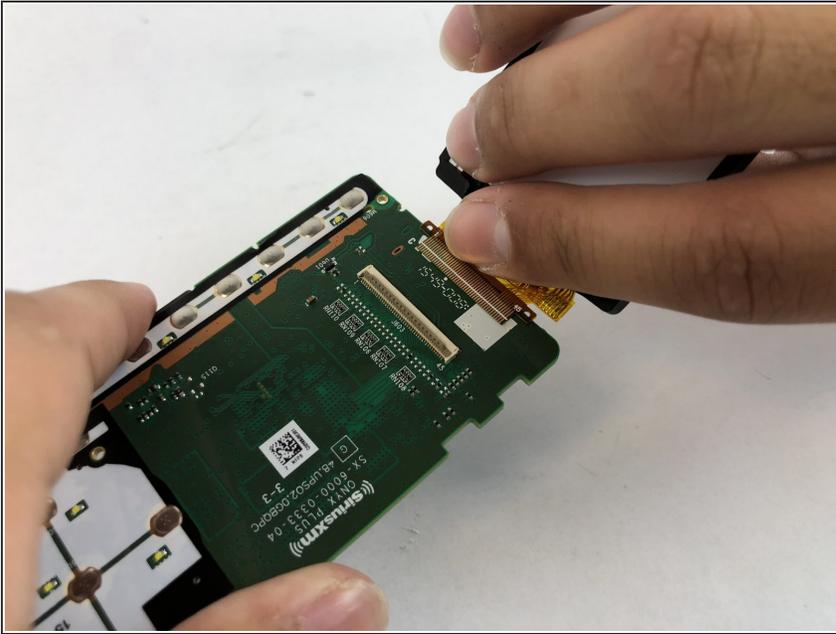

- Carefully pull the ribbon out from the ZIF connector.

## Step 10 — Screen



- Take the black casing off the screen.

To reassemble your device, follow these instructions in reverse order.