


# **Dell Vostro 2420 Keyboard Replacement**

Written By: Johnathan Hammond

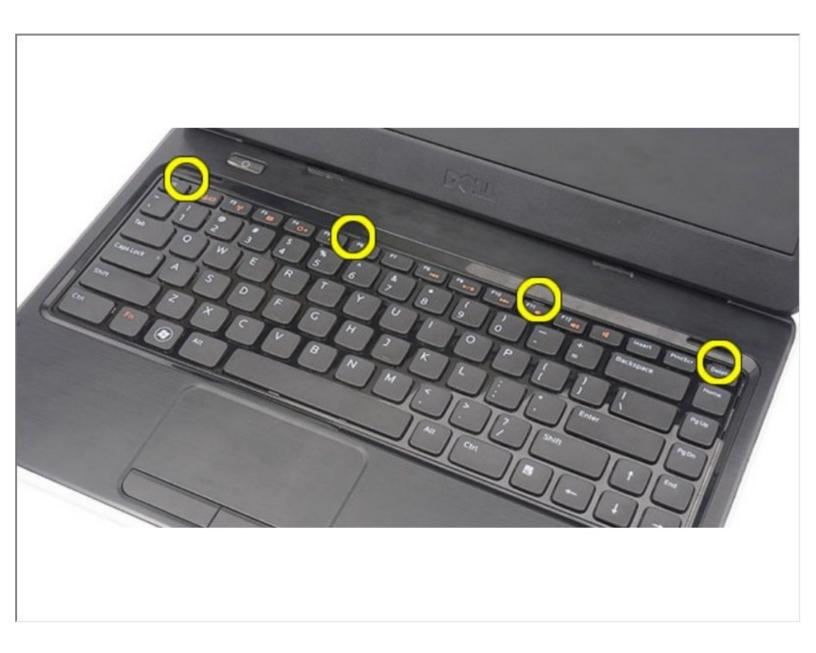

# **INTRODUCTION**

In this guide, we will show you how to remove and replace the Keyboard.



# F TOOLS:

• Spudger (1)

# Step 1 — Sliding the Latches



 Slide the release latches to unlock the battery.

#### Step 2 — Sliding the Battery



 Slide the battery and remove it from the computer.

# Step 3 — Prying the Keyboard



 Starting on the right, pry up the keyboard from the computer.

# Step 4 — Flip the Keyboard



 Flip the keyboard over and lay it on the palmrest.

# **Step 5** — **Disconnect the Keyboard Cable**



 Disconnect the keyboard cable from the system board.

# Step 6 — Remove the Keyboard



Remove the keyboard from the computer.