


## **Dell Vostro 1700 KeyBoard Replacement**


Written By: Johnathan Hammond



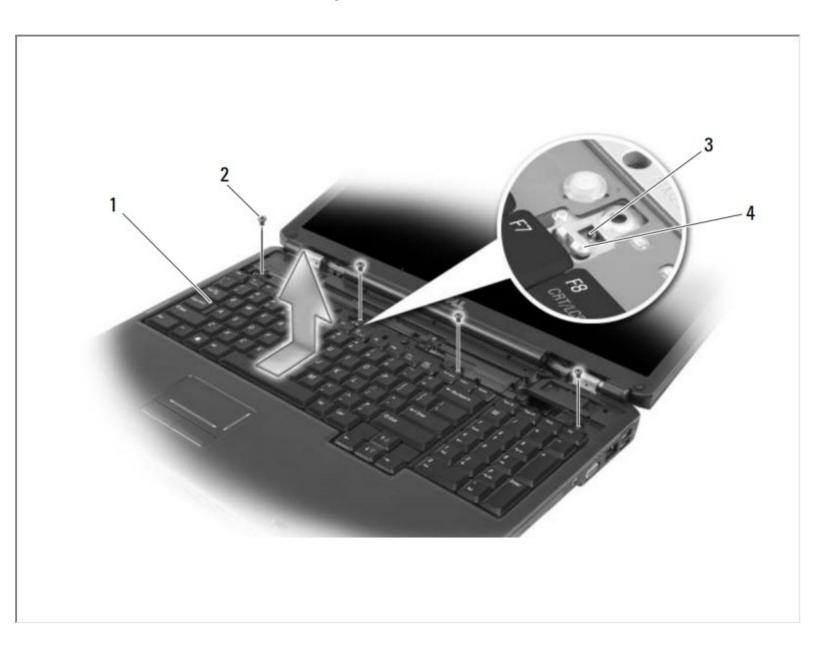


- Spudger (1)
- Phillips #0 Screwdriver (1)

## Step 1 — Removing the Battery

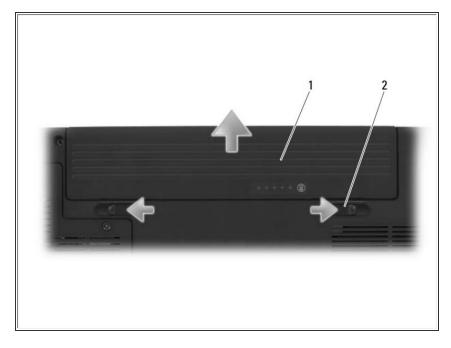


- Slide and click the battery release latches to keep them open.
  - Slide the battery out of the bay.

## **Step 2** — Removing the Hinge Cover

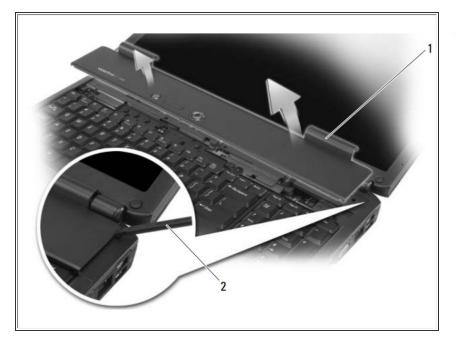

- Insert a plastic scribe into the indent to lift the hinge cover on the right side.
  - Ease the hinge cover up, moving from right to left, and remove it.

## Step 3 — Removing the Keyboard

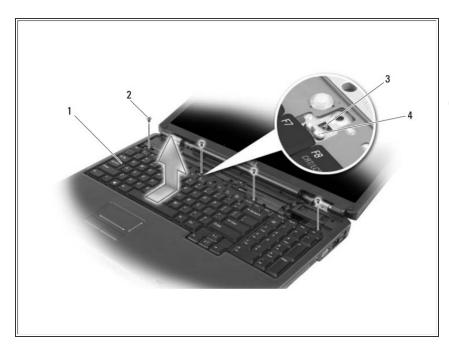

- Remove the four screws at the top of the keyboard.
- NOTICE: The keycaps on the keyboard are fragile, easily dislodged, and timeconsuming to replace. Be careful when removing and handling the keyboard.
  - Slide the keyboard toward the back of the computer to disengage the notch on the keyboard from the tab on the base of the computer.
    - Lift and remove the keyboard.

To reassemble your device, follow these instructions in reverse order.