



# Craig Electronics CMP773 Volume/Power Control Button Replacement

How to replace the volume and power control buttons in a Craig Electronics CMP773.

Written By: Jessie L Morris



## INTRODUCTION

If the volume/power control button on your Craig Electronics CMP773 tablet has quit working, this guide will demonstrate how to replace it with the correct tools. During this procedure, be especially careful not to let it fall out when snapping on and off the back cover.

---

### TOOLS:

- [Phillips #000 Screwdriver](#) (1)
  - [Metal Spudger](#) (1)
-

## Step 1 — Volume/Power Control Button



- Remove the two 3.2 mm PH000 screws near the charging port.

## Step 2



- Pry the back cover from the device along bottom edge.

### Step 3



- Continue prying along each edge of the device until back cover is free.

### Step 4



- On the back cover, find the location where the volume/power button is held.
- ⚠ The volume/power button is not held securely after back is removed so it may fall out of place while removing the back cover from the device.

## Step 5



- Remove the old button and replace it with the new one.

Once the above steps have been successfully completed, power on the device. Enjoy your newly replaced volume/power control button.