




Dell Vostro 15 3562 Base Cover Replacement

Written By: Johnathan Hammond

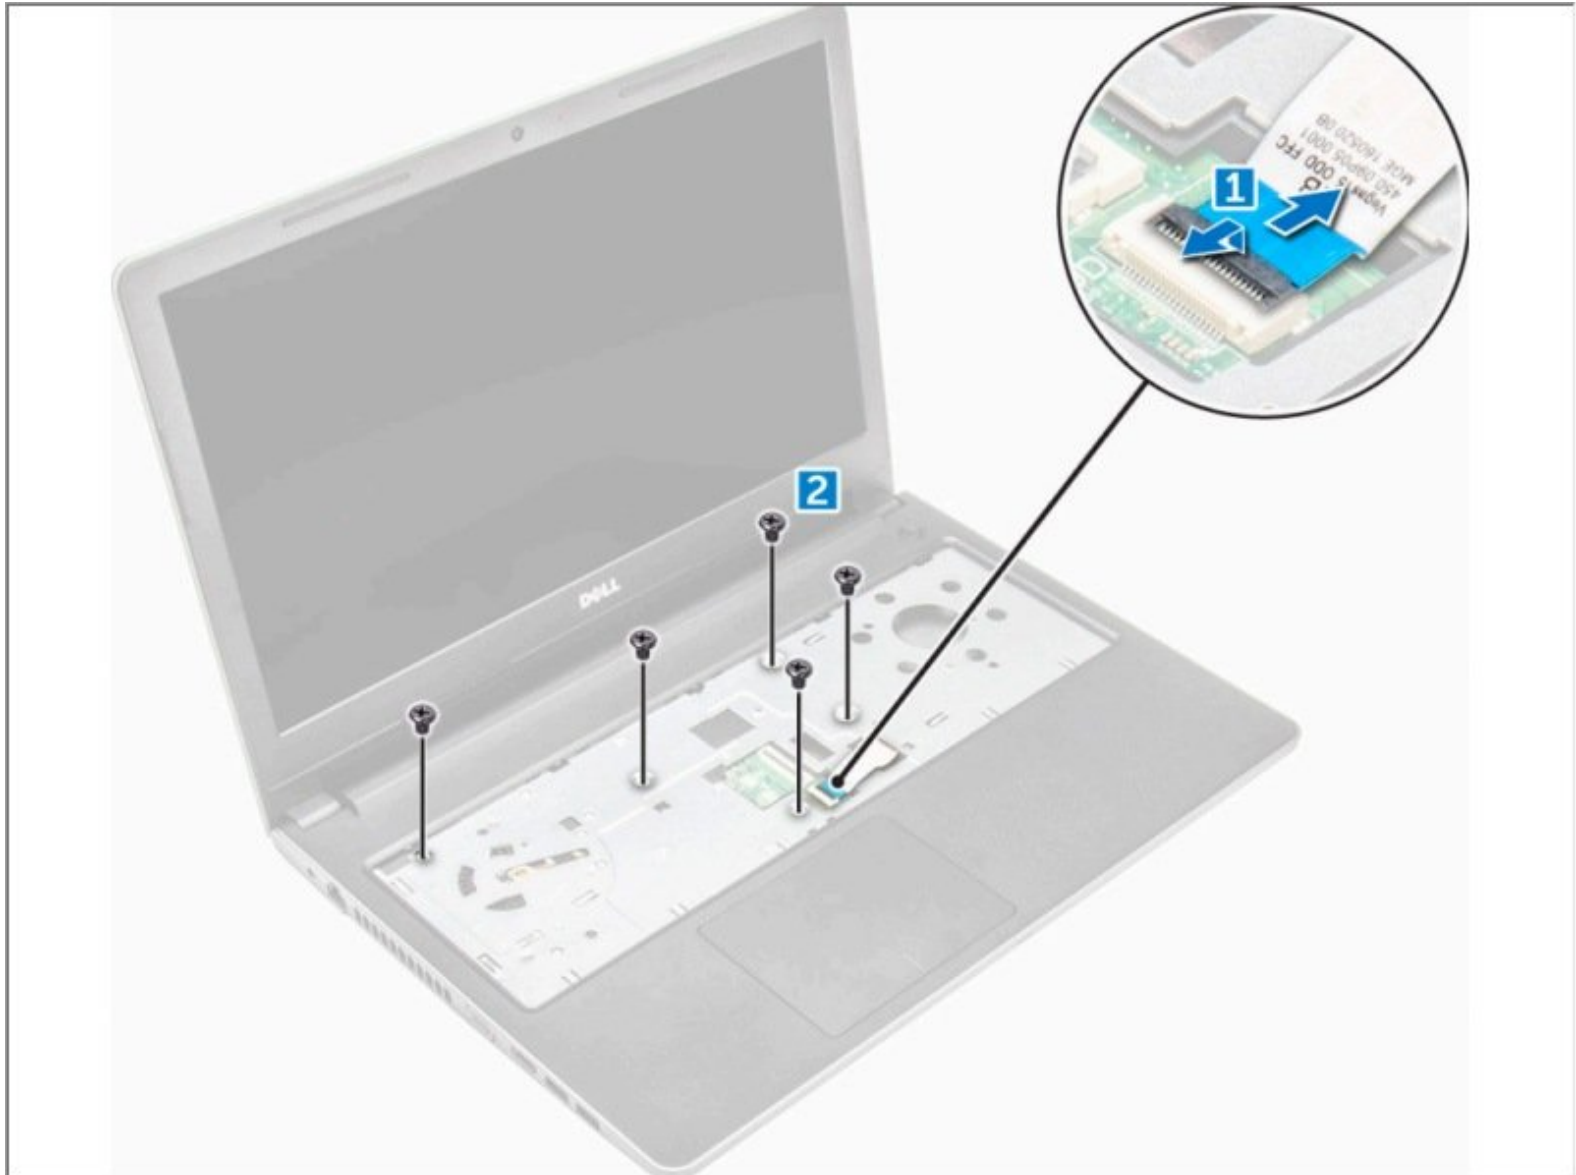




TOOLS:


- [Phillips #0 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Battery

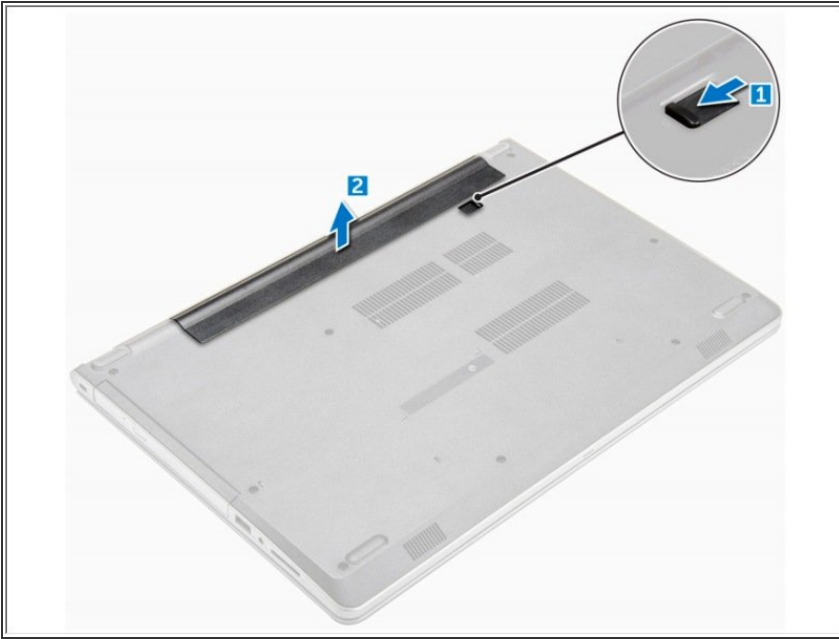

- Slide the release latch to release the battery [1].
- Remove the battery from the computer [2].

Step 2 — Optical-Disk Drive

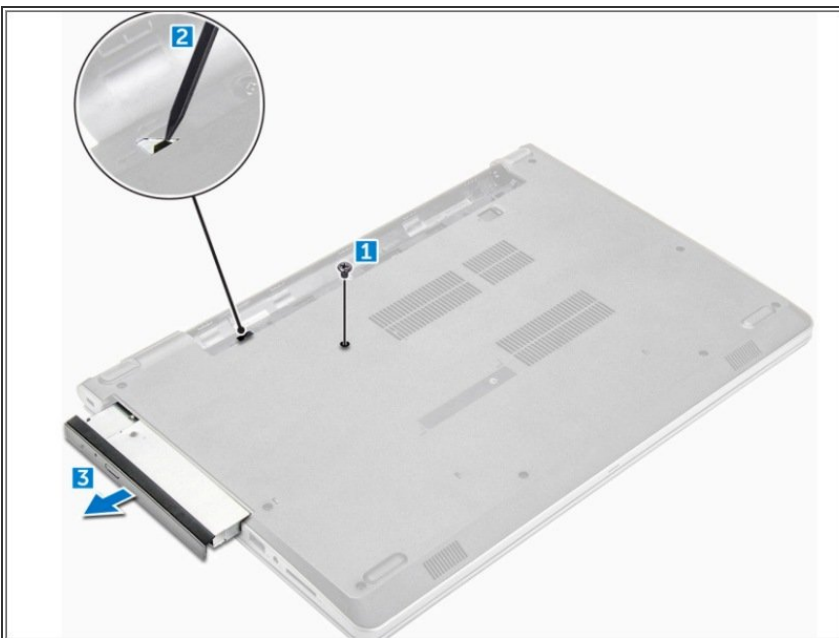

- Remove the M2L3 screw that secures the optical drive to the computer [1].
- Using a plastic scribe, push the tab in the direction of the arrow indicated on the chassis. [2].
- Slide the optical drive out of the computer [3].

Step 3 — KeyBoard




- Using a plastic scribe, release the five tabs from the slots located above the keyboard [1].
- Flip the keyboard on the palm rest to access the keyboard connector cable under the keyboard [2].

Step 4




- Disconnect the keyboard cable from the system board.
- Remove the keyboard from the computer.

Step 5 — Base Cover

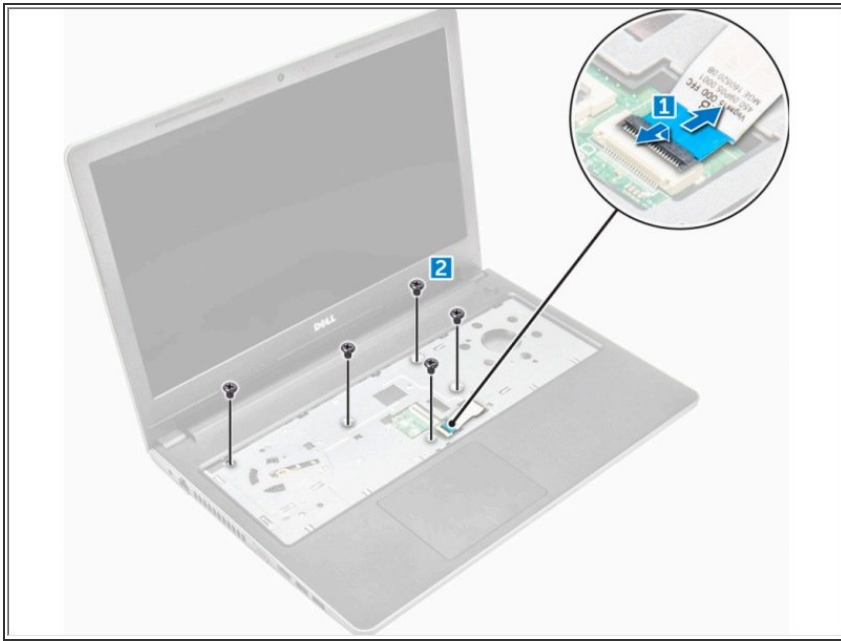


- Disconnect the optical drive connector and lift it to remove it from the system board [1].
- Remove the M2L5 screws that secure the base cover [2].

Step 6

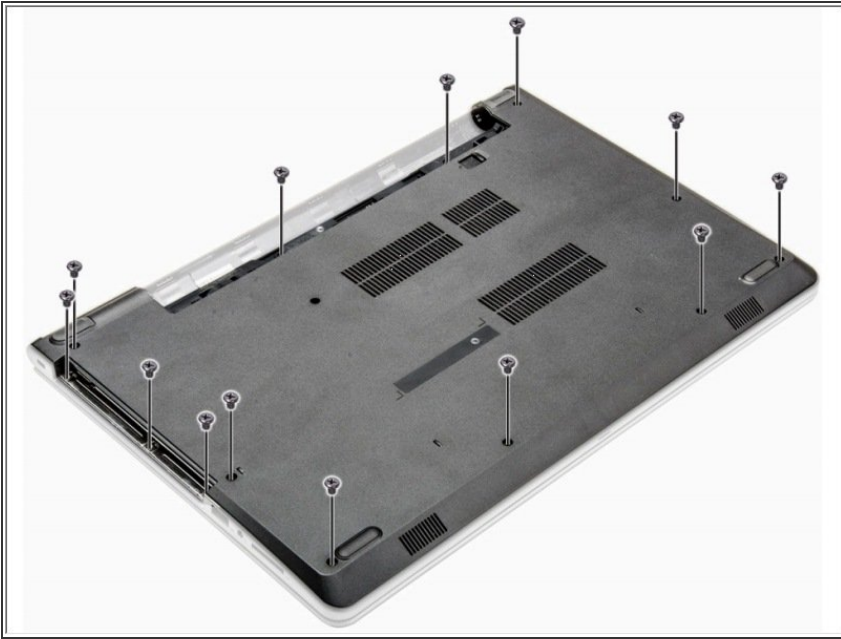

- Flip the computer and remove the screws (8 screws - M2.5L8; 3 screws - M2L2; 2 screws- M2L2) that secure the base cover to the computer.

Step 7

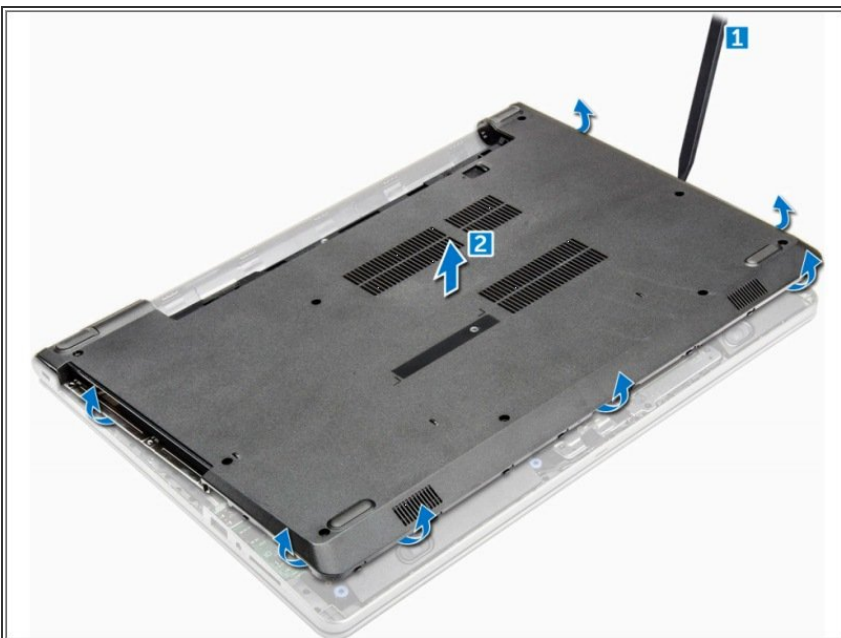

- Use a scribe to pry the edges of the base cover [1].
- Lift the base cover and remove it from the computer [2].

To reassemble your device, follow these instructions in reverse order.