



Sony Cyber-shot DSC-WX220 Outer Case Replacement

These steps show how to remove the outer case.

Written By: Kate Glazer



INTRODUCTION

This guide shows how to replace the outer case if damaged.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



- Slide the gray switch from lock to open position.

Step 2




- Pull down on the blue tab to release the battery.

Step 3 — Outer Case



- Use a PH00 screwdriver to remove the five 3.5 mm screws.
- Use a PH00 screwdriver to remove the two 2.5 mm screws.

Step 4

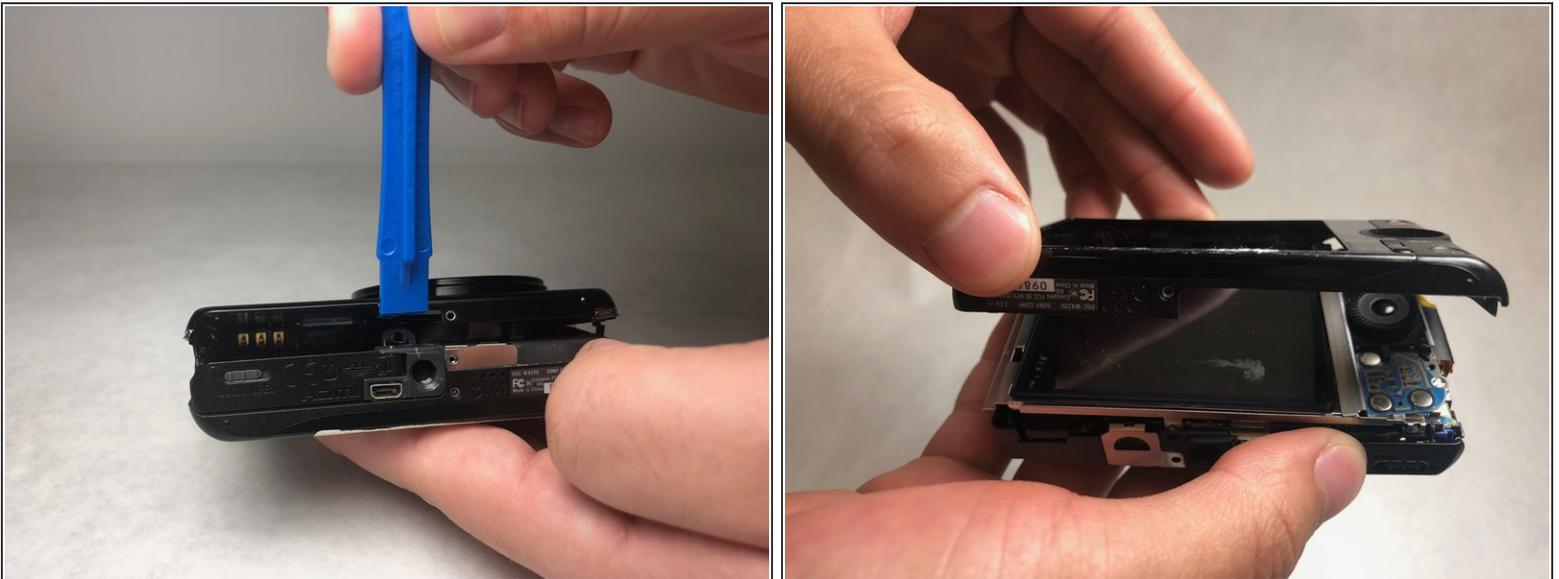

- Pry apart the case gently using a plastic opening tool.

To reassemble your device, follow these instructions in reverse order.