


# Spin Master Hatchimal Draggle Speaker Replacement

The speaker may not work properly, this guide will show how to easily change out the device speaker.

Written By: Hector Lopez

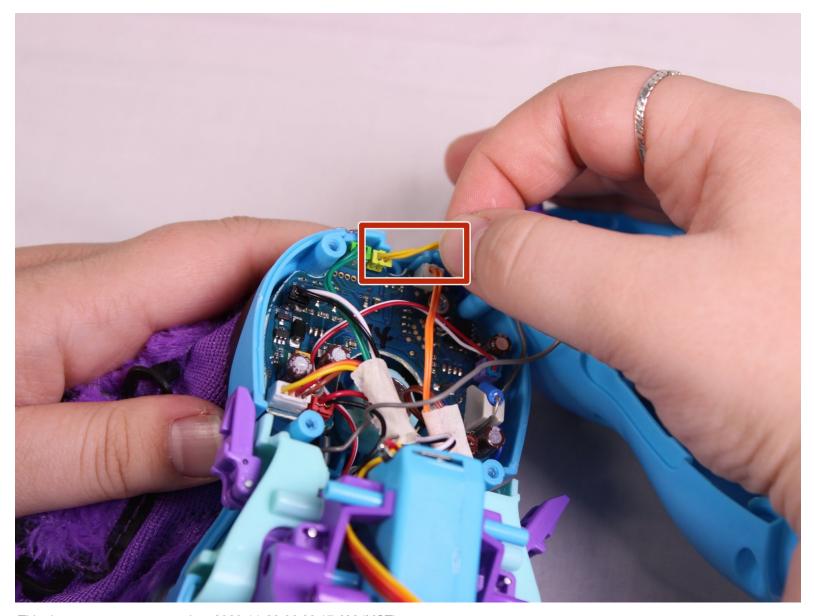

This document was generated on 2020-11-28 06:38:17 AM (MST).

#### **INTRODUCTION**

Step by step instructional guide to replacing Spin Master Hatchimal Draggle speaker. Before getting started, fur and wing removal is required.



#### **TOOLS:**

- Phillips #00 Screwdriver (1)
- iFixit Opening Tools (1)
- Utility Scissors (1)
- Spudger (1)

## Step 1 — Plastic Wing Replacement



lay the Hatchimal on its side.

# Step 2




 Using the plastic opening tool, push in on the purple clip.



- Pull the wing off of the hatchimal.
- i The wing should come off with little resistance.

#### Step 4 — Fur Replacement

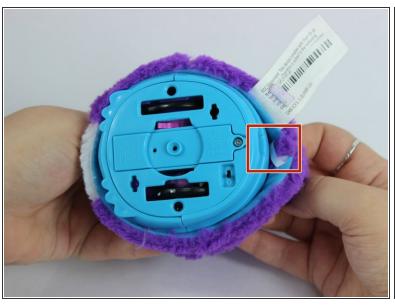



Cut the fur retaining zip-tie with a pair of scissors.





Lift the fur up until it can't go further.







- Use the spudger tool to push up on the black clip to free it.
- Pull the clip out.









- Lift fur up to reveal the next set of clips.
- Insert a spudger to push up on the black clip to free it.
- Pull out the clip.





- Lift the fur up and over the Hatchimals Head.
- Remove the six 12mm Phillips #00 screws from then body.

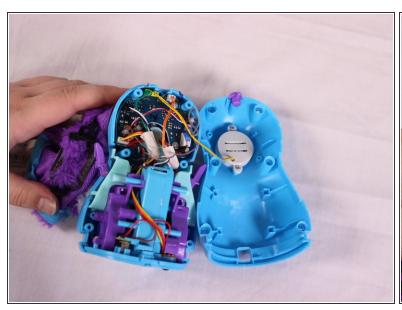


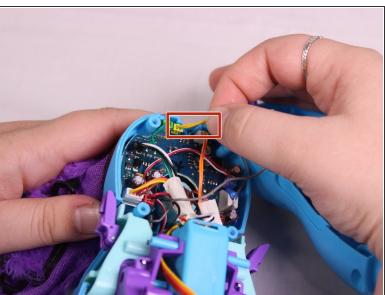


- Pull the casing apart.
- Remove the yellow speaker cable.





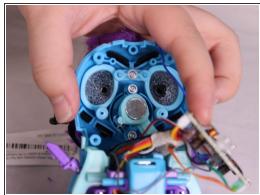


- Remove the three 7mm Phillips #00 screws from the head.
- Remove the wheel base and the circuit board carefully not to damage the spring.

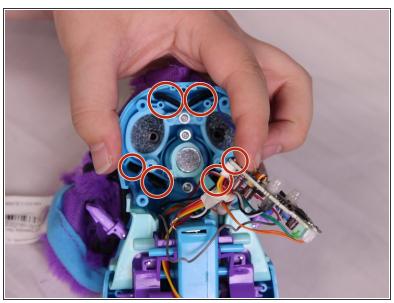



- Push the six black fur clips out using the spudger.
- Remove the fur completely.

## Step 12 — Speaker Replacement

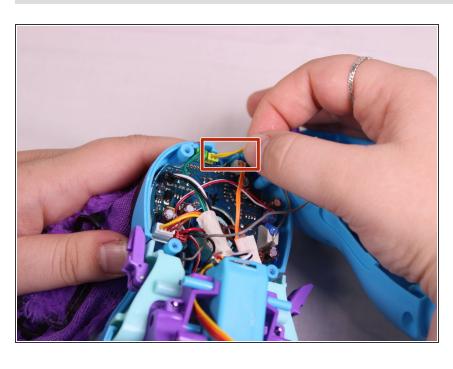

 Gently pull the yellow speaker cord from circuit board. There will be little resistance.





Remove the two 7mm Philips #00 screws from the head.





- Pull the speaker cover off.
- Remove the speaker.

To reassemble your device, follow these instructions in reverse order.