



HP Pavilion g4-1117dx Larger Back Panel Replacement

How to remove the HP Pavilion g4-1117dx larger back panel.

Written By: Robert Hamilton



INTRODUCTION

The large back panel contains a lot of screws that help keep it in tact. It covers and protects the majority of your device's insides. It can be somewhat tricky to remove.



TOOLS:

- [JIS #0 Screwdriver](#) (1)
-

Step 1 — Battery



- Slide pill shaped tab to the other side of the channel.

Step 2



- Remove battery while keeping the tab to the side.

Step 3 — L-Shaped Back Panel




- Unscrew the two screws JIS #0 located on opposite sides of the panel.
- ❗ Screws are attached to the panel and will not fully come out.

Step 4




- Carefully pry off the L-shaped panel.

Step 5 — Larger Back Panel

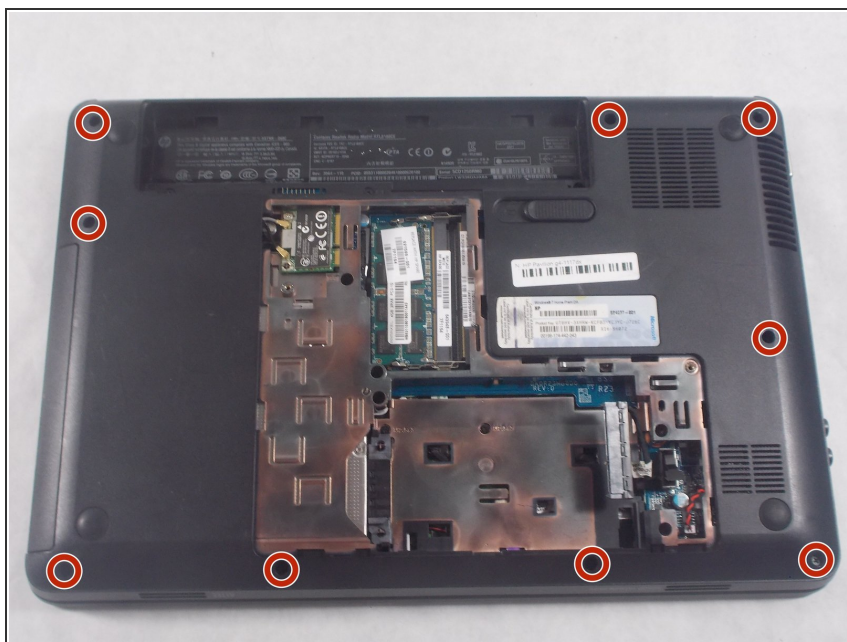



- Unscrew all nine 6.0mm JIS #0 screws located on the border of the back panel.

Step 6

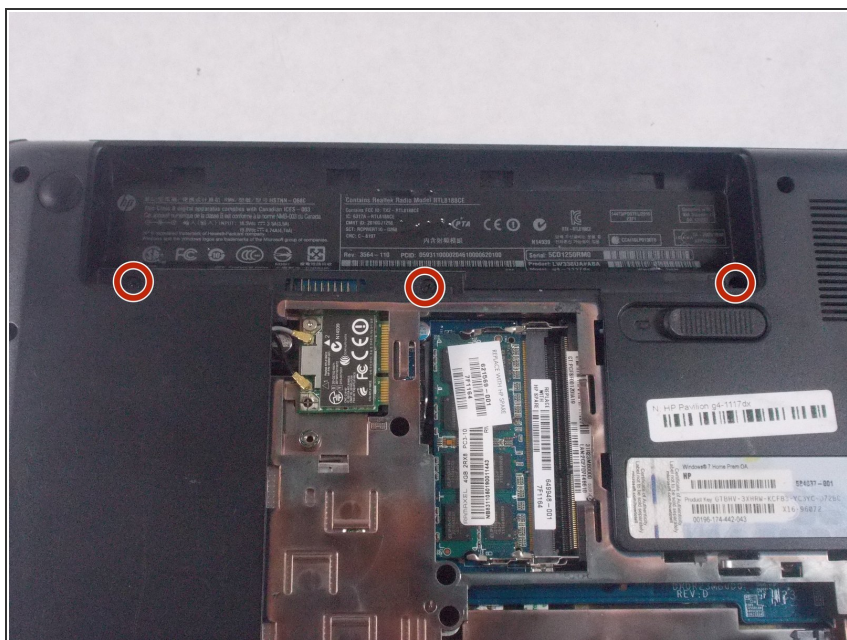

- Remove 3 screws located where the battery previously was.

Step 7

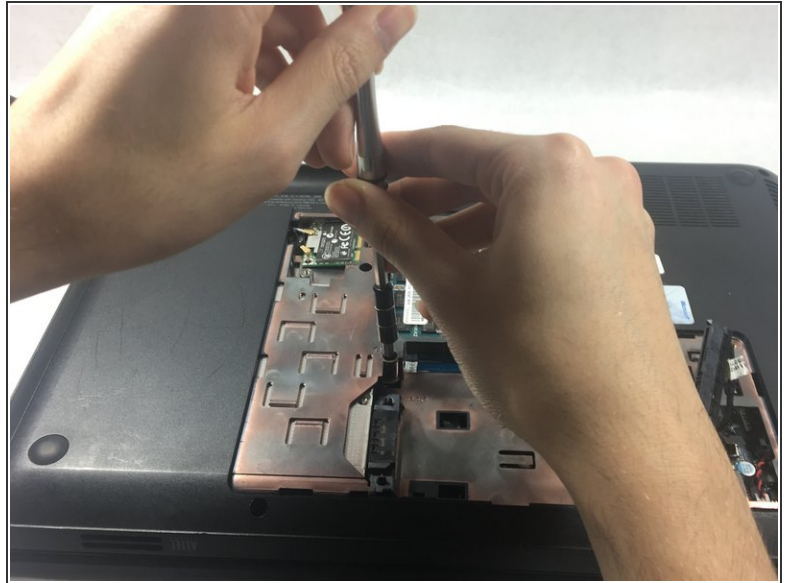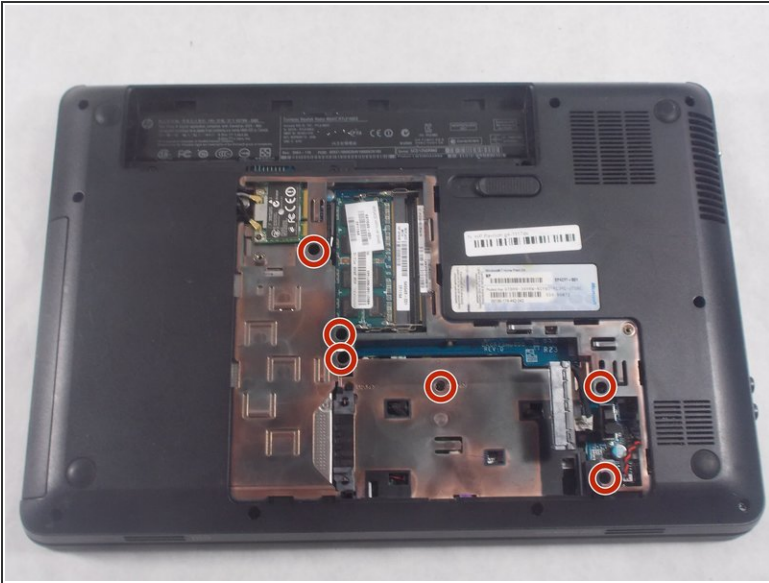


- Remove 6 screws located under the spot where the smaller L-shaped panel was located.

Step 8



- Slowly pry off the keyboard from the back panel.
- ⓘ Between the back panel and the keyboard there are two ribbon wires.
- ⚠ Remove slowly to not break the back panel. If it does not come off easily, check to see if all screws are removed.

Step 9

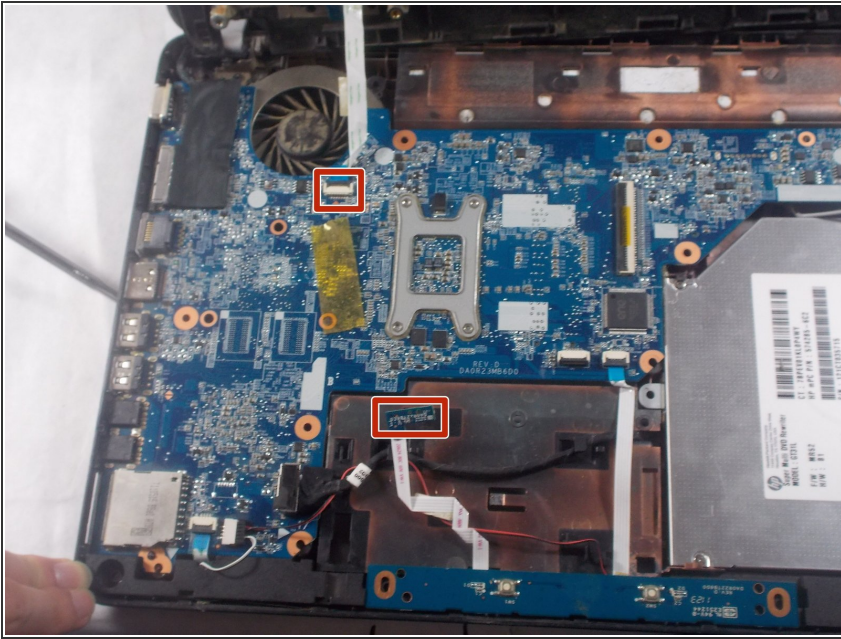

- Unplug wires connecting back panel to keyboard.

To reassemble your device, follow these instructions in reverse order.