


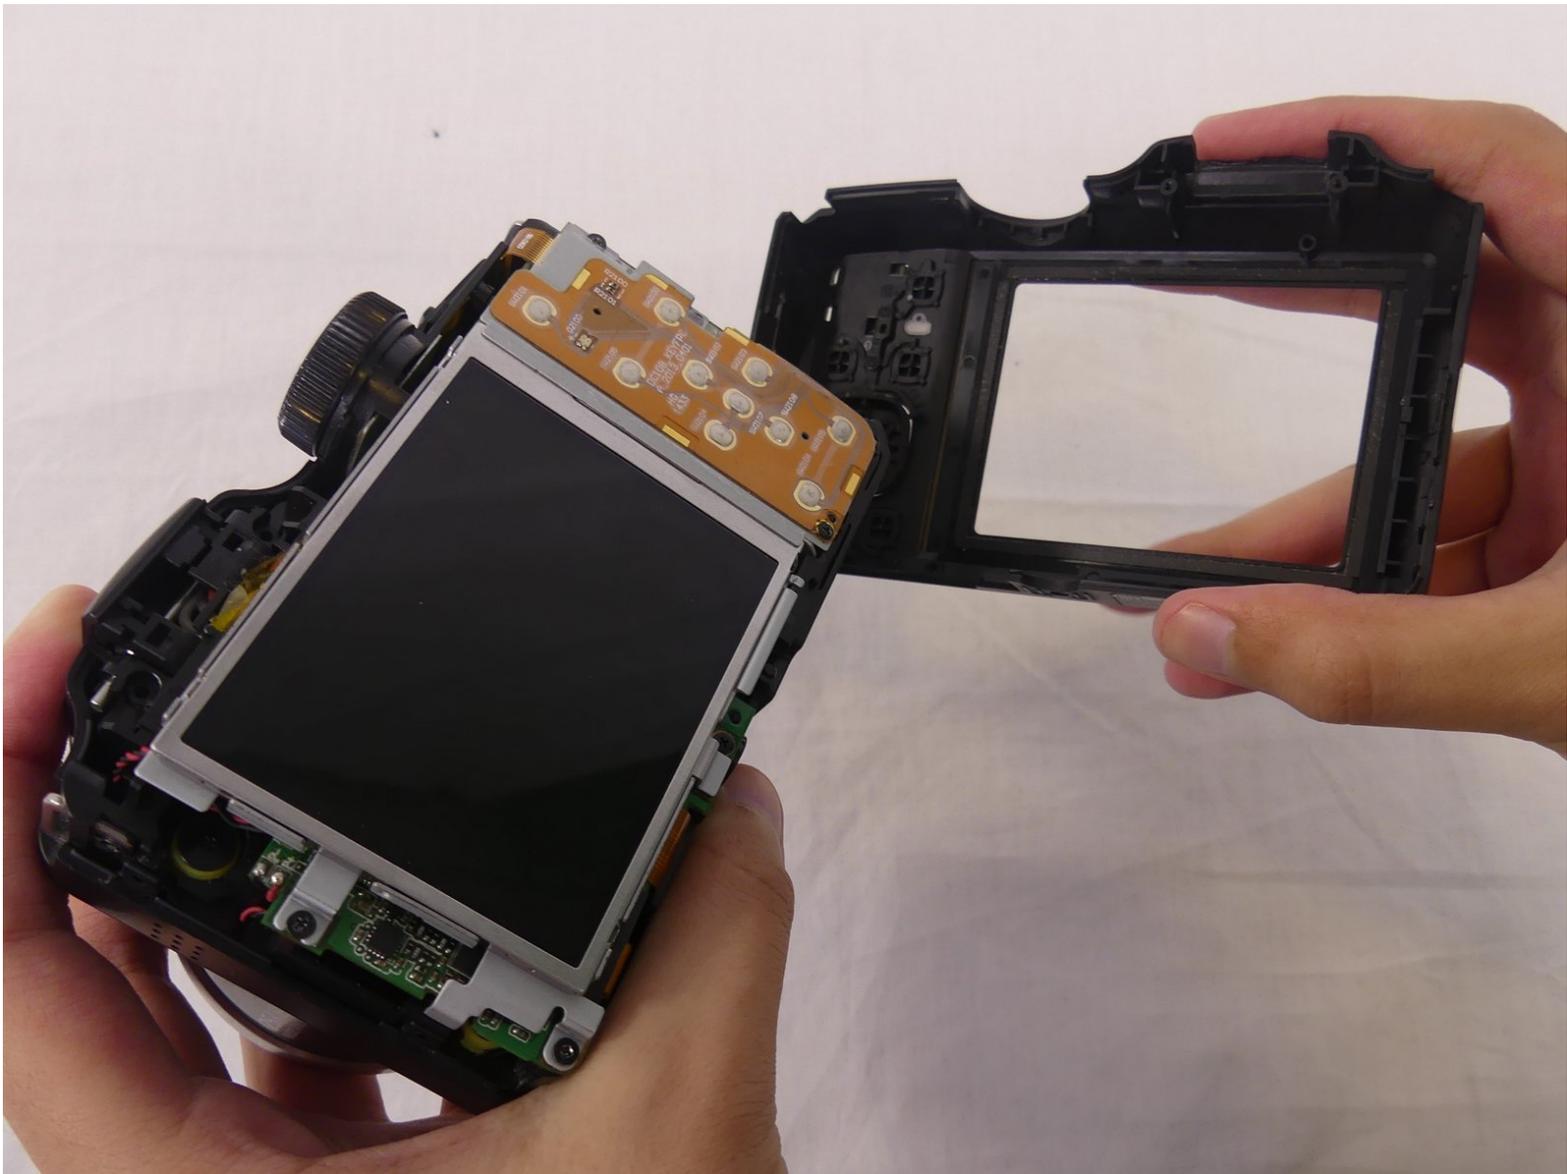

Kodak PixPro AZ251 Back Cover Replacement

This guide will provide instructions on how to remove the back cover from Kodak PixPro AZ251 to access interior component parts.

Written By: Luiza Oliveira



INTRODUCTION

Removing the back cover of your Kodak PixPro AZ251 gives you access to the camera's LCD screen and motherboard. This guide will instruct you on how to remove the back cover of your Kodak PixPro AZ251.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [JIS #000 Screwdriver](#) (1)
 - [JIS #00 Screwdriver](#) (1)
-

Step 1 — Batteries



- Slide switch to open lock position.

Step 2



- Press down on the battery cover and slide outwards to open.

Step 3



- Remove the batteries.

Step 4 — Back Cover



- Remove a total of four 5mm JIS #000 screws from around the camera:
 - Two screws from the right side.
 - Two screws from the left side.

Step 5



- Remove the single 5mm Phillips #00 screw from the bottom.

Step 6



- Open the flash module.
- Remove the two 6mm JIS #00 screws found inside of the flash housing.

Step 7



- Use a plastic opening tool to pry apart both halves of the camera.
- Remove the back panel.

To reassemble your device, follow these instructions in reverse order.