




Panasonic Lumix DMC-FX9 Selector Buttons Replacement

This guide will teach you how to replace the buttons on your camera.

Written By: Kriselle Tubongbanua

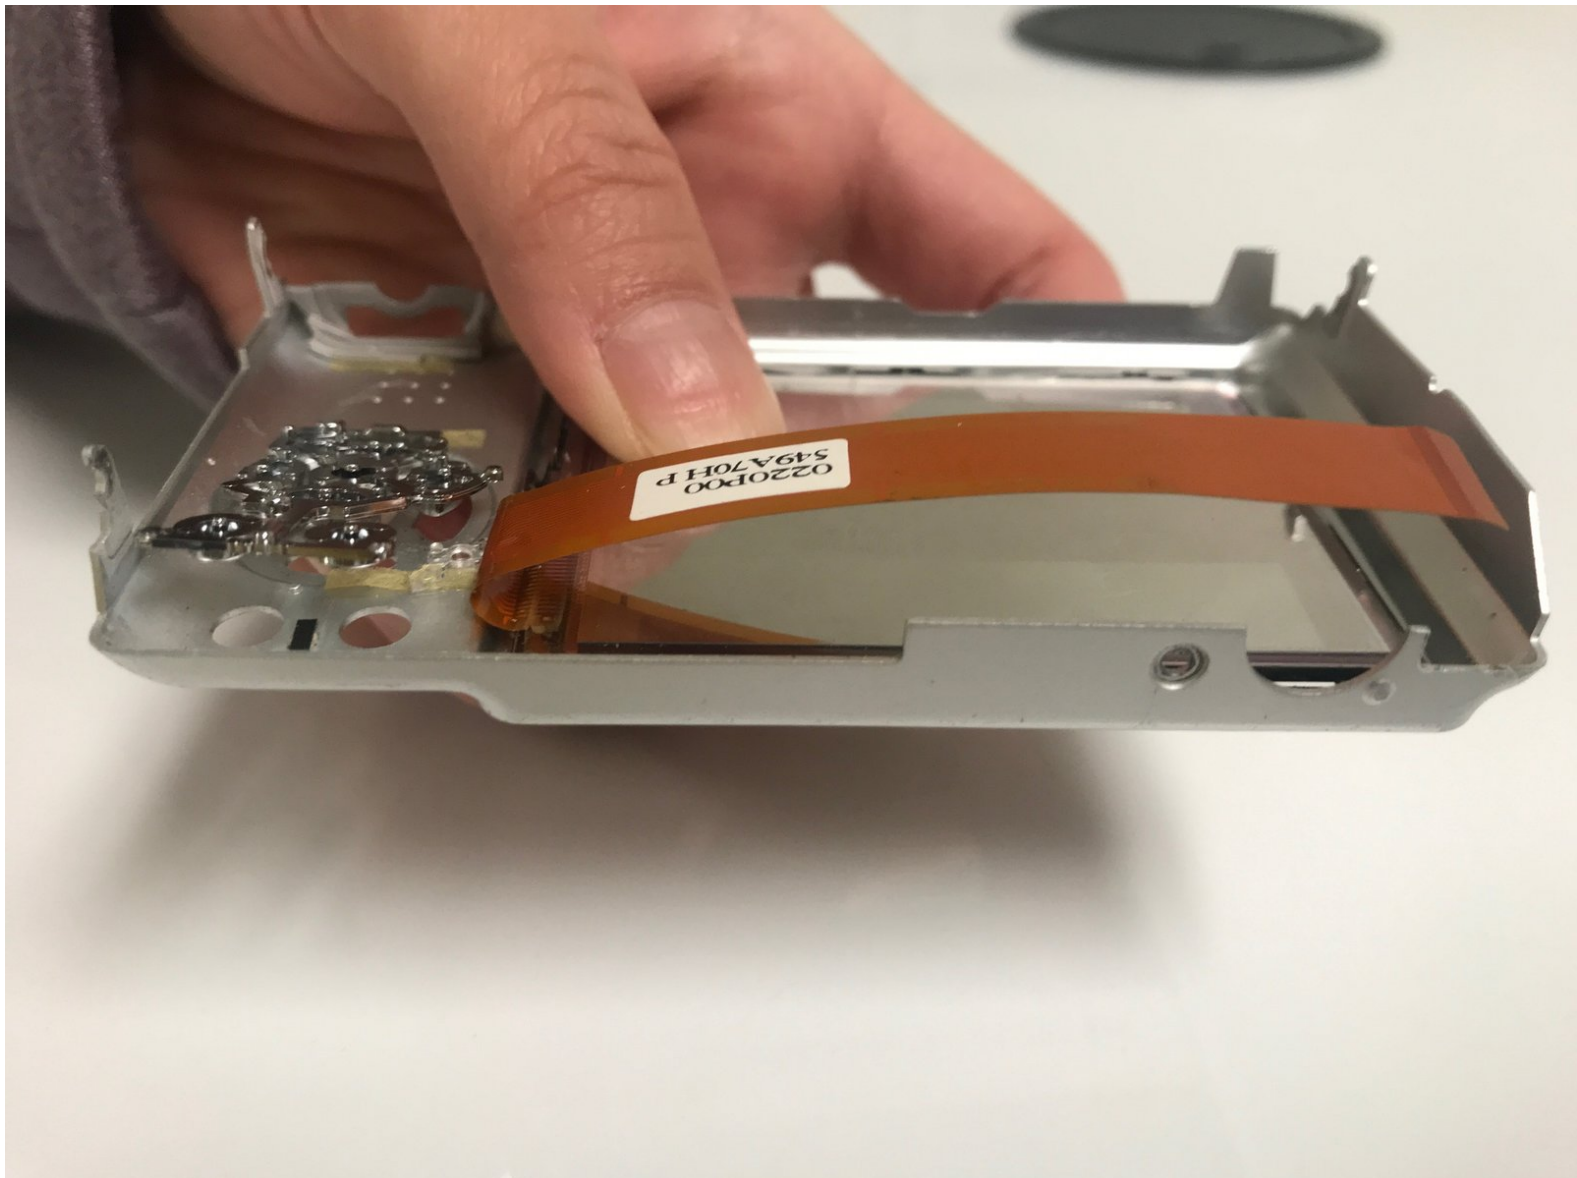



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Selector Buttons



- Make sure the power is off by switching the power switch to the left.

Step 2



- Use a Phillips #00 screwdriver to remove the screws on the left side of the camera.

Step 3




- Remove the screws on the right side of the camera by using the Philips #00 screwdriver.

Step 4





- Remove the screws on the bottom side of the camera using the Philips #00 Screwdriver.
- Separate the covers by gently applying force upwards, carefully placing the opening tool between the two covers.

Step 5

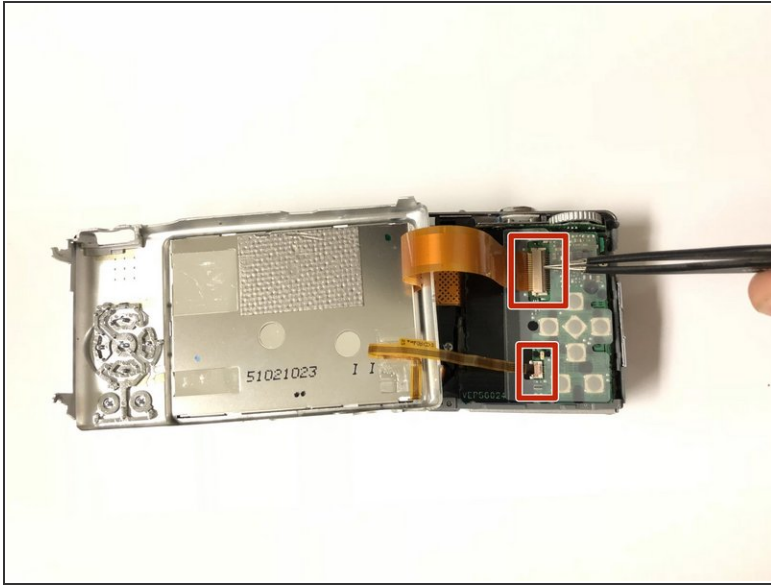

- Lift the ZIF tabs up with the opening tool and carefully remove the digitizer ribbon cables.
- Remove the LCD Screen from the glass frame carefully with the opening tool.

Step 6

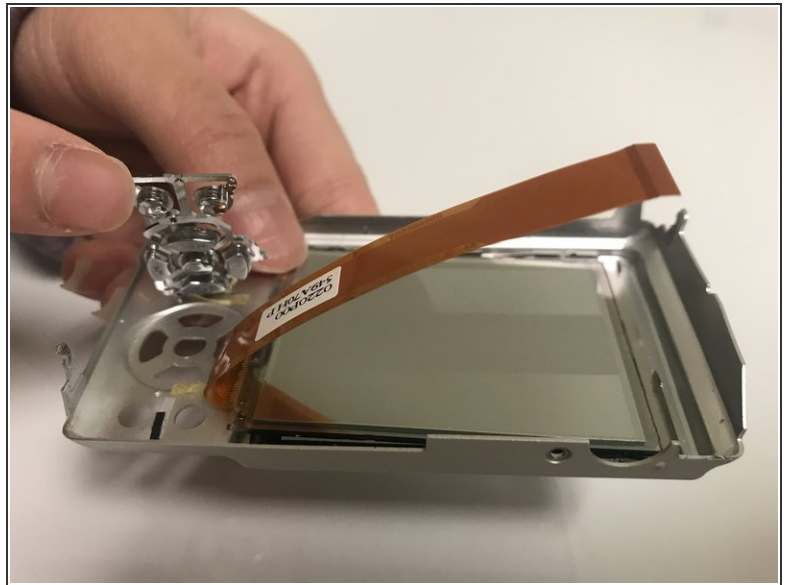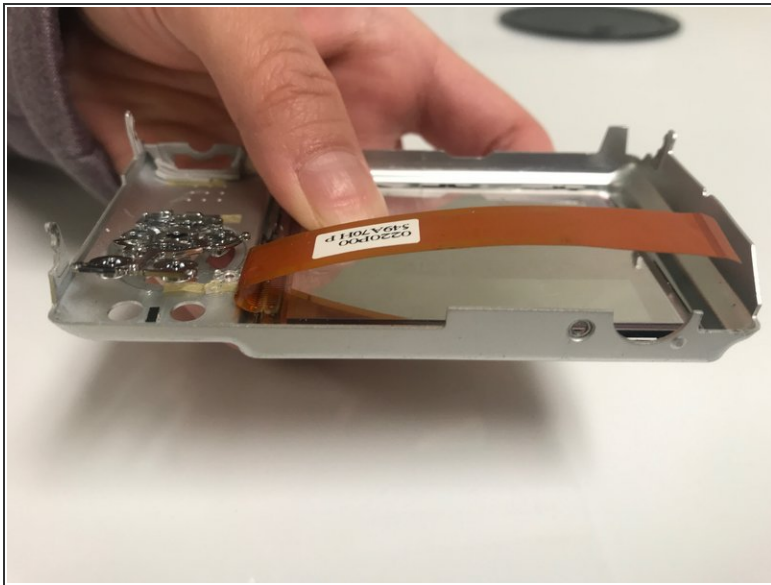

- Push on the back panel buttons on the front side to remove the buttons.
- ⚠ Be cautious of the adhesive holding the button panels to the cover. Apply extra force if necessary.

To reassemble your device, follow these instructions in reverse order.