




Dell XPS 15 L521X RAM Replacement

This guide will teach you how to replace the ram on your Dell XPS 15 L521X

Written By: SHELDON SANTOS

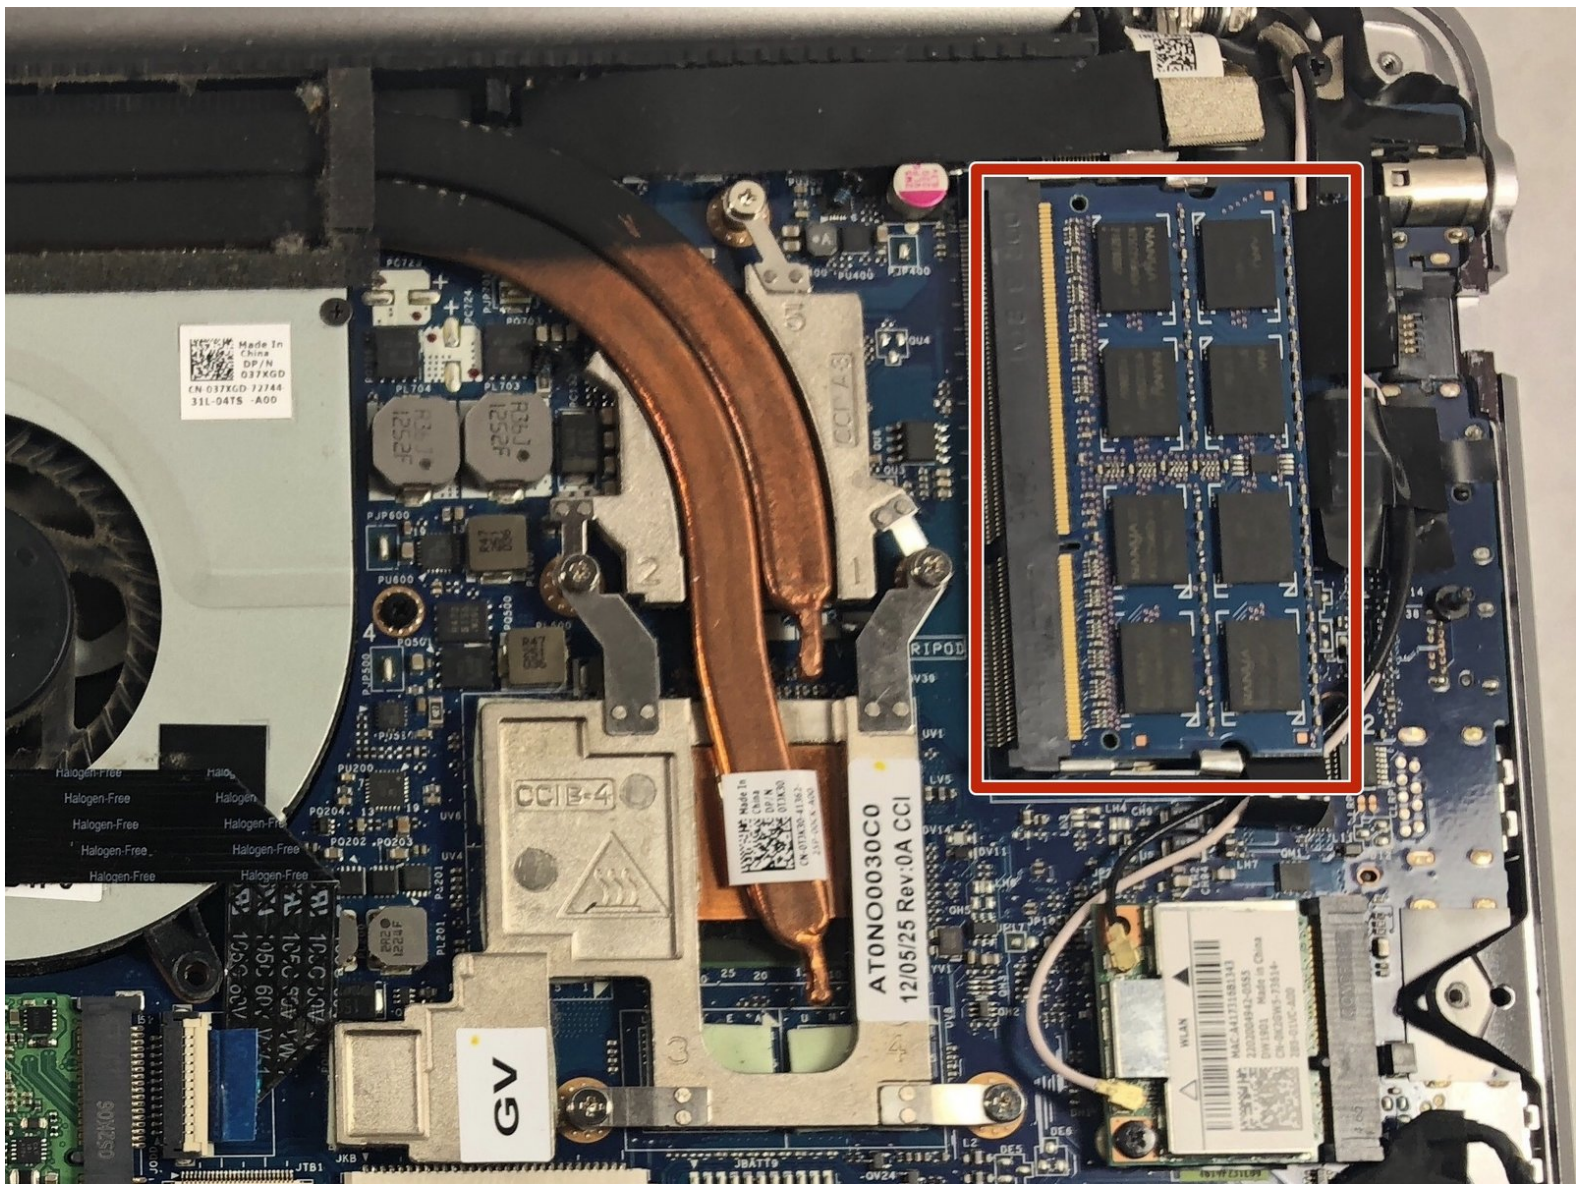

INTRODUCTION


Replacing the ram is the easiest replacment on the Dell XPS, there are no screws to remove if you don't count the back panel. The only thing holding the RAM in place are two clips, and after unclipped the RAM slides right out.



TOOLS:


- [Phillips #0 Screwdriver](#) (1)
 - [T5 Torx Screwdriver](#) (1)
-

Step 1 — Back Panel

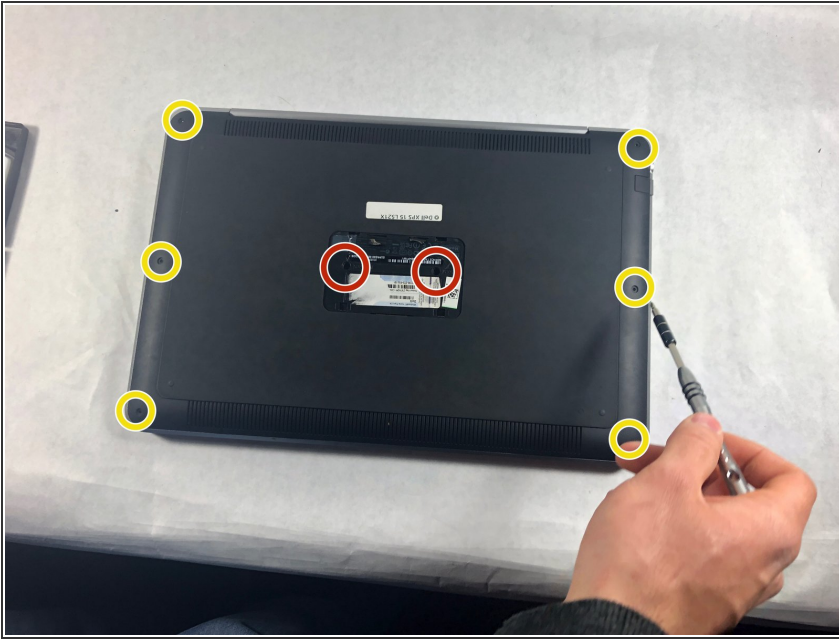


- Find and remove the two .3cm torx head screws using a T5 screwdriver.
- Find and remove the six Phillips head .3cm screws using a Phillips #0 screwdriver.

Step 2

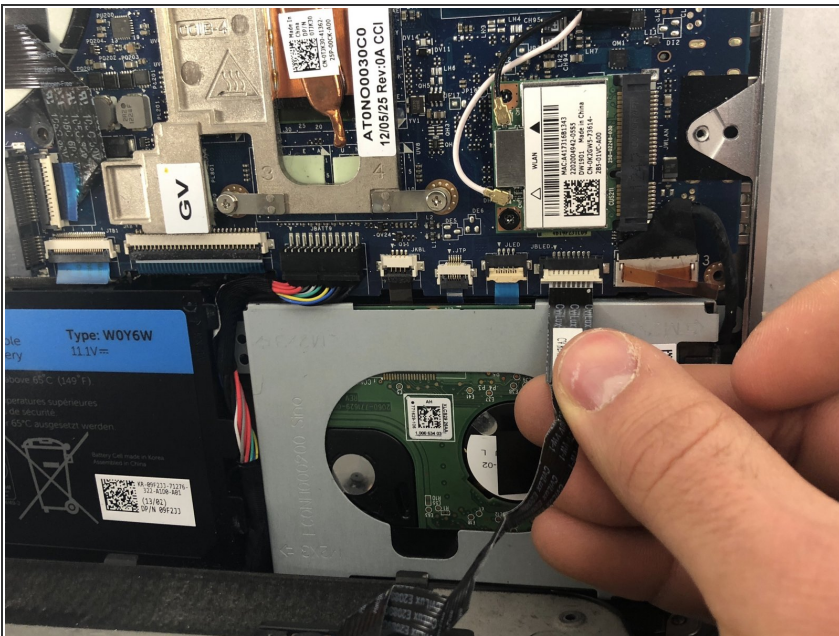


- Unplug the battery indicator.

Step 3 — RAM

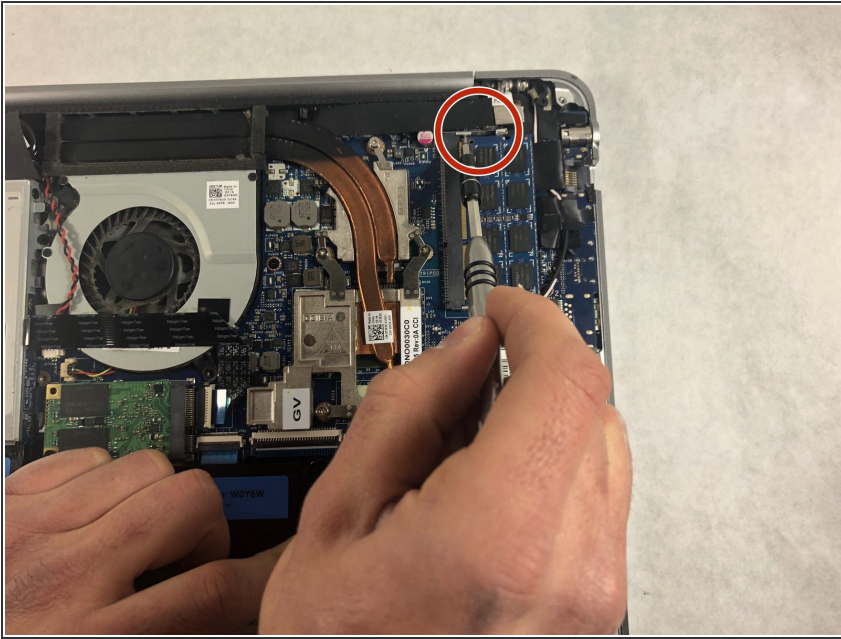

- There are two clips holding the ram in, simply unclip them

Step 4

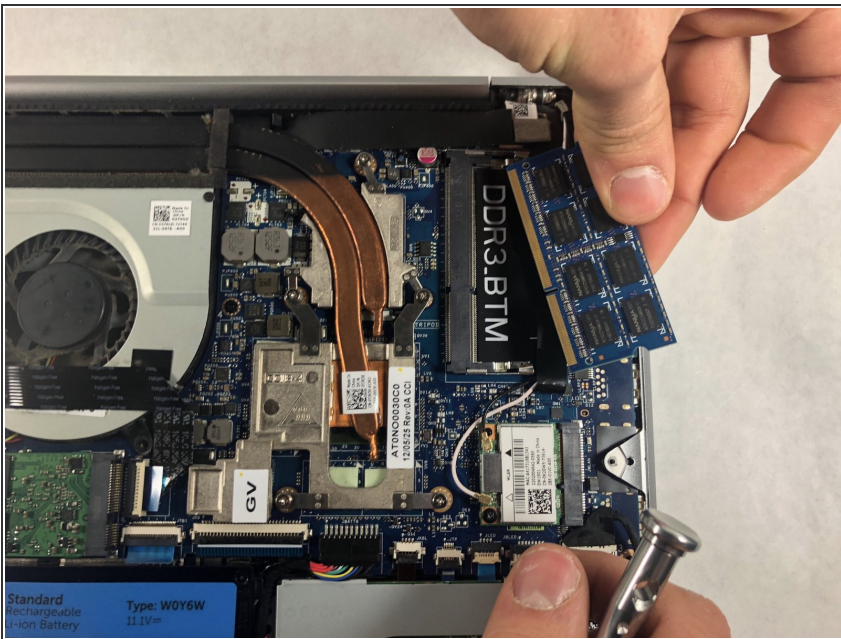

- Gently pull the RAM out of place.

To reassemble your device, follow these instructions in reverse order.