

HP Pavilion G7-2289wm RAM Replacement

This guide provides instruction on how to...

Written By: Ryson Smith




INTRODUCTION

This guide provides instruction on how to replace the RAM module.

🖌 TOOLS:


Phillips #0 Screwdriver (1)

Step 1 — Battery

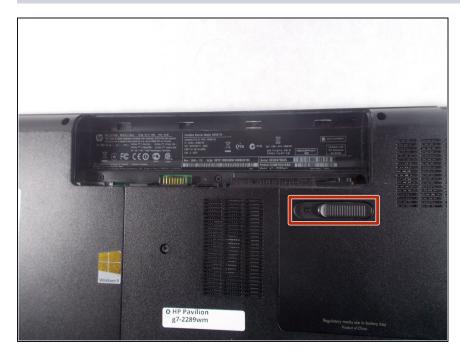


- Located on the bottom side of your laptop, slide the battery release latch to the left, towards the center of the laptop.
- Lift the battery up, and pull towards the center of the laptop to remove it.

Step 2 — RAM

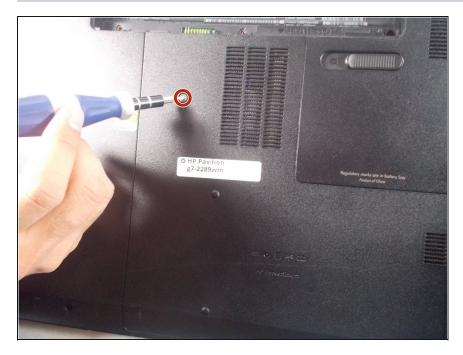

- Loosen the screw that secures the service cover.
- Pull the service cover towards you to remove it.

Step 3

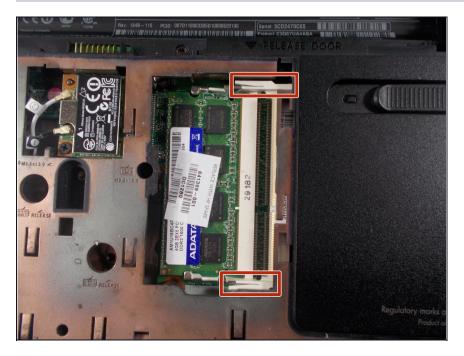

• Unlock the tabs on each side of the ram module. (this lifts the ram module up)

Step 4



 Remove the ram module by pulling it gently away from the slot.

To reassemble your device, follow these instructions in reverse order.