


Gateway P-6831FX Keyboard Replacement

The keyboard is a component that will allow you to type and input commands. This guide will go over how to remove and replace the keyboard for the P-6831FX.

Written By: Justin Freitas

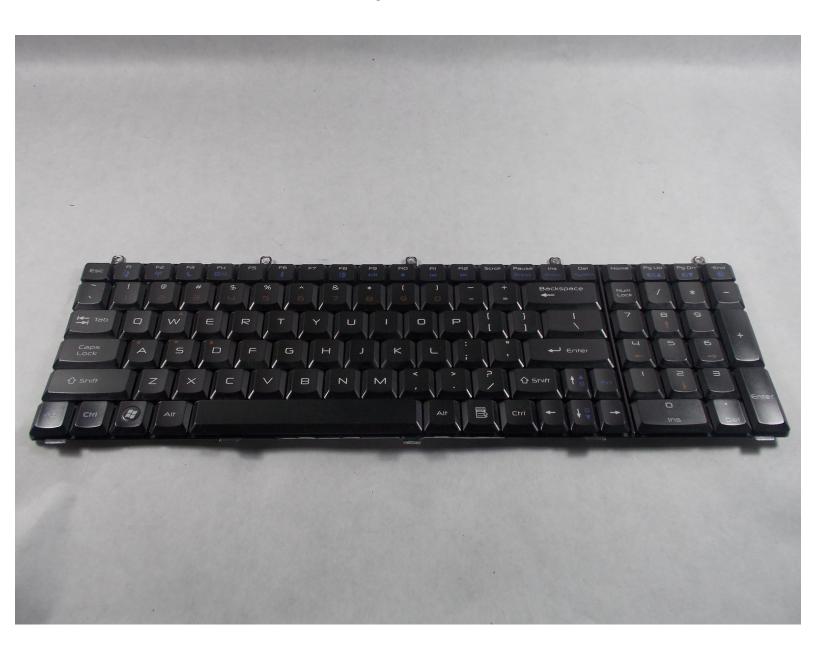

INTRODUCTION

The keyboard is a component that will allow you to type and input commands on your device. This guide will go over how to remove and replace the keyboard for the P-6831FX.



TOOLS:

Phillips #0 Screwdriver (1)

Step 1 — Keyboard



- Open your laptop and lay it flat
- Locate the speaker grill/interaction bar.

Step 2







Remove the speaker grill/interaction bar by pulling up at both edges.

Step 3








Detach the two ribbon cables on the underside of the keyboard.

Step 4

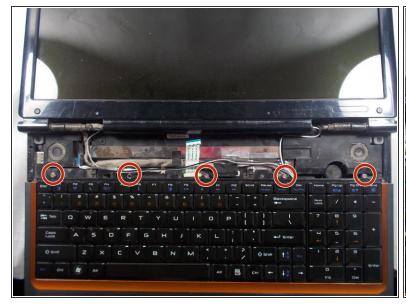




• Remove the five Philips #0 (3mm) screws securing the keyboard in place.

Step 5



 Pull the keyboard up and away from you.

Step 6

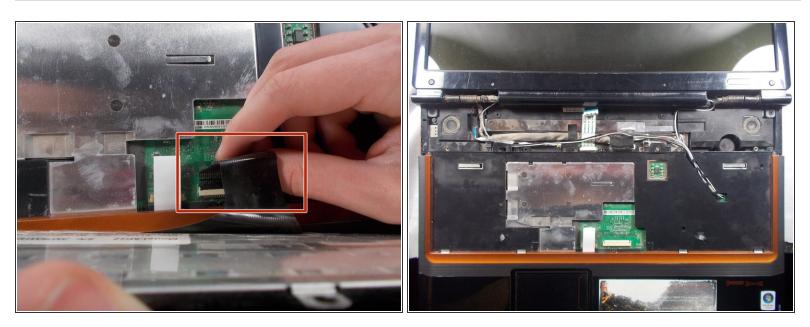

• Remove the ribbon cable attached underneath to the keyboard.

To reassemble your device, follow these instructions in reverse order.