


## **Dell Studio 1747 Base Cover Replacement**


Written By: Johnathan Hammond

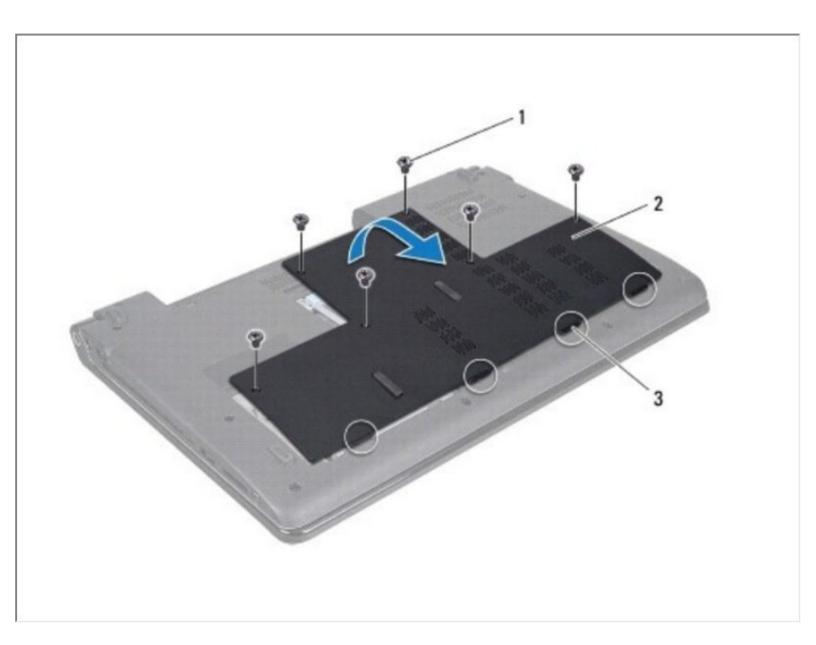




Phillips #0 Screwdriver (1)

## Step 1 — Battery

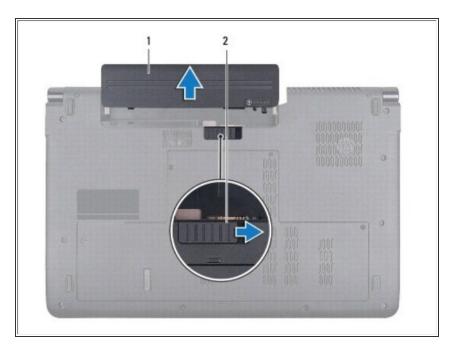

- Slide the battery release latch until it clicks into place.
- Slide the battery out of the battery bay.

## Step 2 — Base Cover

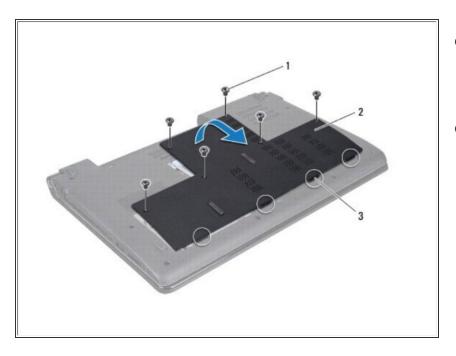

- Remove the six screws that secure the base cover to the computer base.
- Lift the base cover off the computer at an angle as shown in the following illustration.

To reassemble your device, follow these instructions in reverse order.