

## **Dell Precision M4700 Battery Replacement**

Written By: Johnathan Hammond



## Step 1 — Battery





- Slide the release latch to unlock the battery.
  - Flip and remove the battery from the computer.

To reassemble your device, follow these instructions in reverse order.