




Alcatel Fierce 4 Front-Facing Camera Replacement

Follow this guide to replace the front-facing Camera in a Alcatel Fierce 4 smartphone.

Written By: Rawan

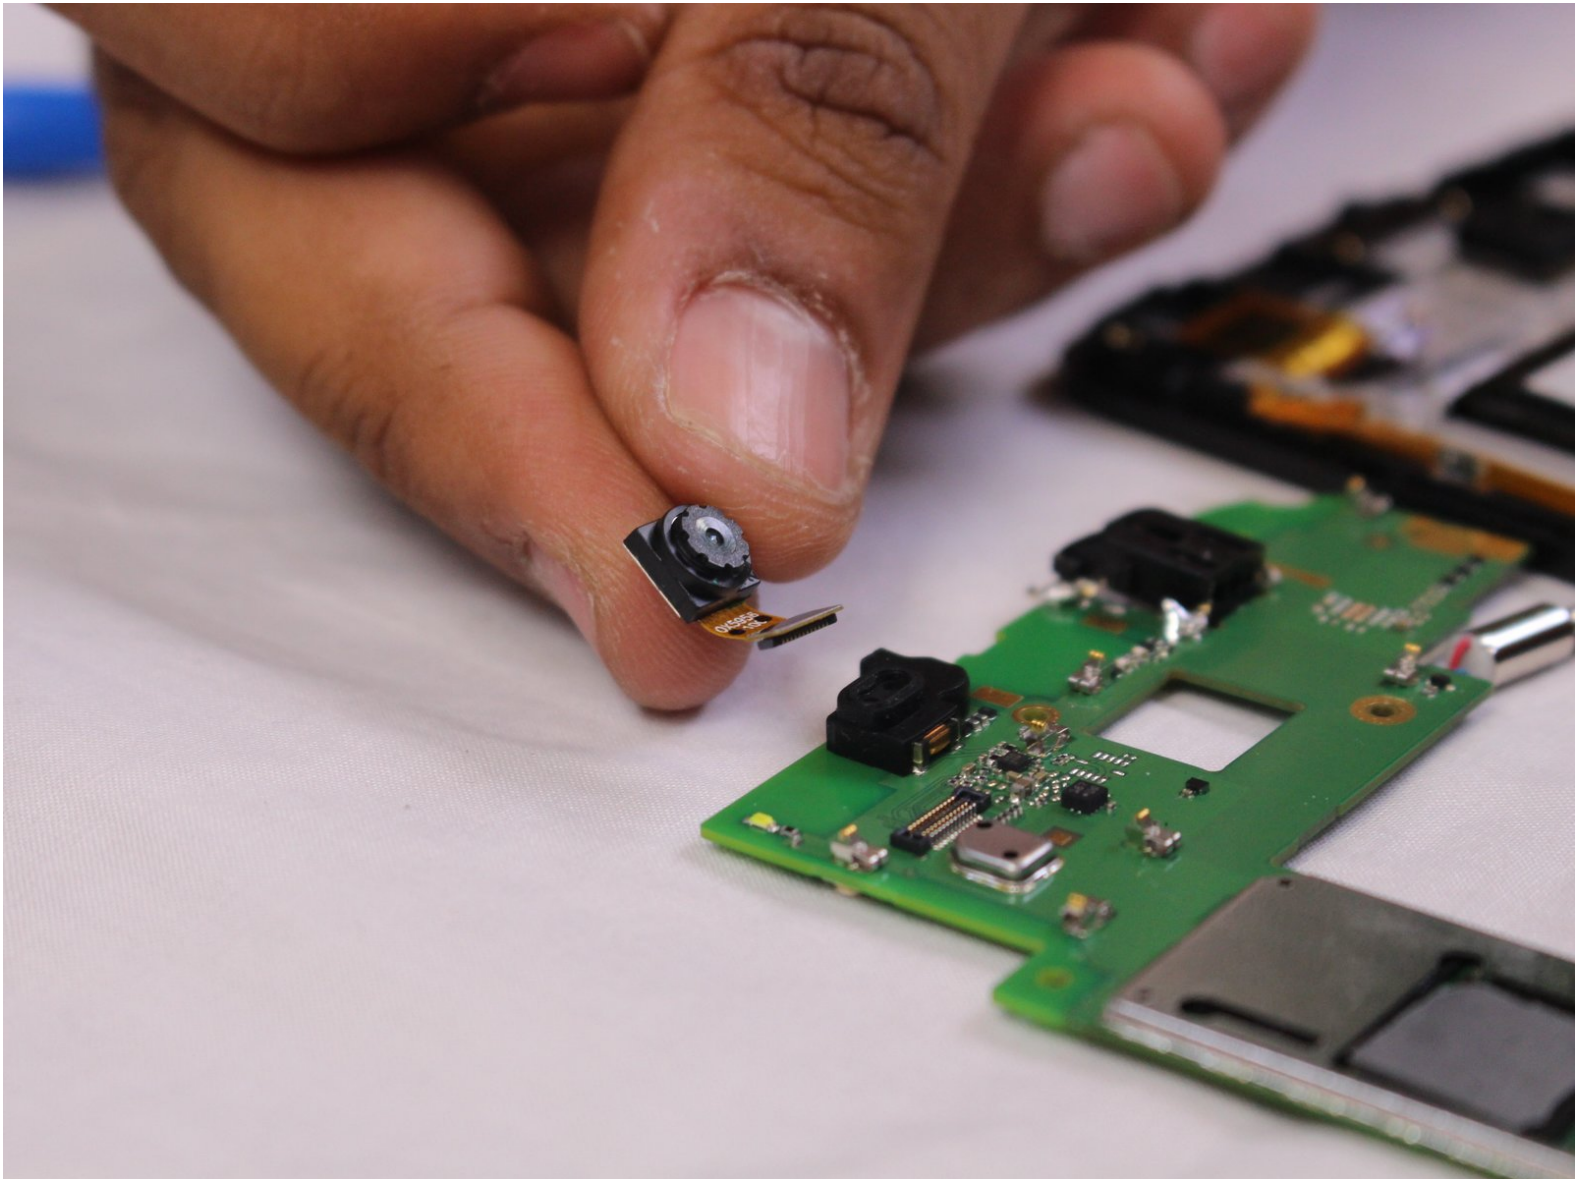

INTRODUCTION


If you're noticing that Alcatel Fierce 4's Front camera is not functioning well and has black spots or slow but you are not ready to upgrade your phone and you like it. It's the time to replace the camera. Follow this guide from start to finish!



TOOLS:

- [Tweezers](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
 - [Spudger](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery

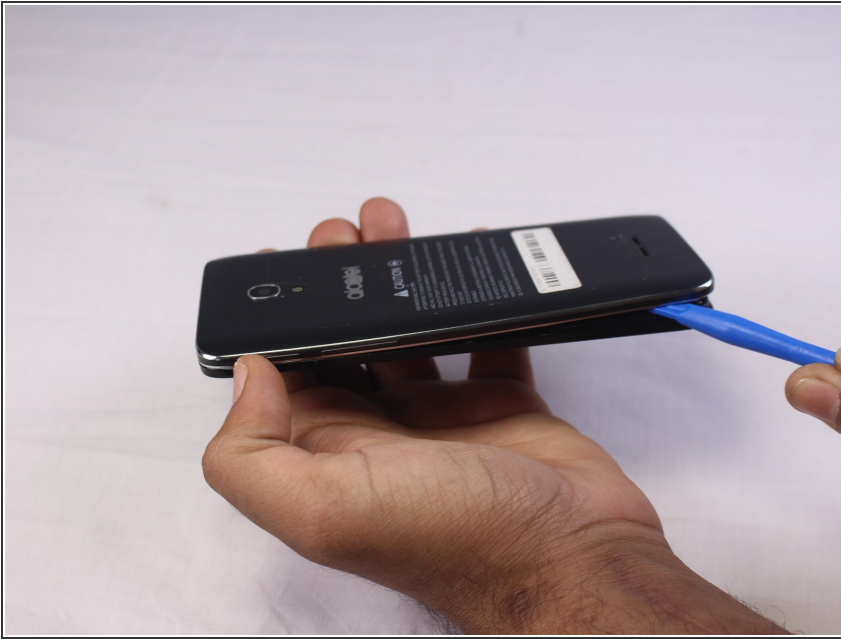

- Using a plastic opening tool, pry the back cover off of the phone.

Step 2




- Remove the seventeen Phillips #000 screws from the mid-frame.

Step 3




- Pry off the mid-frame using a plastic opening tool, working your way around the perimeter.

Step 4

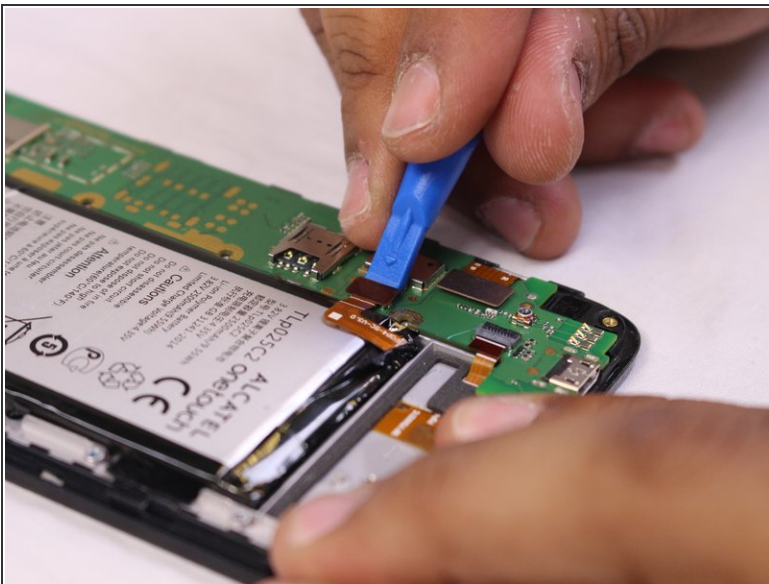

- Use a plastic opening tool to disconnect all of the cables on the motherboard.
- Use a spudger to flip up the retaining flap on the ribbon cable [ZIF](#) sockets.

Step 5

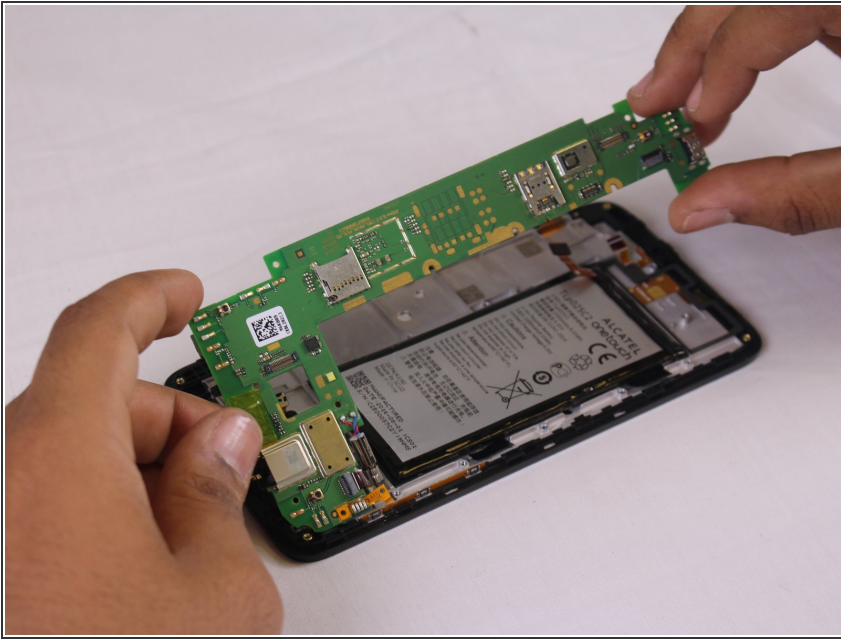


- Remove the motherboard from the phone.

Step 6



- Carefully pry up the battery with a plastic opening tool, or your hands.

Step 7 — Front-Facing Camera

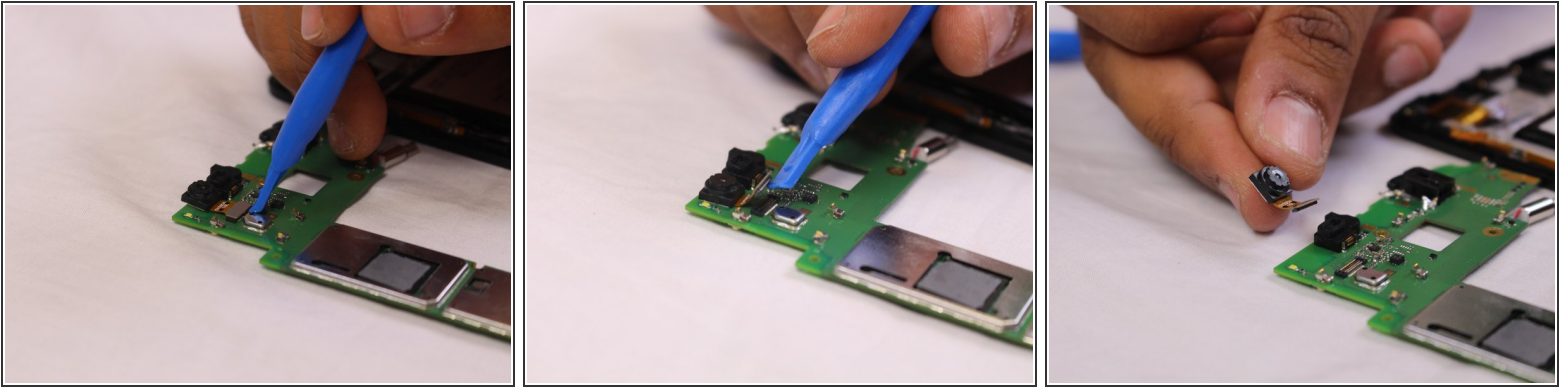

- Use a plastic opening tool to pry up the camera connector from the motherboard.
- Remove the camera.

To reassemble your device, follow these instructions in reverse order.