




Alcatel Fierce 4 Camera Replacement

A guide on how to replace the the camera in Alcatel Fierce 4 smartphone.

Written By: Rawan

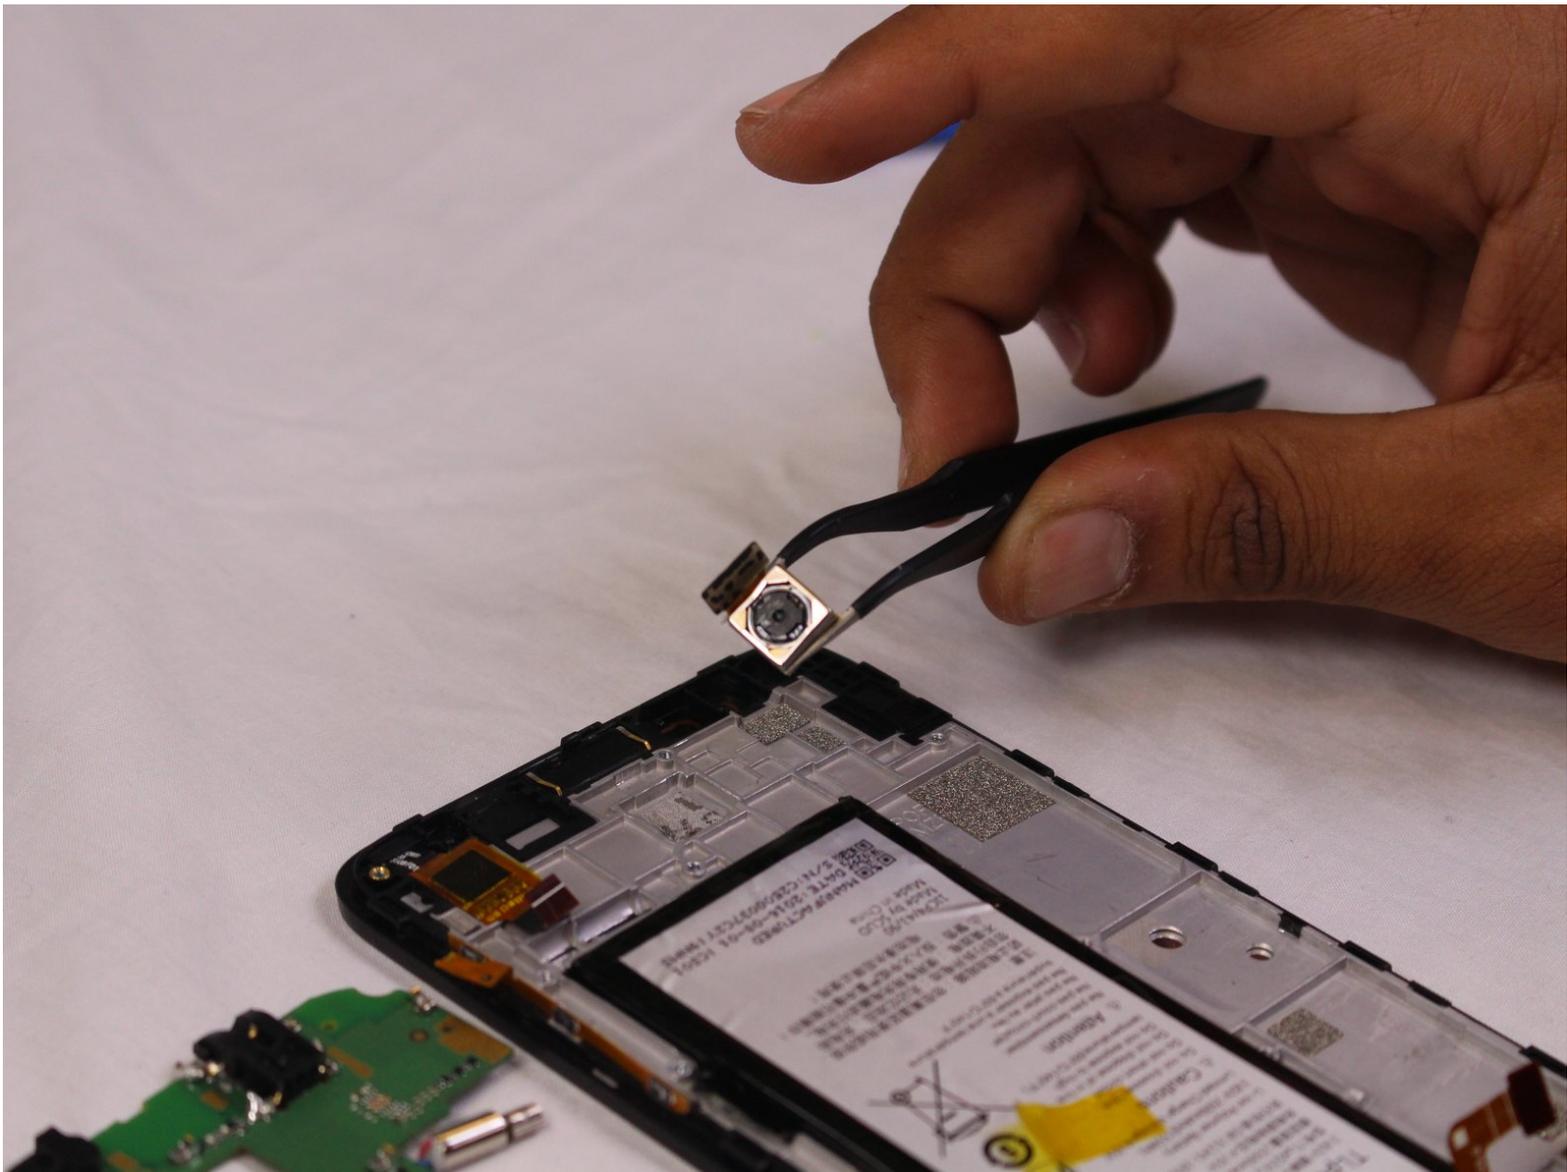


INTRODUCTION

Alcatel Fierce 4 Camera is not working well? black spots? Might be the time for a replace. Don't waste your money and let someone do it for you. You can do it using this guide

TOOLS:


- [Tweezers](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
 - [Spudger](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery

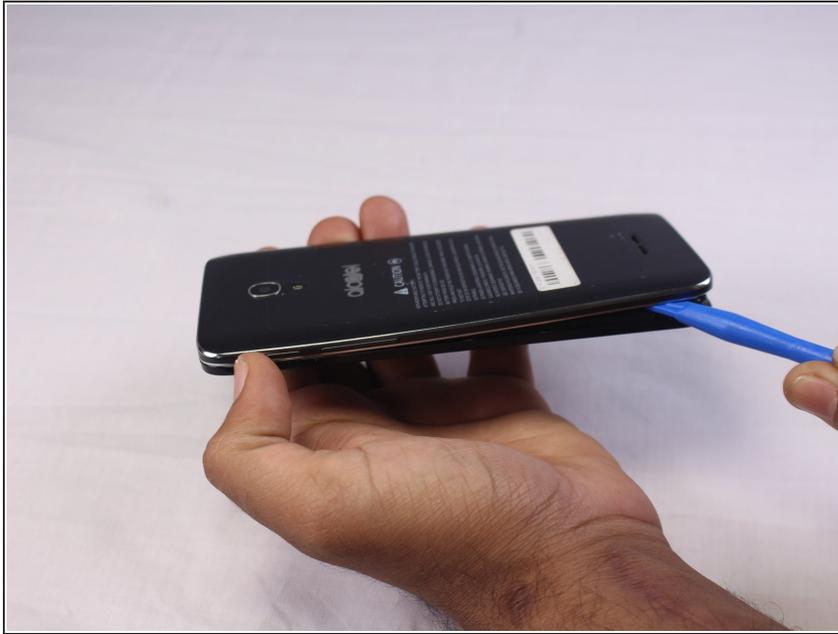


- Using a plastic opening tool, pry the back cover off of the phone.

Step 2

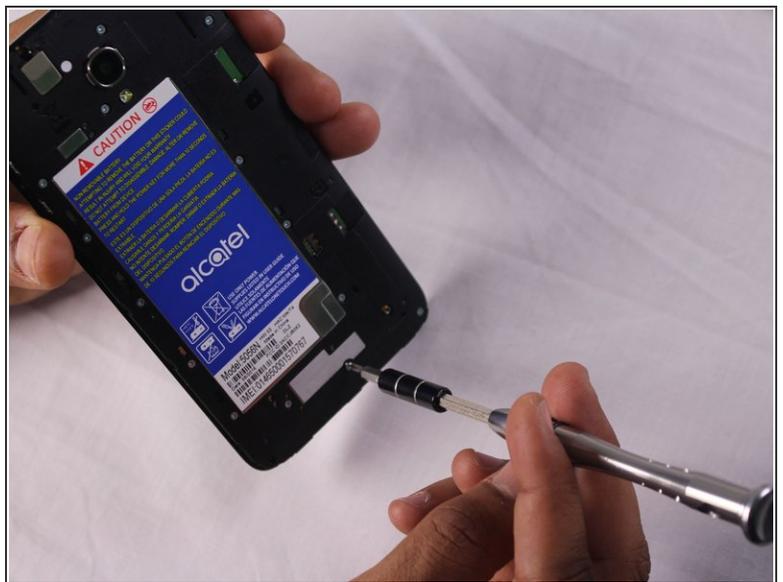



- Remove the seventeen Phillips #000 screws from the mid-frame.

Step 3

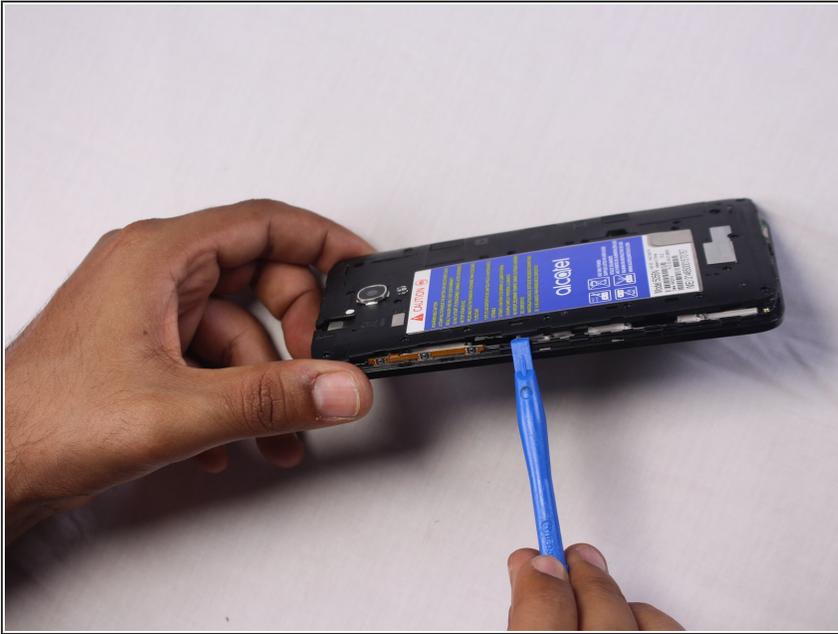

- Pry off the mid-frame using a plastic opening tool, working your way around the perimeter.

Step 4

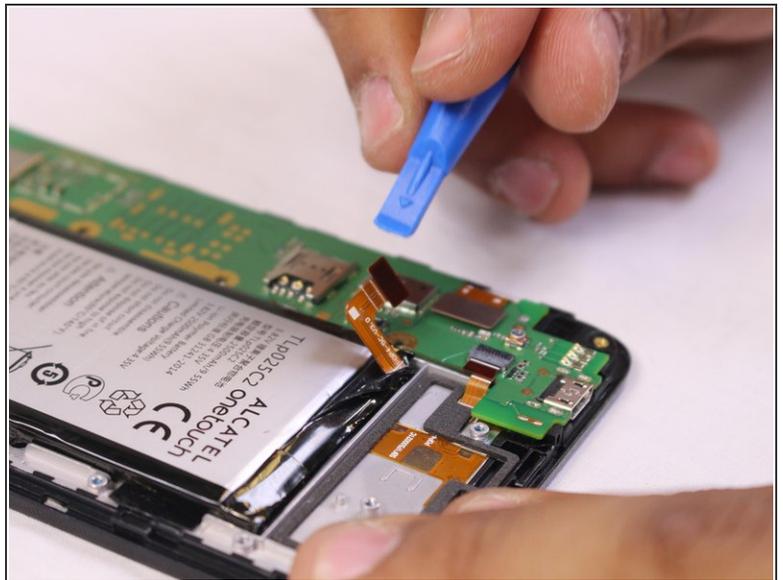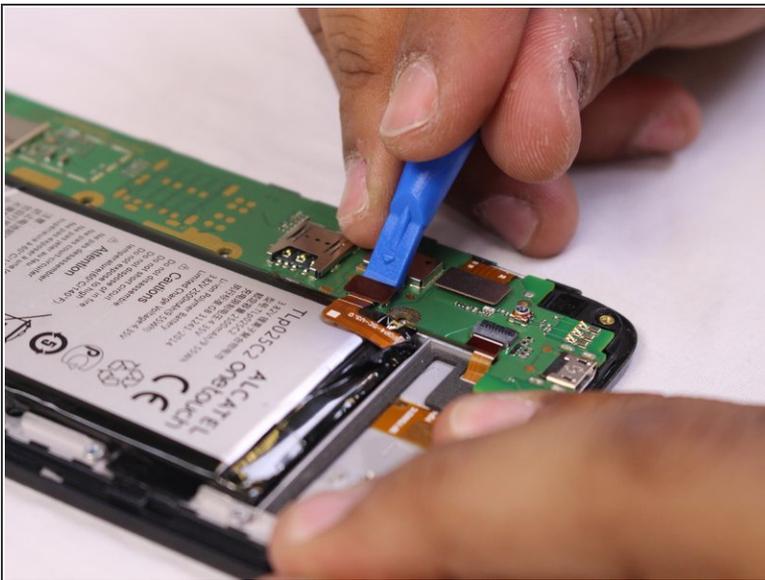

- Use a plastic opening tool to disconnect all of the cables on the motherboard.
- Use a spudger to flip up the retaining flap on the ribbon cable [ZIF](#) sockets.

Step 5




- Remove the motherboard from the phone.

Step 6




- Carefully pry up the battery with a plastic opening tool, or your hands.

Step 7 — Camera

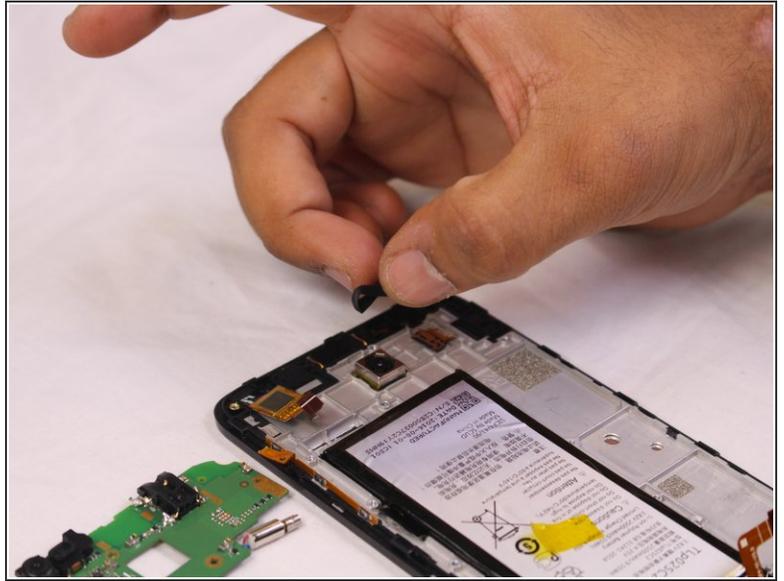

- Remove the rubber piece surrounding the camera.

Step 8

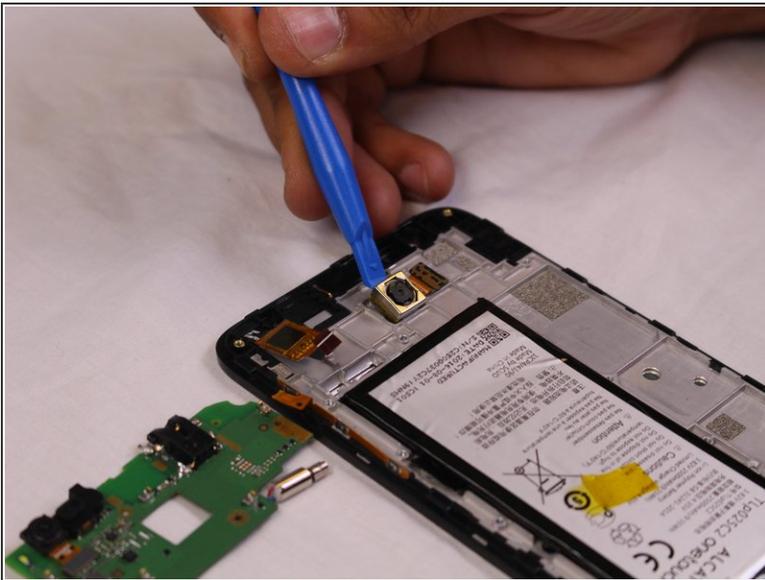

- Use a plastic opening tool to pry up the camera.

To reassemble your device, follow these instructions in reverse order.