

Dell Precision M4600 KeyBoard Replacement

Written By: Johnathan Hammond





- Spudger (1)
- Phillips #0 Screwdriver (1)

Step 1 — Battery





- Slide the battery release latch into the unlock position.
 - Remove the battery from the system.

Step 2 — Keyboard Trim








- Using a plastic scribe, pry under the keyboard trim to release it from the computer.
 - Work your way around the sides and bottom edge of the keyboard trim.
 - Lift up to remove the keyboard trim from the unit.

Step 3 — KeyBoard







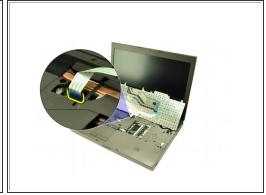


- Remove the screws securing the keyboard in place.
 - Starting from the bottom of the keyboard, separate the keyboard from the system and turn the keyboard over.
 - Disconnect the keyboard data cable from the system board.

Step 4

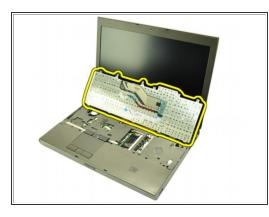


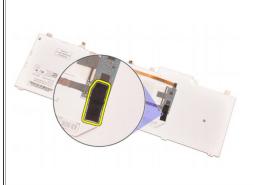

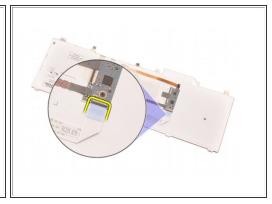

- Remove the keyboard.
 - Peel back the adhesive tape securing the keyboard data cable to the back of the keyboard.
 - Disconnect the keyboard data cable from the back of the keyboard.

Step 5

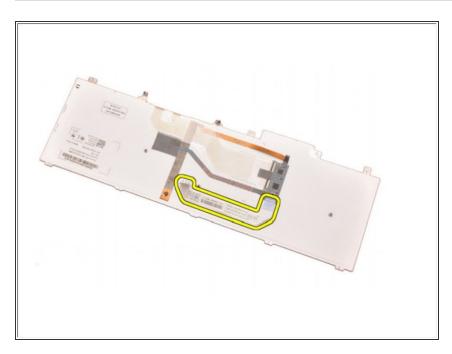

 Peel the keyboard data cable away from the keyboard and remove.

To reassemble your device, follow these instructions in reverse order.