



# HP-Compaq G71-329WM LCD Replacement

Replacing a broken LCD in a HP G71-329WM

Written By: Brent Norris




---

 **TOOLS:**

- [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — LCD

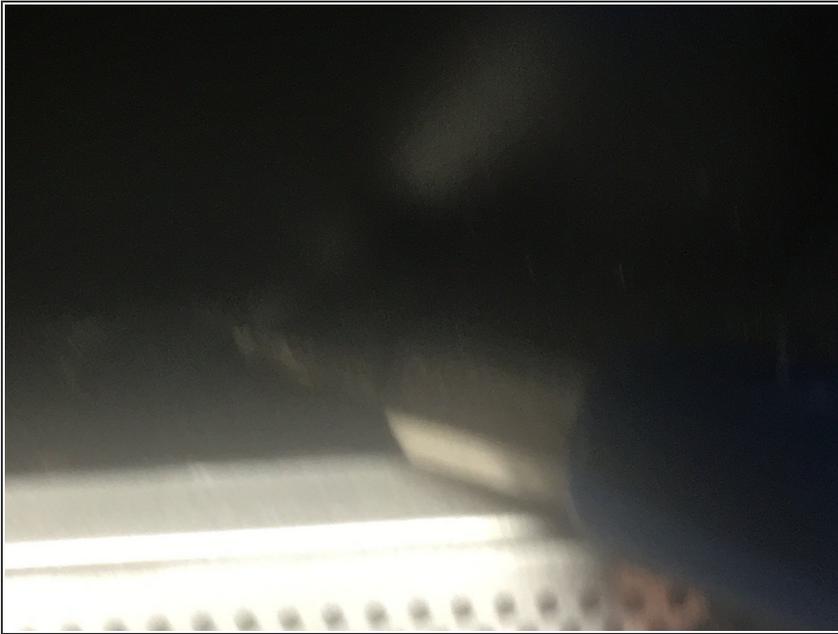


- Remove the 2 Screw covers from the lower sides of the Bezel

## Step 2



- Remove the 2 Screws using a PH#1

### Step 3

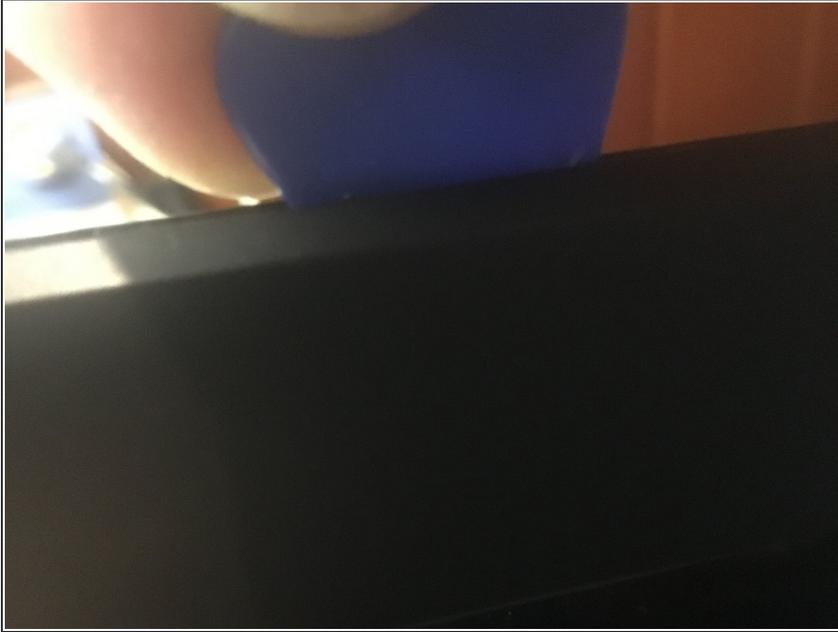

- Use a pick along the top and sides of the bezel to start removing the bezel. Use your fingers to gently pry from the bottom of the bezel while pulling up. Bezel is very fragile.

### Step 4



- Remove the 2 screws from the top of the frame, One on each side.

## Step 5



- Remove the 4 screws holding the LCD to the frame. 2 on each side.

## Step 6



- Lay the LCD down on the keyboard and remove the webcam cable (if you have one) and remove the video cable.

To reassemble your device, follow these instructions in reverse order.