



# HP Elite x2 1012 G2 Screen Replacement

How to replace the HP Elite x2 1012 G2's screen.

Written By: Noah Stapp



---

## INTRODUCTION

The screen is one of the most commonly damaged components of the HP Elite x2 1012 G2. Additionally, this guide is an important prerequisite to all other repairs on this device. Thankfully, removal and repair of the screen is relatively easy.

---

### TOOLS:

- [iFixit Opening Tool](#) (1)
  - [T5 Torx Screwdriver](#) (1)
  - [Suction Handle](#) (1)
-

## Step 1 — Screen




- ❗ Make sure the device is turned off before starting.
- Orient the device so the back is facing you, with the kickstand up.

## Step 2



- Remove the six 3mm Torx T5 screws underneath the kickstand.

## Step 3

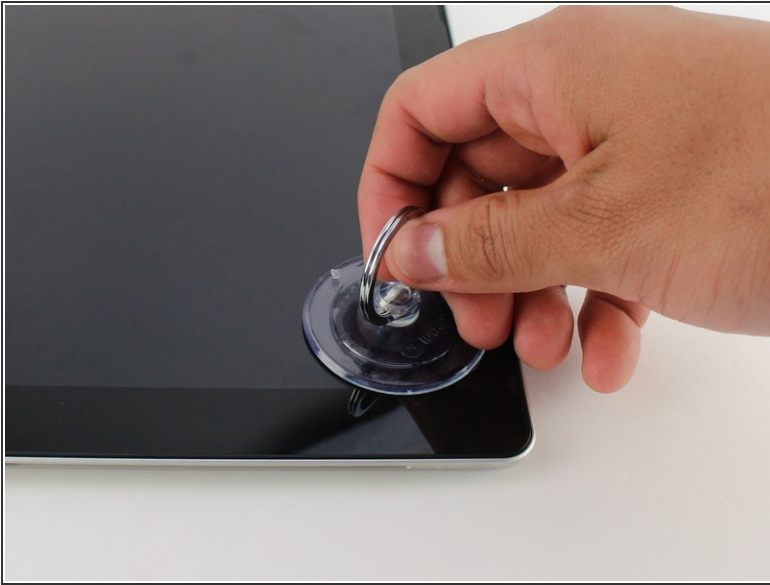

- Turn the device over so the screen is facing you.
- Place a suction cup firmly onto a corner of the screen.
- Lift up gently until you see the screen separate from the casing.
- Repeat this process for all four corners.





## Step 4



- Lift the screen up and off of the device.

⚠ Pry each corner up first, otherwise you may damage or crack the screen.

## Step 5

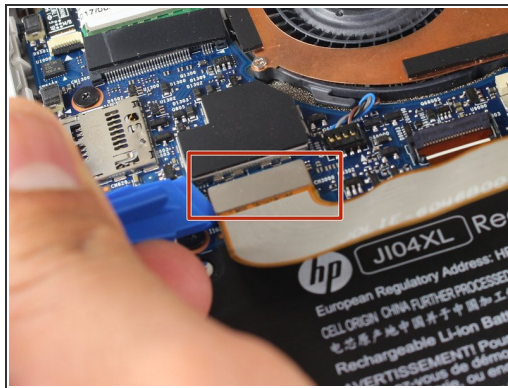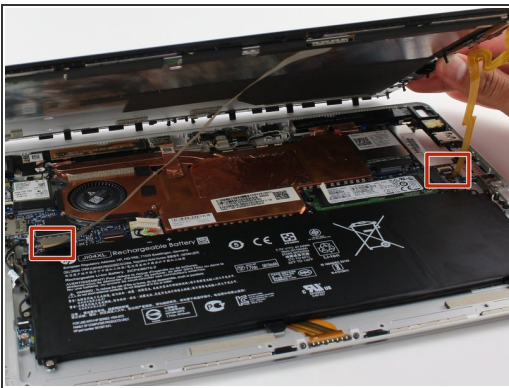

- Remove the two connectors on the back of the screen by lifting the connector tabs on the motherboard with a plastic opening tool and pulling gently.

## Step 6



- Remove the screen by gently lifting it off of the device.

To reassemble your device, follow these instructions in reverse order.