


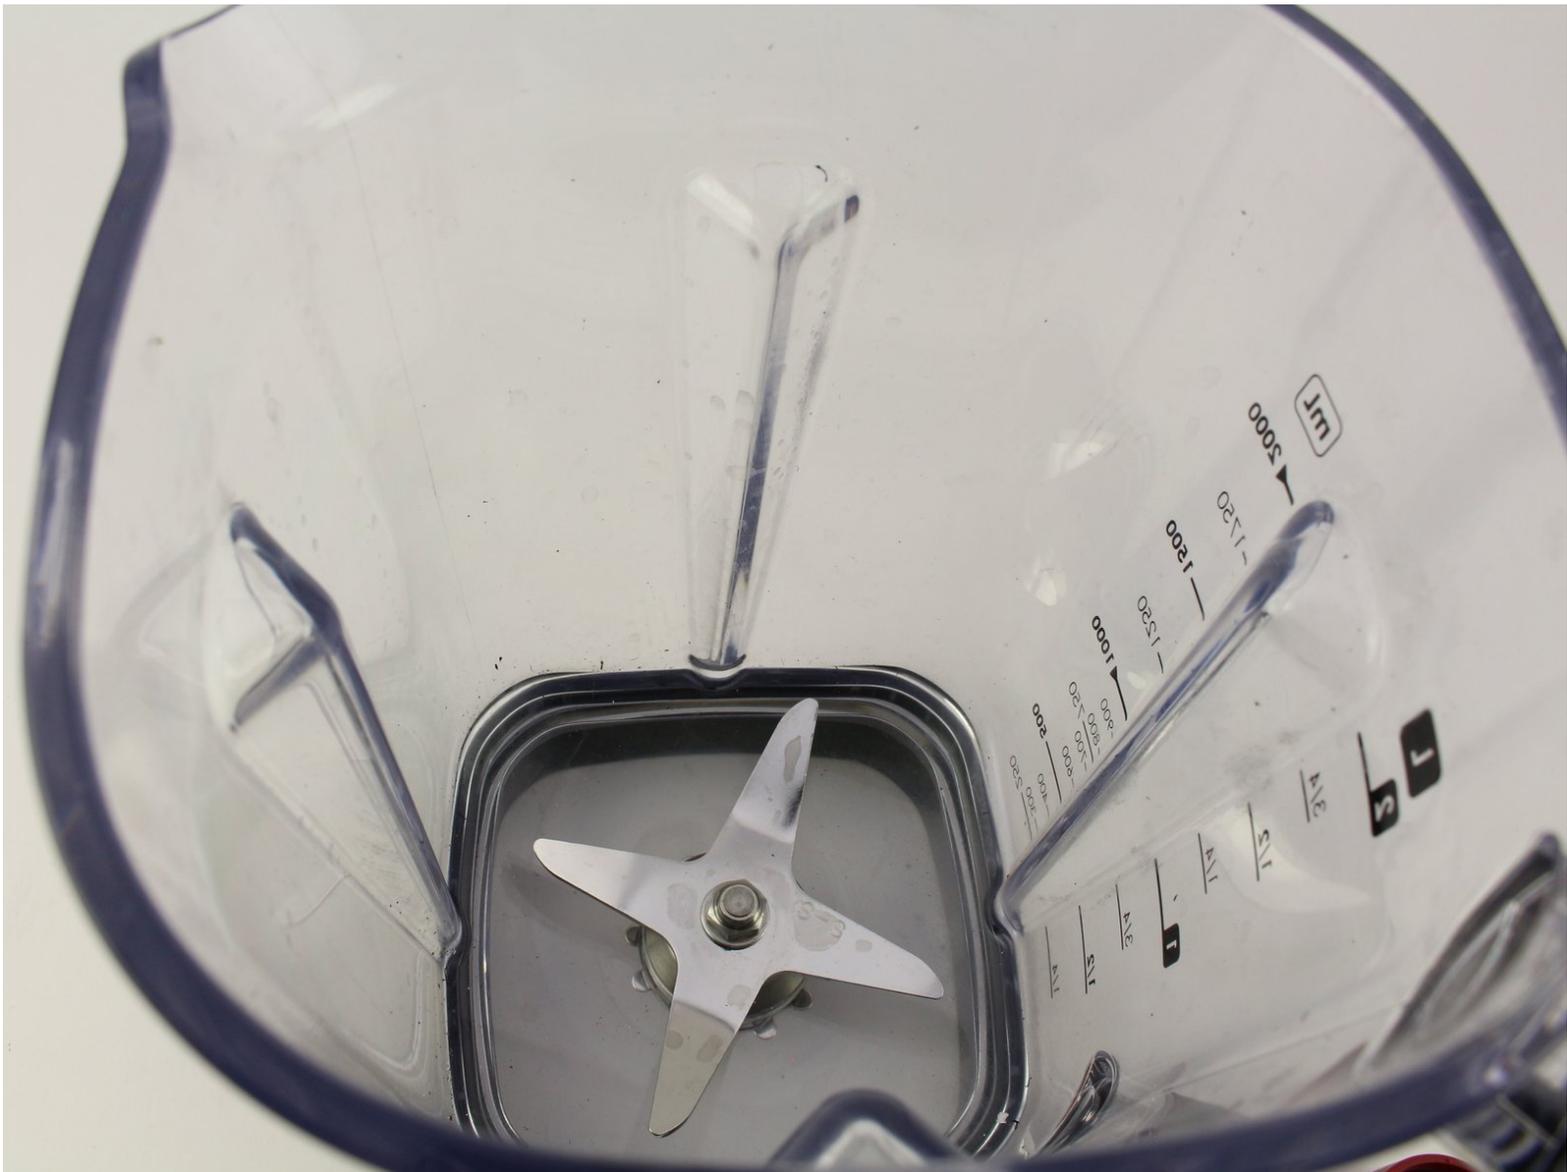

# Wolf Gourmet WGBL100S Blades Replacement

This is a guide for the replacement of blades in the Wolf Gourmet High-Performance Blender.

Written By: Luke Kutz



## INTRODUCTION

If your blender is not chopping food correctly, consider replacing the blades. The blades can be very sharp, so please take caution when proceeding with this guide.

---

### TOOLS:

- [54 Bit Driver Kit \(1\)](#)  
H4.0
- [Slip Joint Pliers \(1\)](#)
- [Adjustable Wrench \(1\)](#)
- [Flathead Screwdriver \(1\)](#)

### PARTS:

- [Wolf Blender Replacement Blades \(1\)](#)

## Step 1 — Blender Blades



- Flip over the pitcher to expose the base of the blade assembly.
- Using the H4.0 Allen key from the 54 bit driver kit, attached to an impact driver, remove the socket head cap screw from the drive coupling.
- ⓘ Apply a solvent to remove adhesive if necessary.

## Step 2



- Using a pair of pliers, pull of the drive shaft coupling.

### Step 3



- Using a flat head screwdriver and a mallet, bend down the two tabs holding the large nut.

### Step 4



- Remove the nut using a crescent wrench.

## Step 5



- Push the blade assembly into the jar.
- Remove the blades from the device.
- ⚠ Be careful not to cut yourself when handling the blades.

To reassemble your device, follow these instructions in reverse order.