



Acer One 10 S1003-114M Key Replacement

Replace an unlabeled or worn key using this replacement guide for the Acer One 10 S1003-114M.

Written By: Rachel Harrison



INTRODUCTION


Do you have a key that is broken or has worn markings? If so, use this guide to replace a key.



TOOLS:


- [Tweezers](#) (1)
-

Step 1 — Key

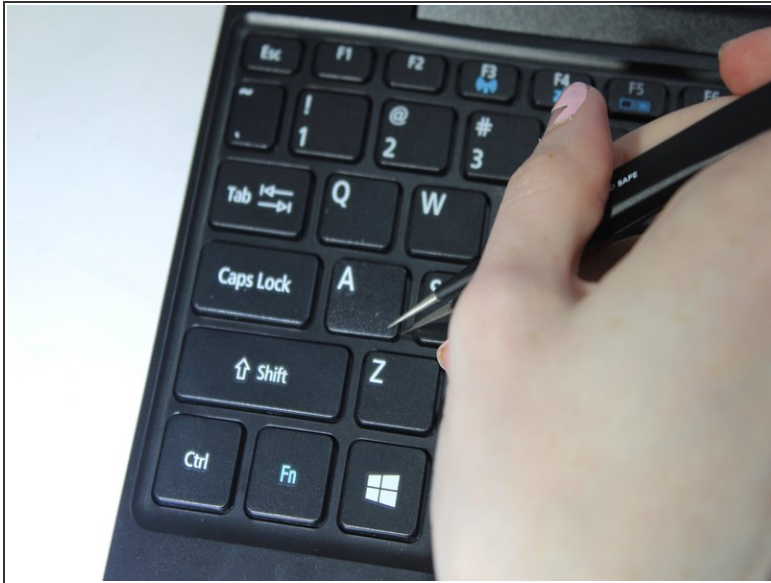

- Make sure your device is powered off and disconnected from any power supply.
- Open the laptop and disconnect the tablet screen from the magnetic keyboard dock by gently lifting the screen up.
- Use tweezers to gently pry up the damaged key.

Step 2

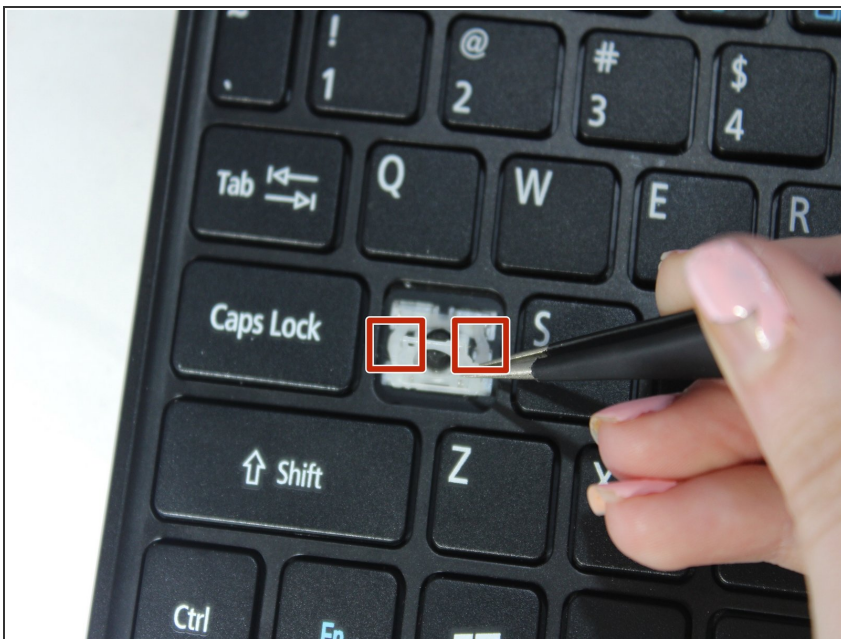

- ⚠ White plastic springs may become misaligned when removing key.
- If the plastic springs do become misaligned, use tweezers to realign springs by popping them back into their horizontal placement.

To reassemble your device, follow these instructions in reverse order.