




Asus Zenbook UX21e Battery Replacement

This guide will enable you to replace the Asus Zenbook UX21e Battery.

Written By: Zachary Eslick

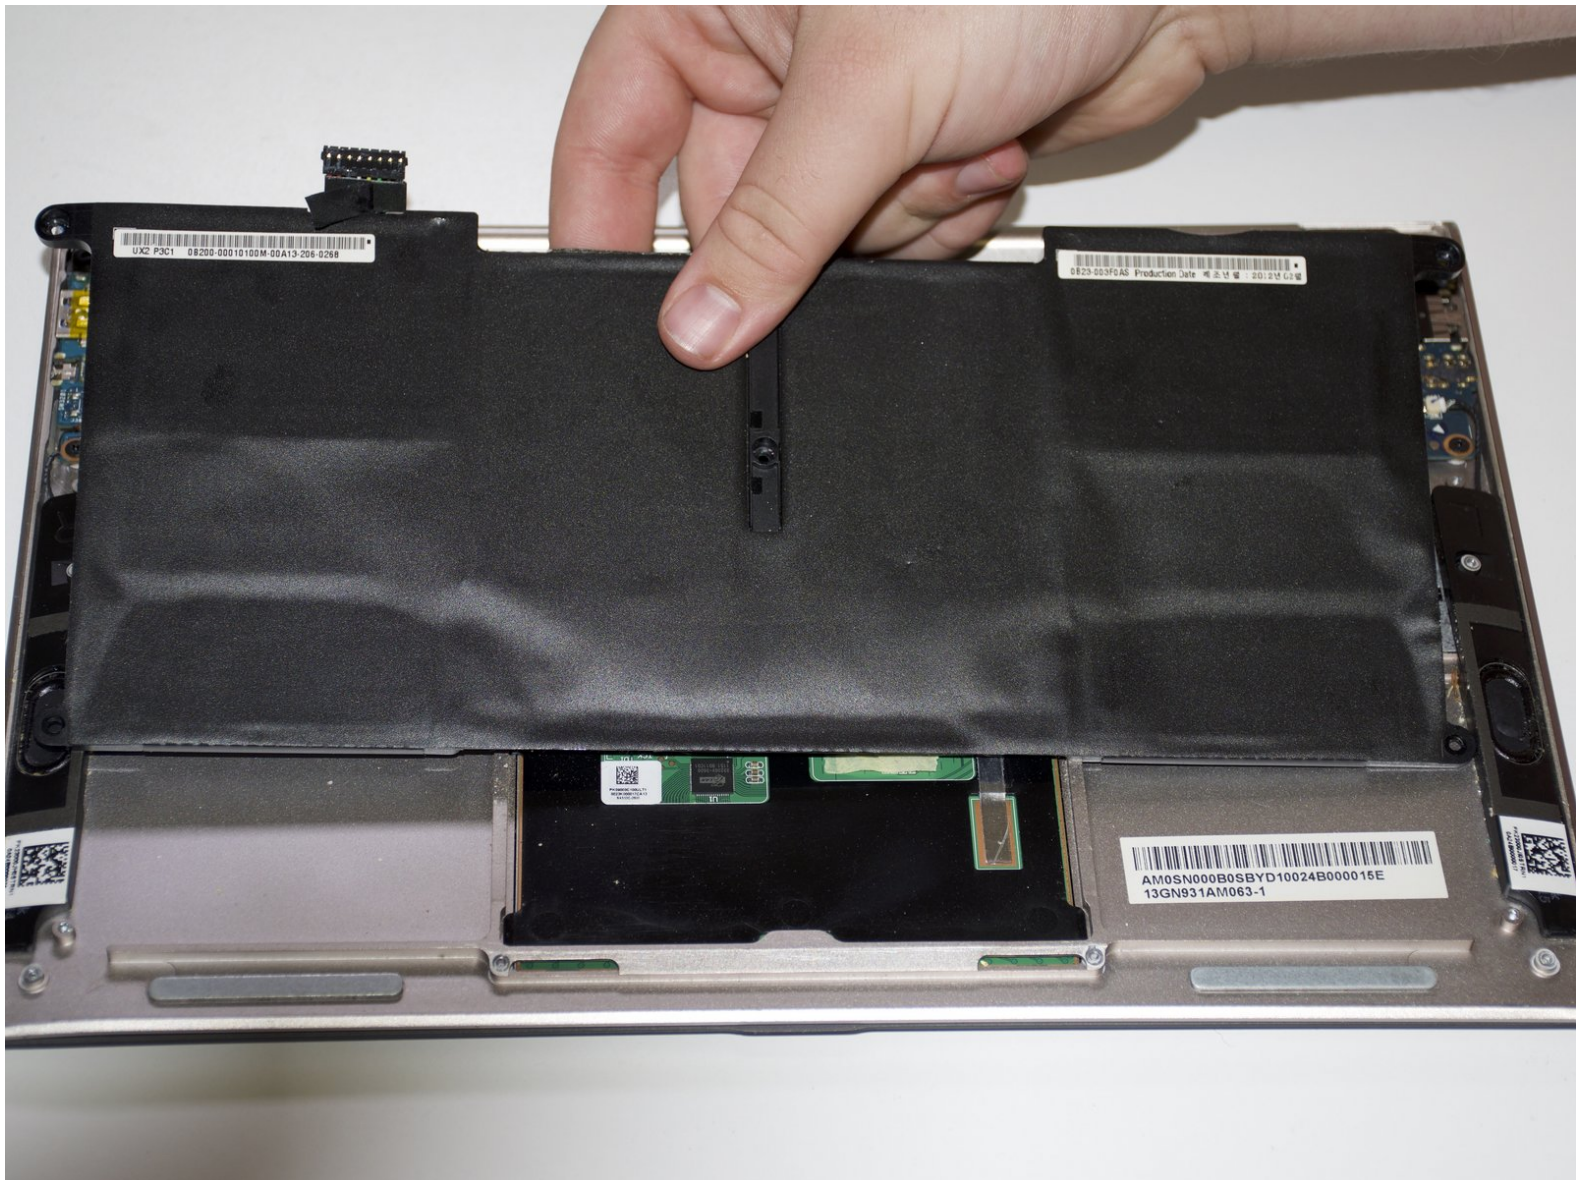

INTRODUCTION


The Asus Zenbook UX21e has an easily replaceable battery. To successfully remove the battery, the back cover must be removed, along with the five screws holding the battery to the device. From their, the battery simply disconnects from the motherboard and can be pulled out.



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
 - [T4 Torx Screwdriver](#) (1)
-

Step 1 — Battery

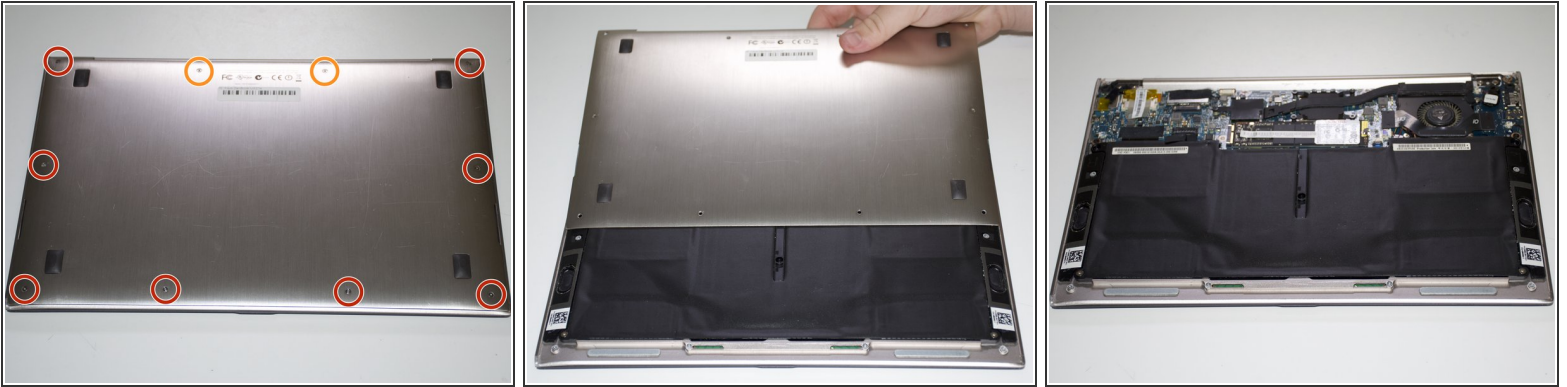


- Using a T4 Torx screwdriver, unscrew the ten screws lining the bottom cover. Then, proceed to remove the bottom cover by sliding it out parallel toward the back of the computer.
- There are two length of screws. Eight screws are 3mm and two are 5mm. The two 5mm screws always go into the two center holes along the back edge.

Step 2



- Using an iFixit opening tool and your other hand, gently lift the connector up from the tape wrapped around the connector wires and pry the connector from the motherboard.



Step 3

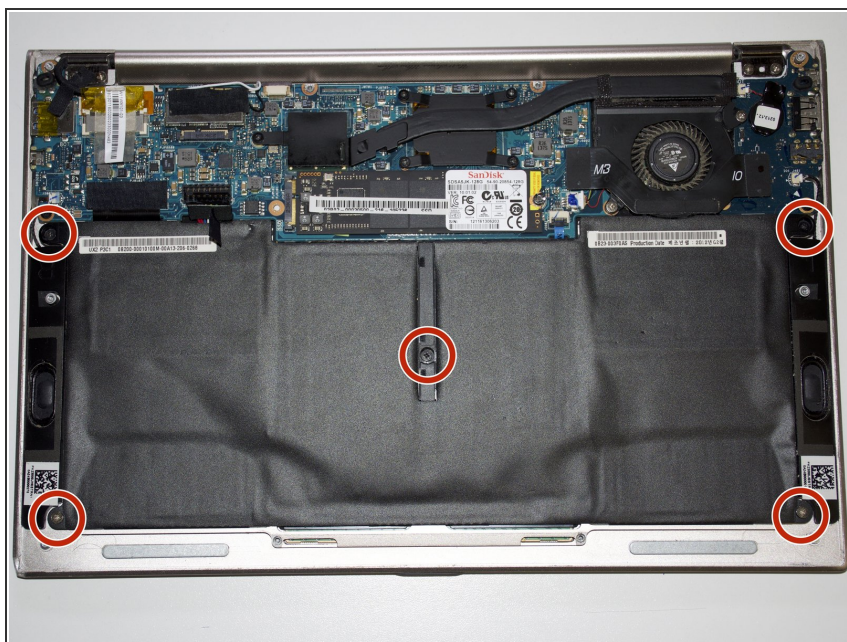

- Remove the battery by unscrewing the five 3mm screws using a Phillips #1 screwdriver.

❗ One at each corner and one in the center.

Step 4

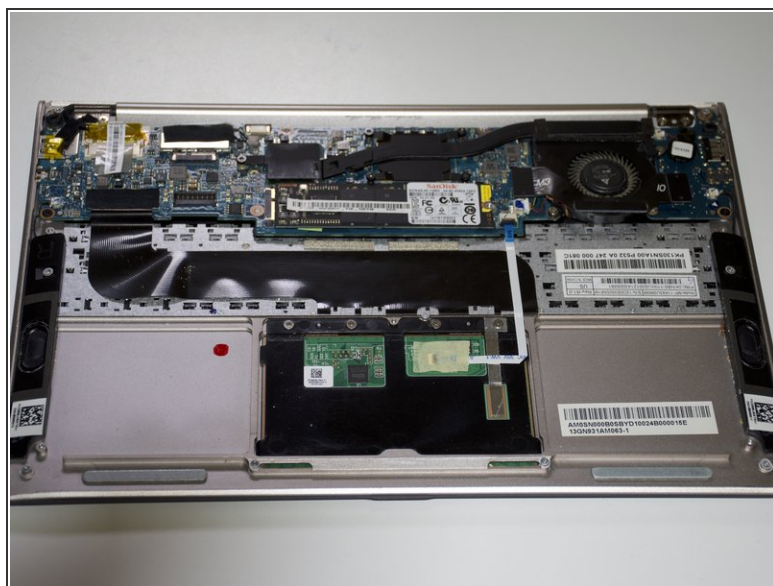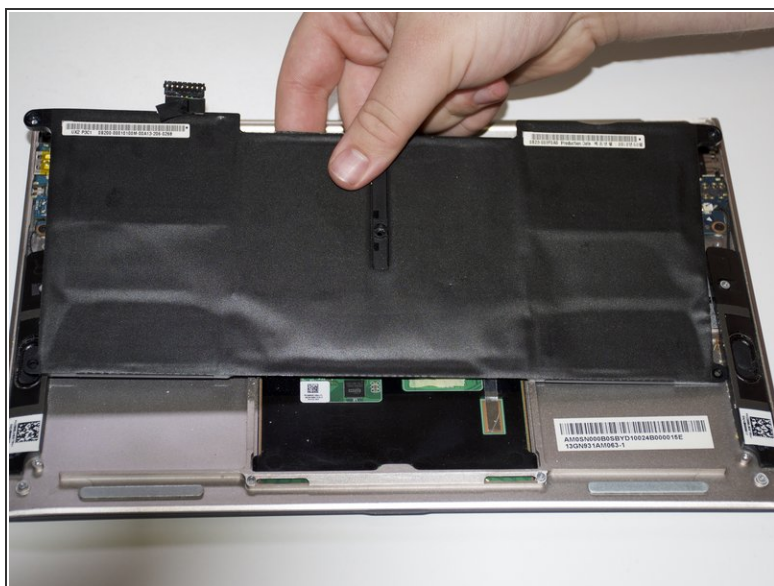

- Lift the battery directly up and remove it from the device.

To reassemble your device, follow these instructions in reverse order.