



Shure SM58 Faceplate Replacement

This guide will show you how to remove and replace the microphone faceplate.

Written By: nat coll



INTRODUCTION

The faceplate connects all of the internal wiring of the microphone. If it is defective (or wires need to be reattached to it), this guide shows how to replace it.

TOOLS:

- [Adjustable Wrench](#) (1)
 - [Soldering Workstation](#) (1)
-

Step 1 — Faceplate



- Remove the yellow and green wires from the face plate.
- ★ Note which side the yellow and green wires connect to.


Step 2



⚠ Never open the microphone capsule. Attempting to open the capsule will likely result in permanent damage and make the microphone unusable.

- Using an adjustable crescent wrench, remove the nut and washer from the face plate by twisting the nut counterclockwise.

Step 3

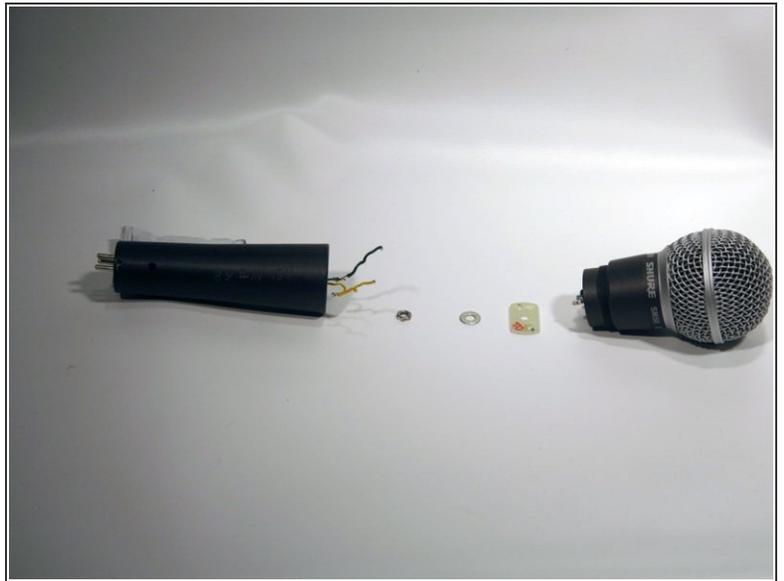

- Slide the face plate over the connector.

Follow the steps of the guide in reverse to reassemble the microphone. In order to solder wires back to faceplate use [soldering guide](#).