



# Cisco Aironet 1242 Dissassembly

Cisco Aironet 1242ag Access Point

Written By: Eneider Colina



---

# INTRODUCTION

Disassembly guide for Cisco Aironet 1242ag Access Point

---




## TOOLS:

- [New Item](#) (1)
  - [Spludger tweezers](#) (1)
-



## Step 1 — Remove the screws

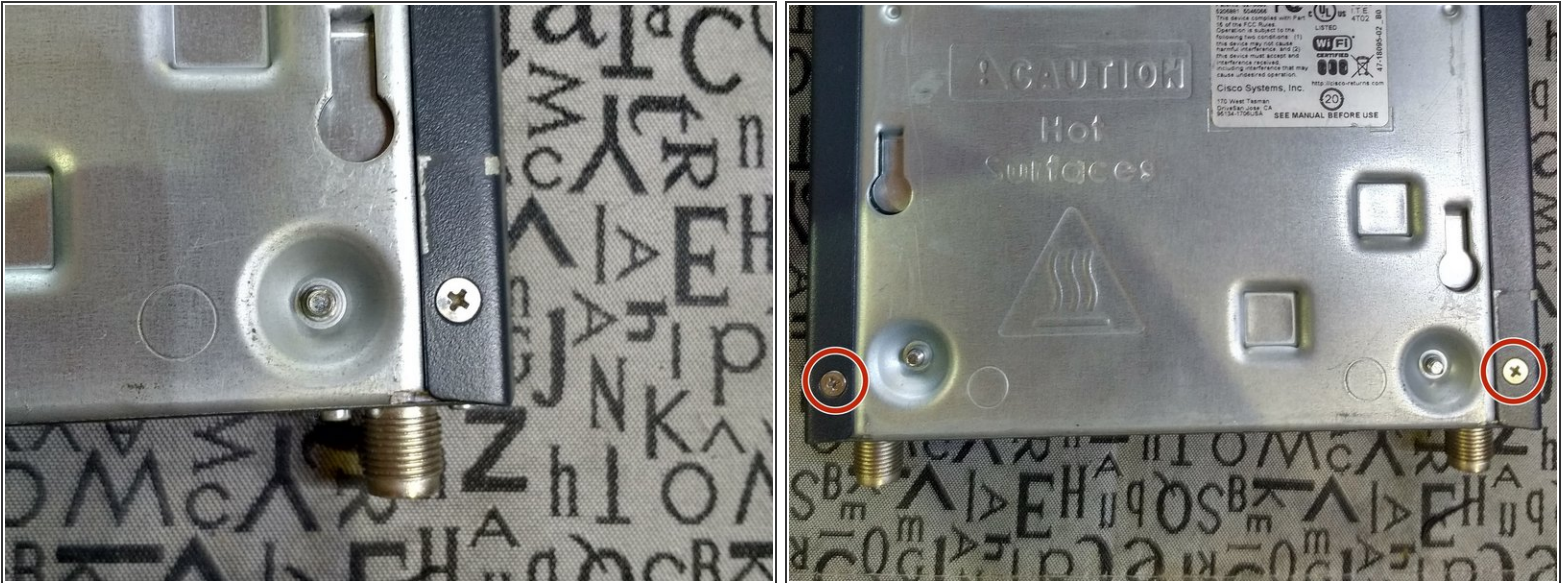

- ① The equipment cover is held by 4 screws.


## Step 2 — Removing the cover



- Once the 4 screws are removed, push to the side to remove the cover.



### Step 3 — Disassembling the main board

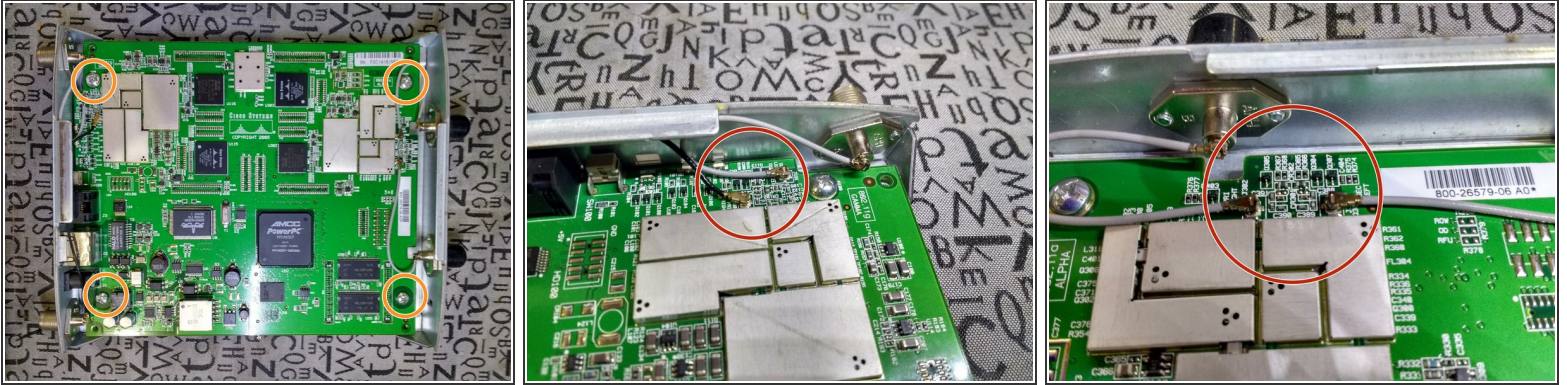


- The card is attached to the bottom plate by 4 screws

⚠ Before removing the logic board, disconnect the antenna cables in both parts of the device.

📎 There is a total of 4 cables. Use a tweezer or a spudger to disconnect them.

### Step 4 — Device disassembled

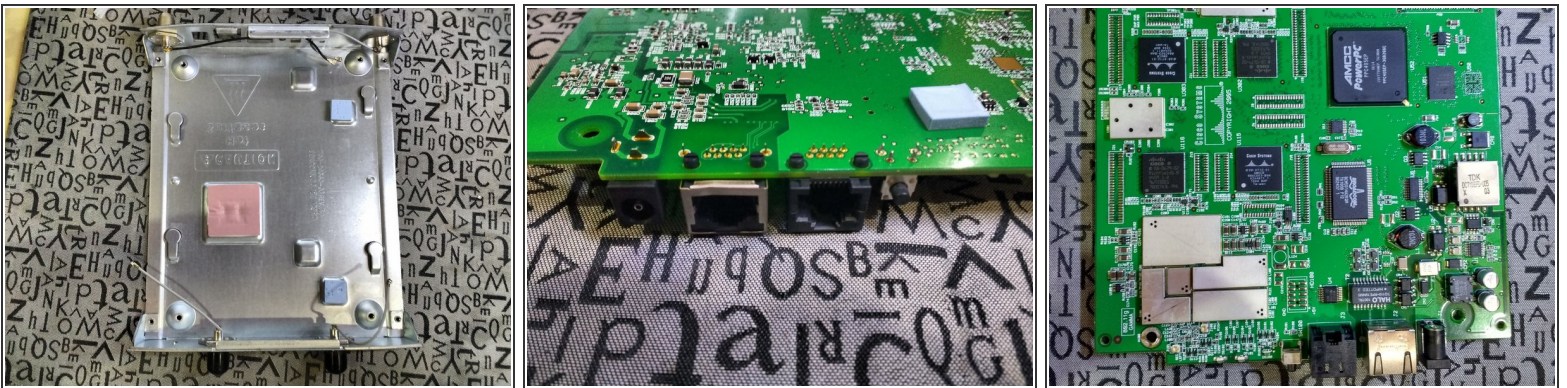

- Write the wisdom here.

To reassemble your device, follow these instructions in reverse order.