




# Dell Inspiron 15 5565 Display Assembly Replacement

Written By: Terrence15

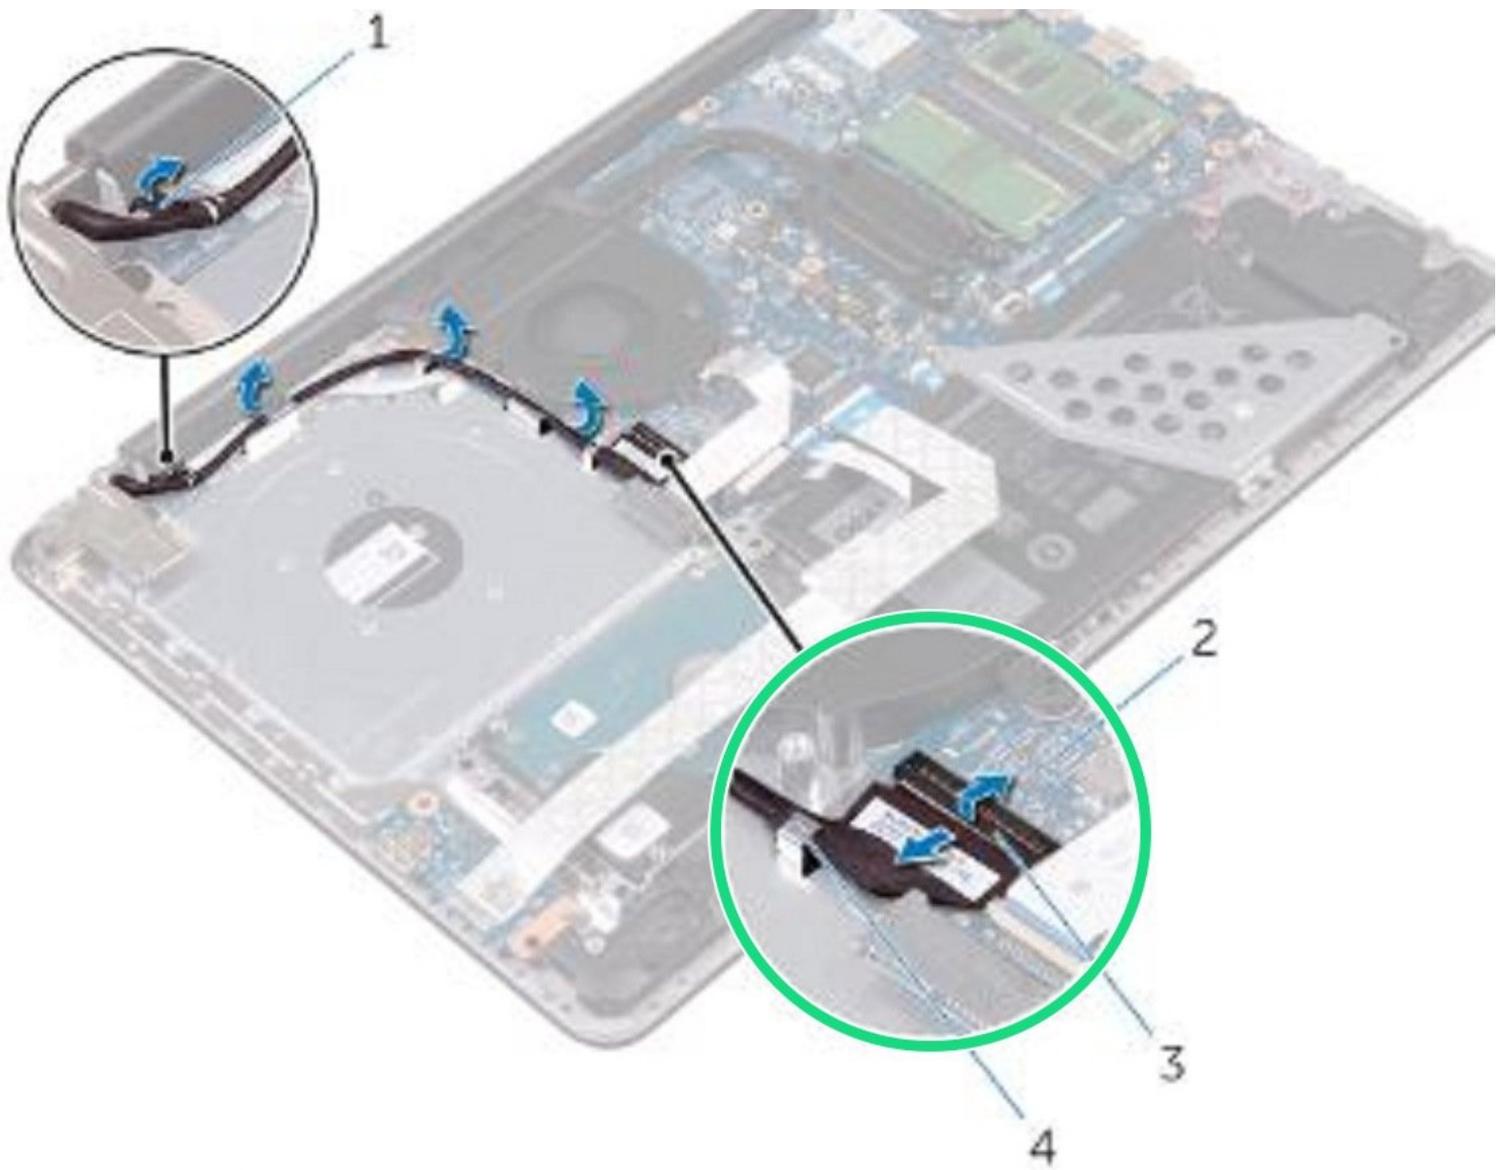

---

## INTRODUCTION


In this guide, we will be showing you how to remove and replace the Display Assembly.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-


## Step 1 — Remove the Battery Cable

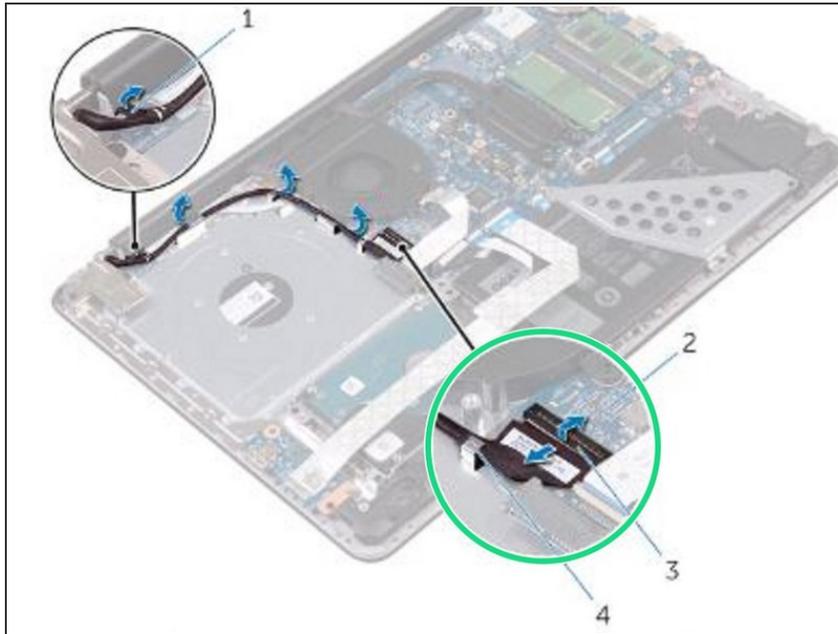

**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before Working Inside Your Computer](#). After working inside your computer, follow the instructions in [After Working Inside Your Computer](#).


- Remove the battery cable from the system board.

## Step 2 — Remove the Display Cable

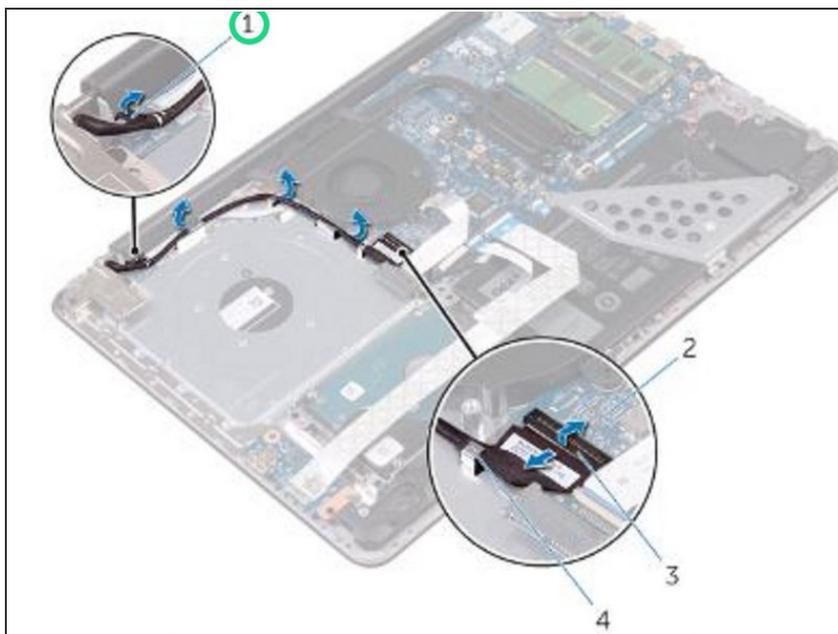


- Note the display cable routing and remove the cable from its routing guides.

### Step 3 — Disconnect the Display Cable

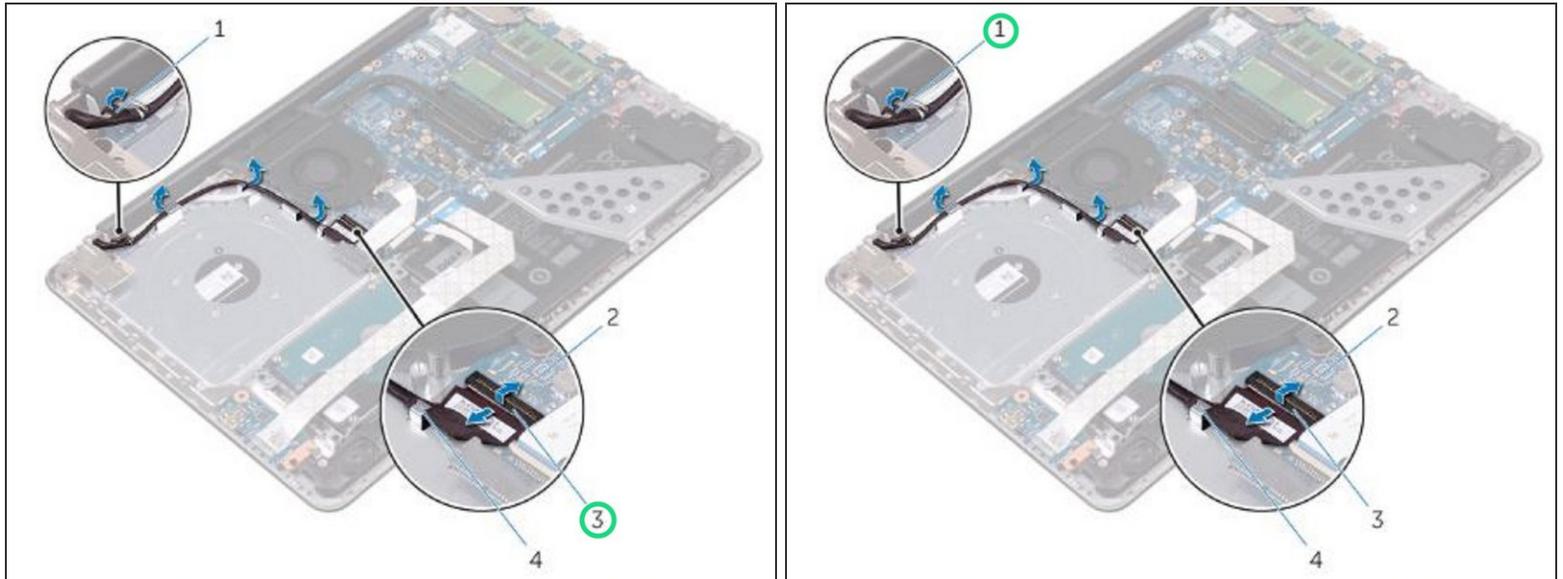


- Lift the latch and disconnect the display cable from the system board.

### Step 4 — Remove the Screws

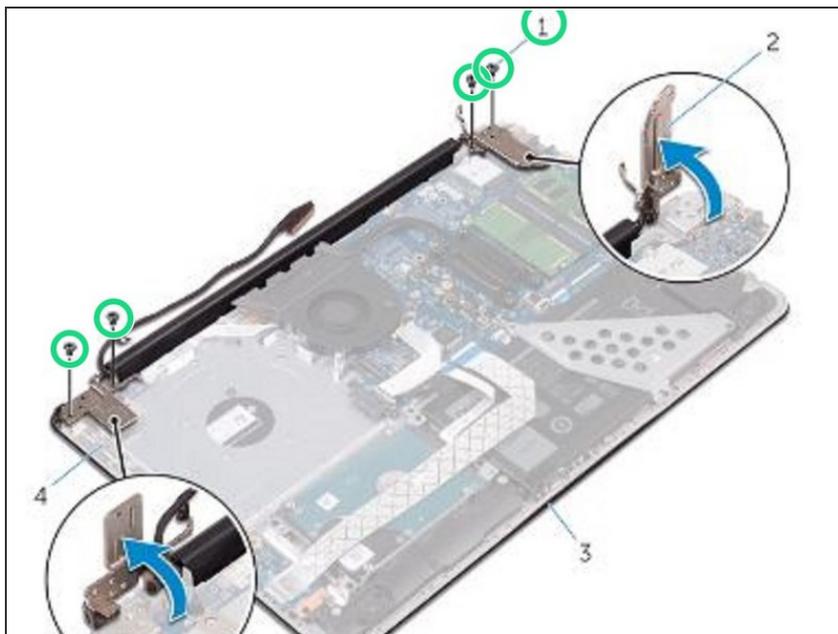


- Remove the screws that secure the display hinges to the palm rest and keyboard assembly.

## Step 5 — Open the Display Hinges

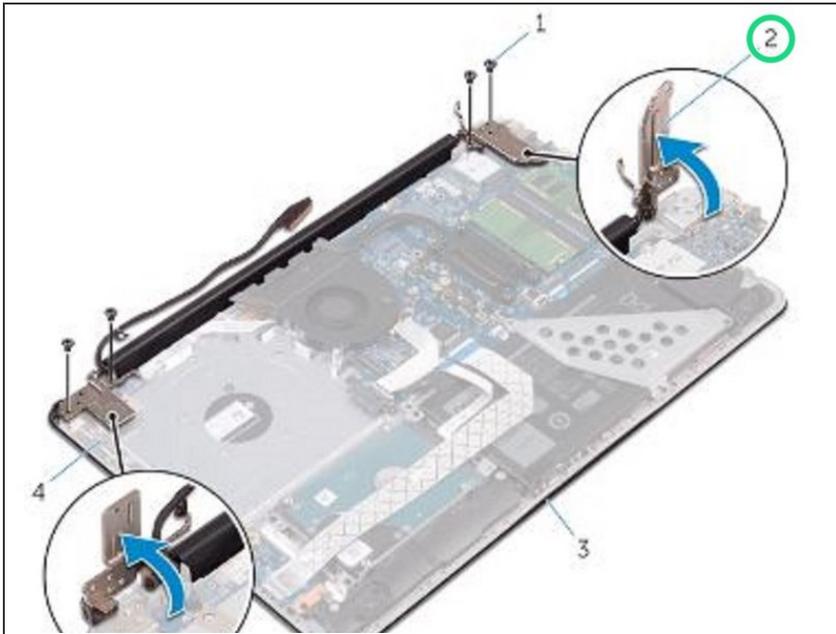


- Open the display hinges.

## Step 6 — Lifting the Assembly

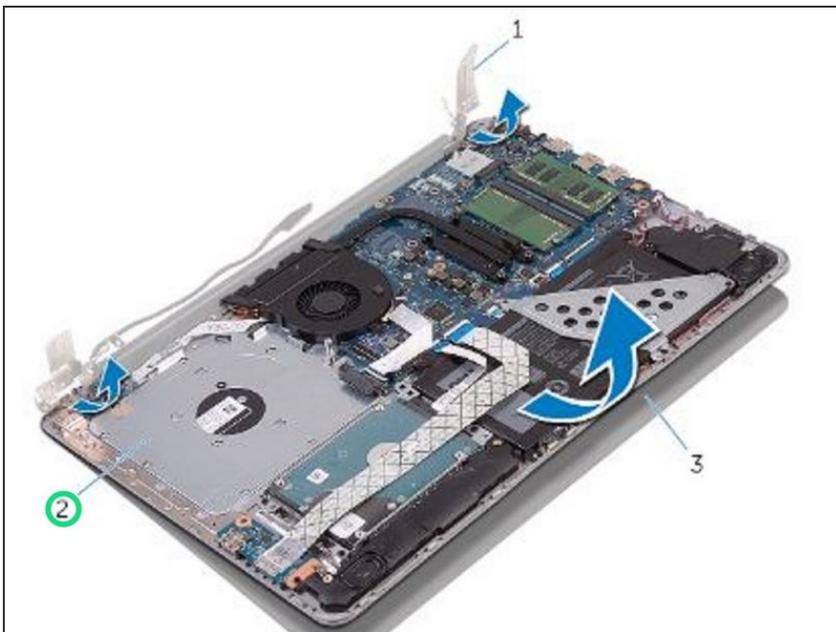


- Lift the palm rest and keyboard assembly off the display assembly.

## Step 7 — Placing the Palm Rest

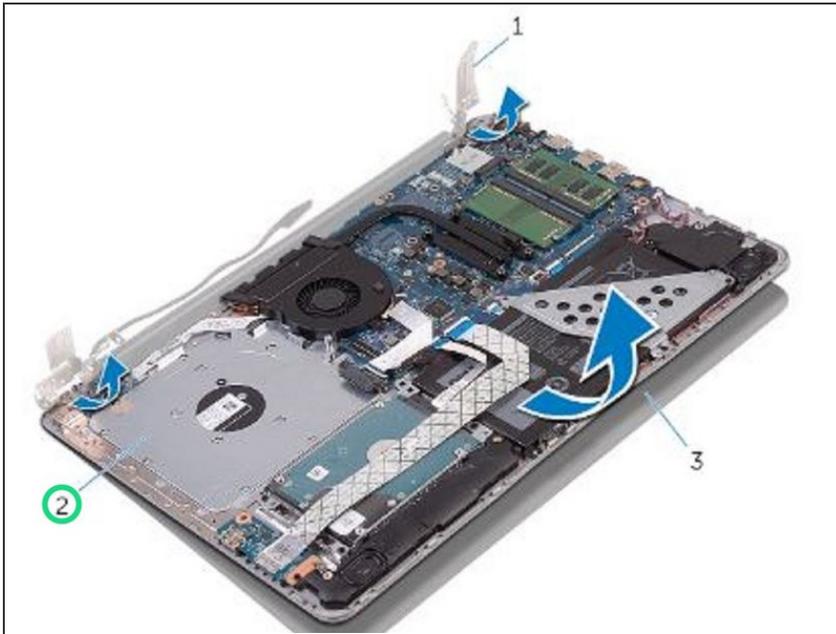


- Place the palm rest and keyboard assembly on the **NEW** display assembly.

## Step 8 — Press the Hinges Down

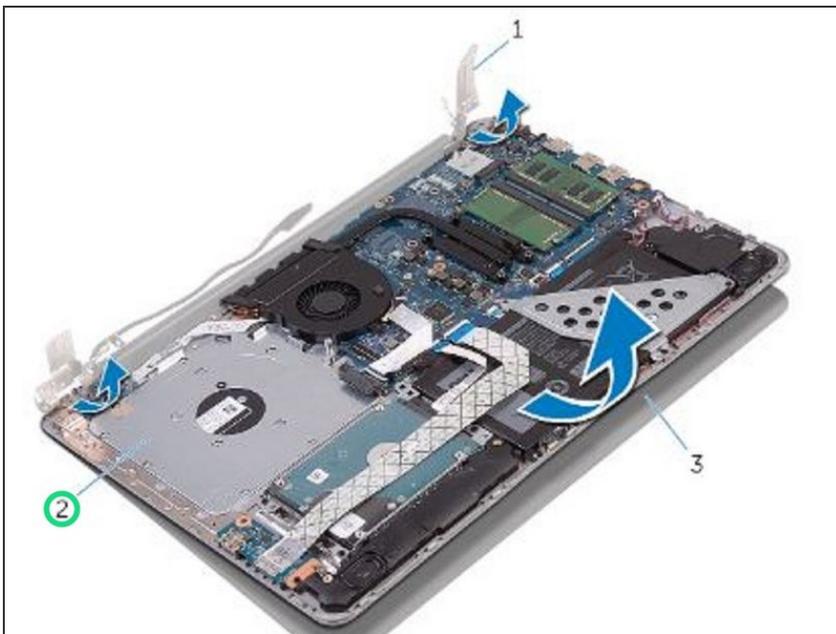


- Using the alignment posts, press the display hinges down on the palm rest and keyboard assembly.

## Step 9 — Replace the Screws

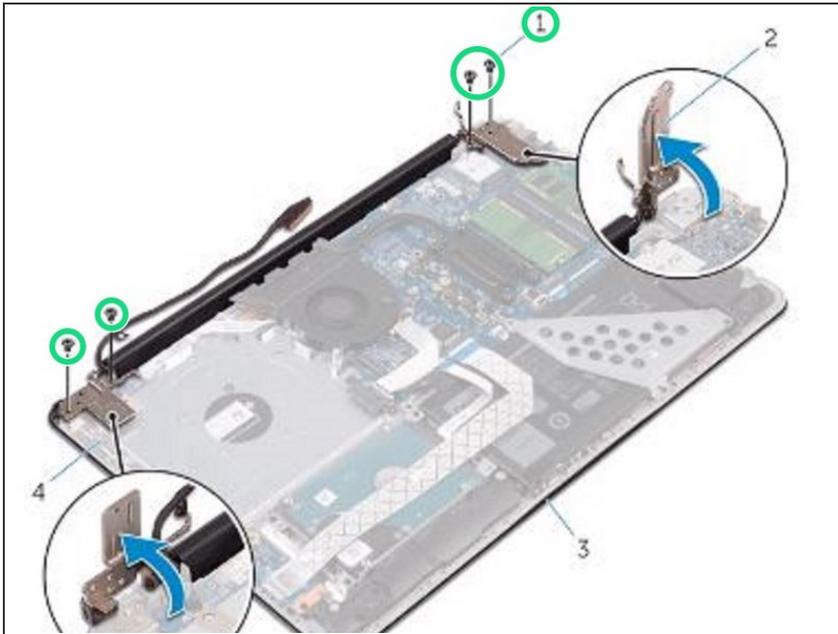


- Replace the screws that secure the display hinges to the palm rest and keyboard assembly.

## Step 10 — Routing the Display Cable

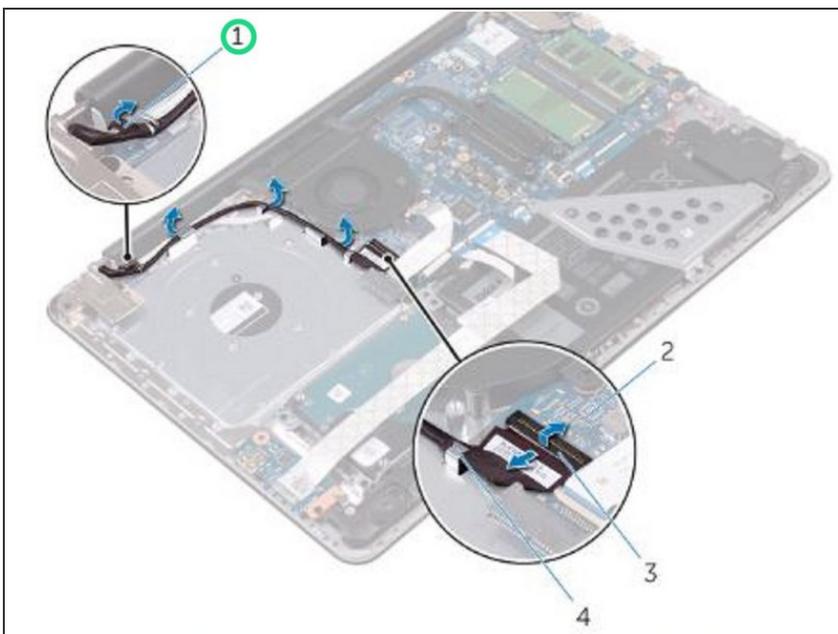


- Route the display cable through the routing guides on the palm rest and keyboard.

## Step 11 — Sliding the Display Cable

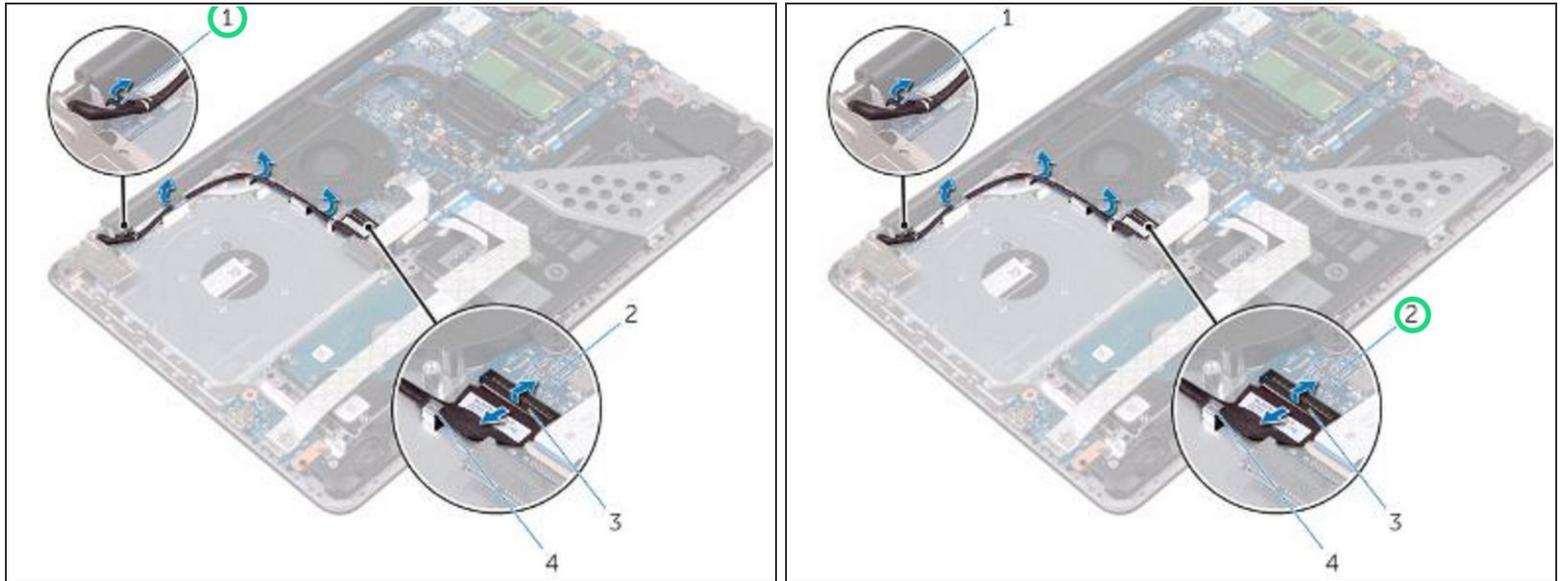

- Slide the display cable to the connector on the system board and close the latch to secure the cable.

## Step 12 — Sliding the Battery Cable

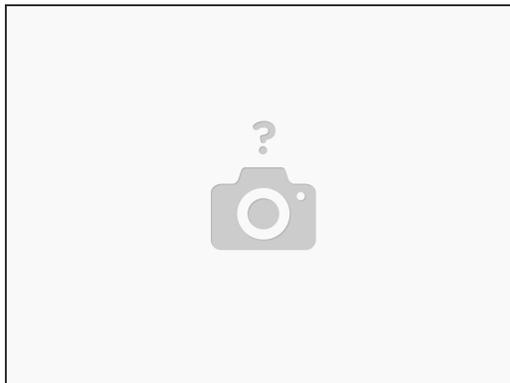

- Slide the battery cable to the connector on the system board.