



# Dell Inspiron 15 5579 2-in-1 Memory Modules Replacement

How to replace the RAM on a Dell Inspiron 15 5578 2-in-1 Laptop.


Written By: Terrence15



# INTRODUCTION

In this guide, we will be showing you how to remove and replace the Memory Modules.


## Step 1 — Lifting the Mylar

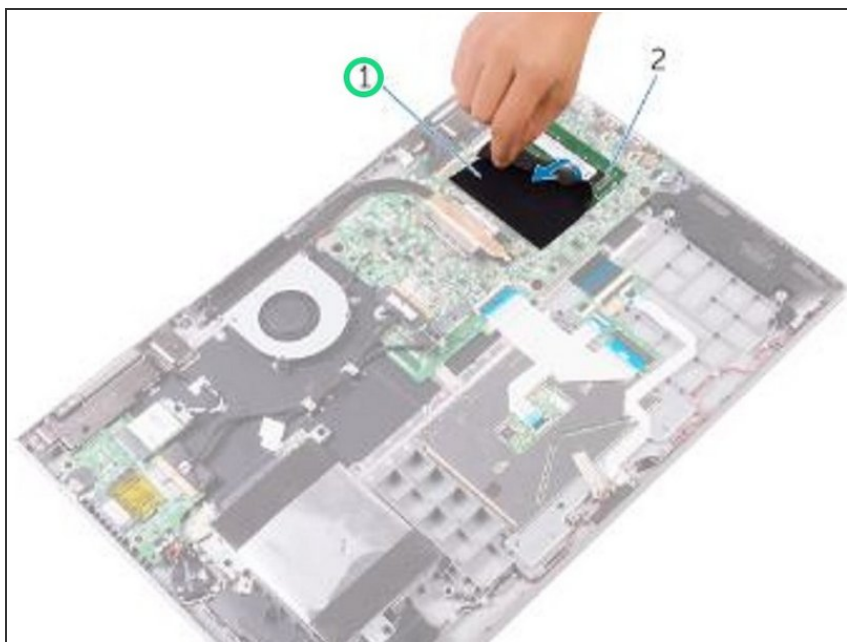

**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before Working Inside Your Computer](#). After working inside your computer, follow the instructions in [After Working Inside Your Computer](#).


- Lift the Mylar from to access the memory module.

## Step 2 — Popping up the Memory Module

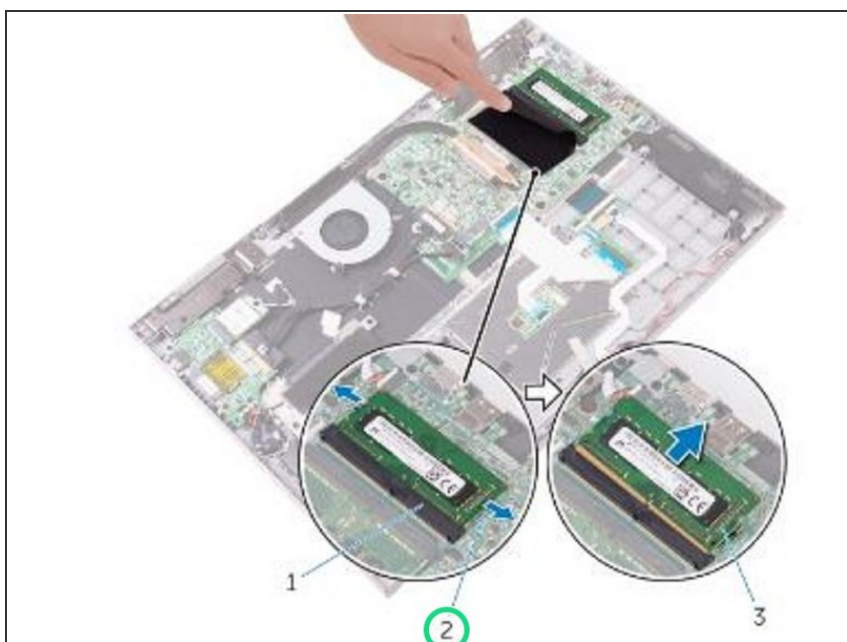


- Use your fingertips to carefully spread apart the securing-clips on each end of the memory-module slot until the memory module pops up.

### Step 3 — Remove the Memory Module

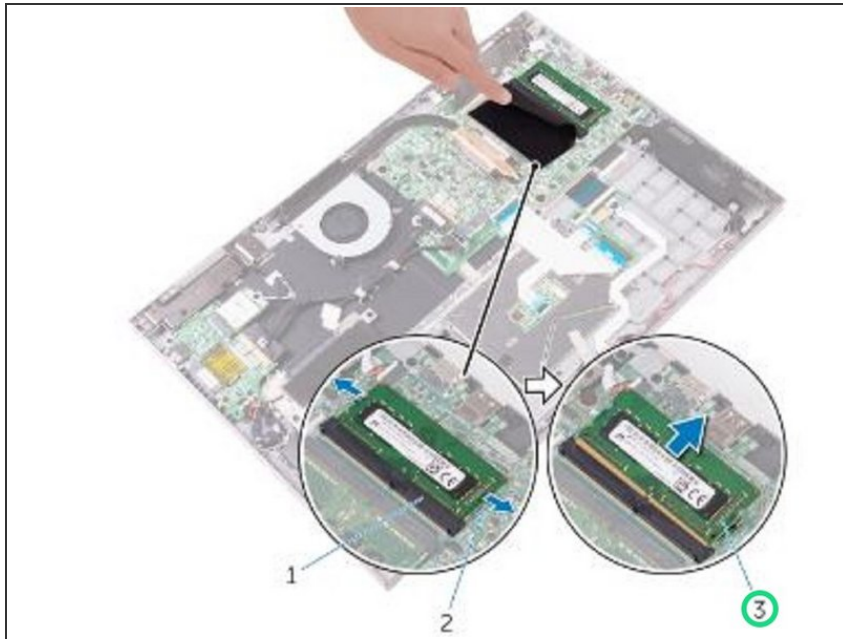


- Remove the memory module from the memory-module slot.

### Step 4 — Lifting the Mylar

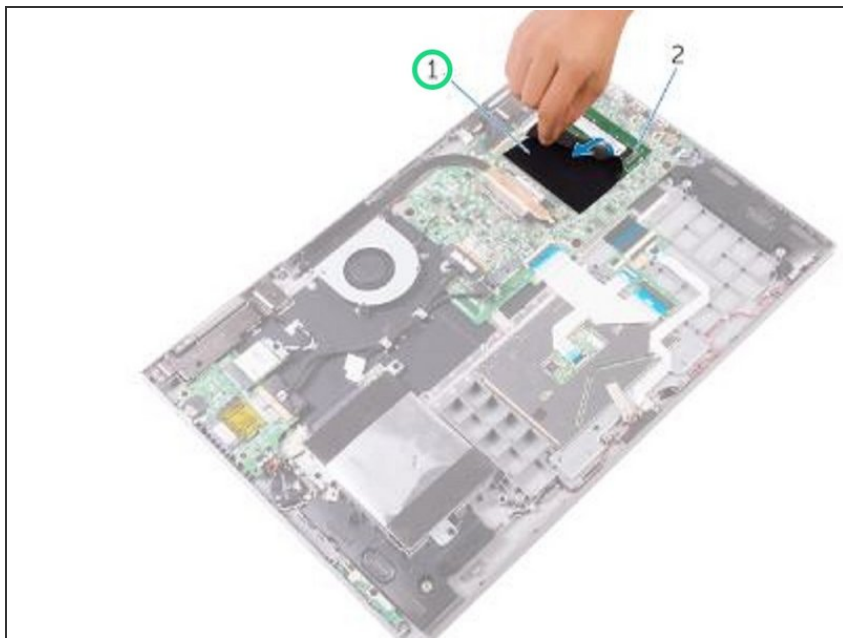

- Lift the Mylar to access the memory-module slot.

## Step 5 — Align the Notch

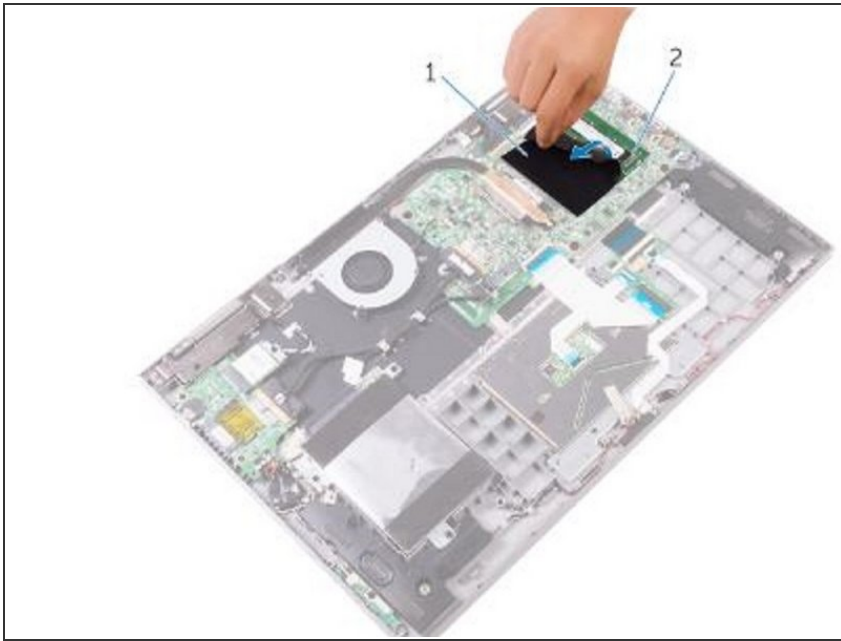

- Align the notch on the memory module with the tab on the memory-module slot.