


Dell Inspiron 15 Gaming 7577 Display Assembly Replacement

Written By: Terrence15

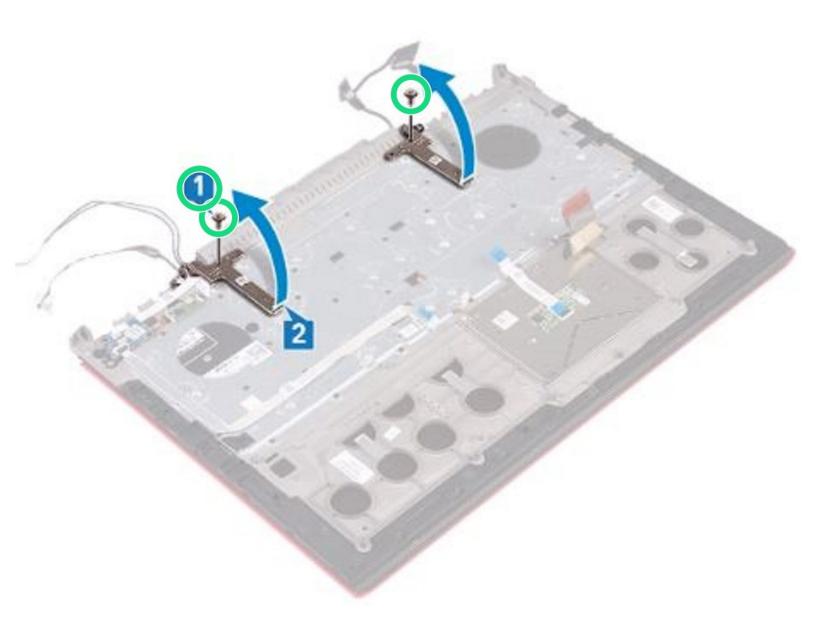

INTRODUCTION


In this guide, we will be showing you how to remove and replace the Display Assembly.



TOOLS:


• Phillips #0 Screwdriver (1)

Step 1 — Remove the Screws

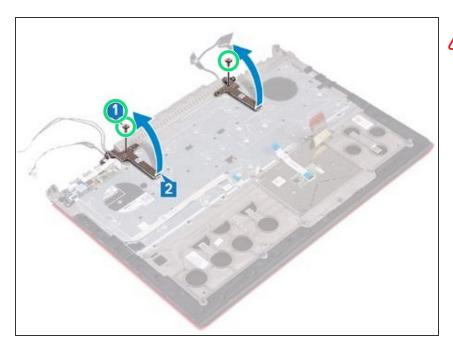

- WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before Working Inside Your Computer. After working inside your computer, follow the instructions in After Working Inside Your Computer.
- Remove the two screws (M2.5x5) that secure the display hinges to the palm-rest assembly.

Step 2 — Open the Display Hinges

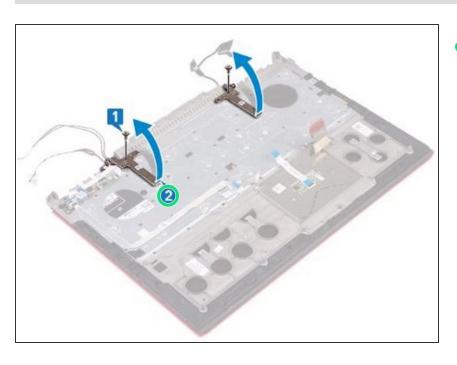

 Open the display hinges at an angle of 90 degrees.

Step 3 — Lifting the Palm-Rest Assembly




 Lift the palm-rest assembly off the display assembly.

Step 4 — **Display Assembly**




 After performing the above steps, you will be left with the display assembly.

Step 5 — Placing the Palm Rest

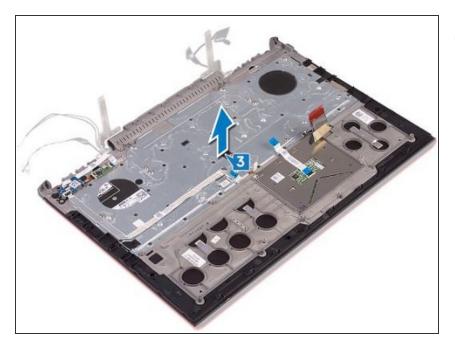


Place the palm-rest assembly on the display assembly.

Step 6 — Close the Display Hinges

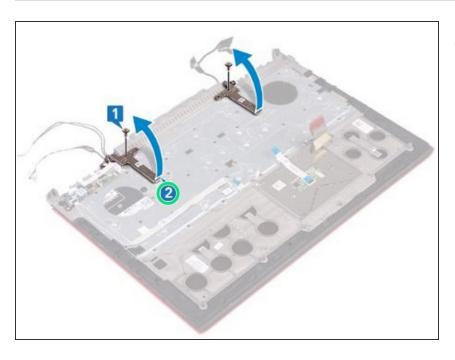

 Close the display hinges at an angle of 90 degrees.

Step 7 — Replace the Screws

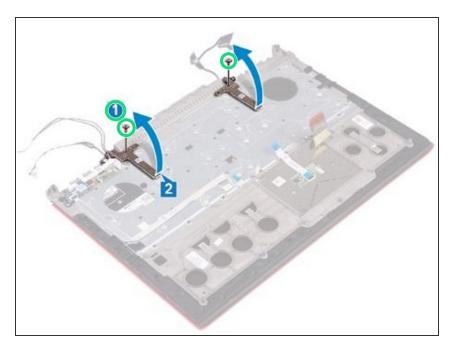

 Replace the two screws (M2.5x5) that secure the display hinges to the palm-rest assembly.