 


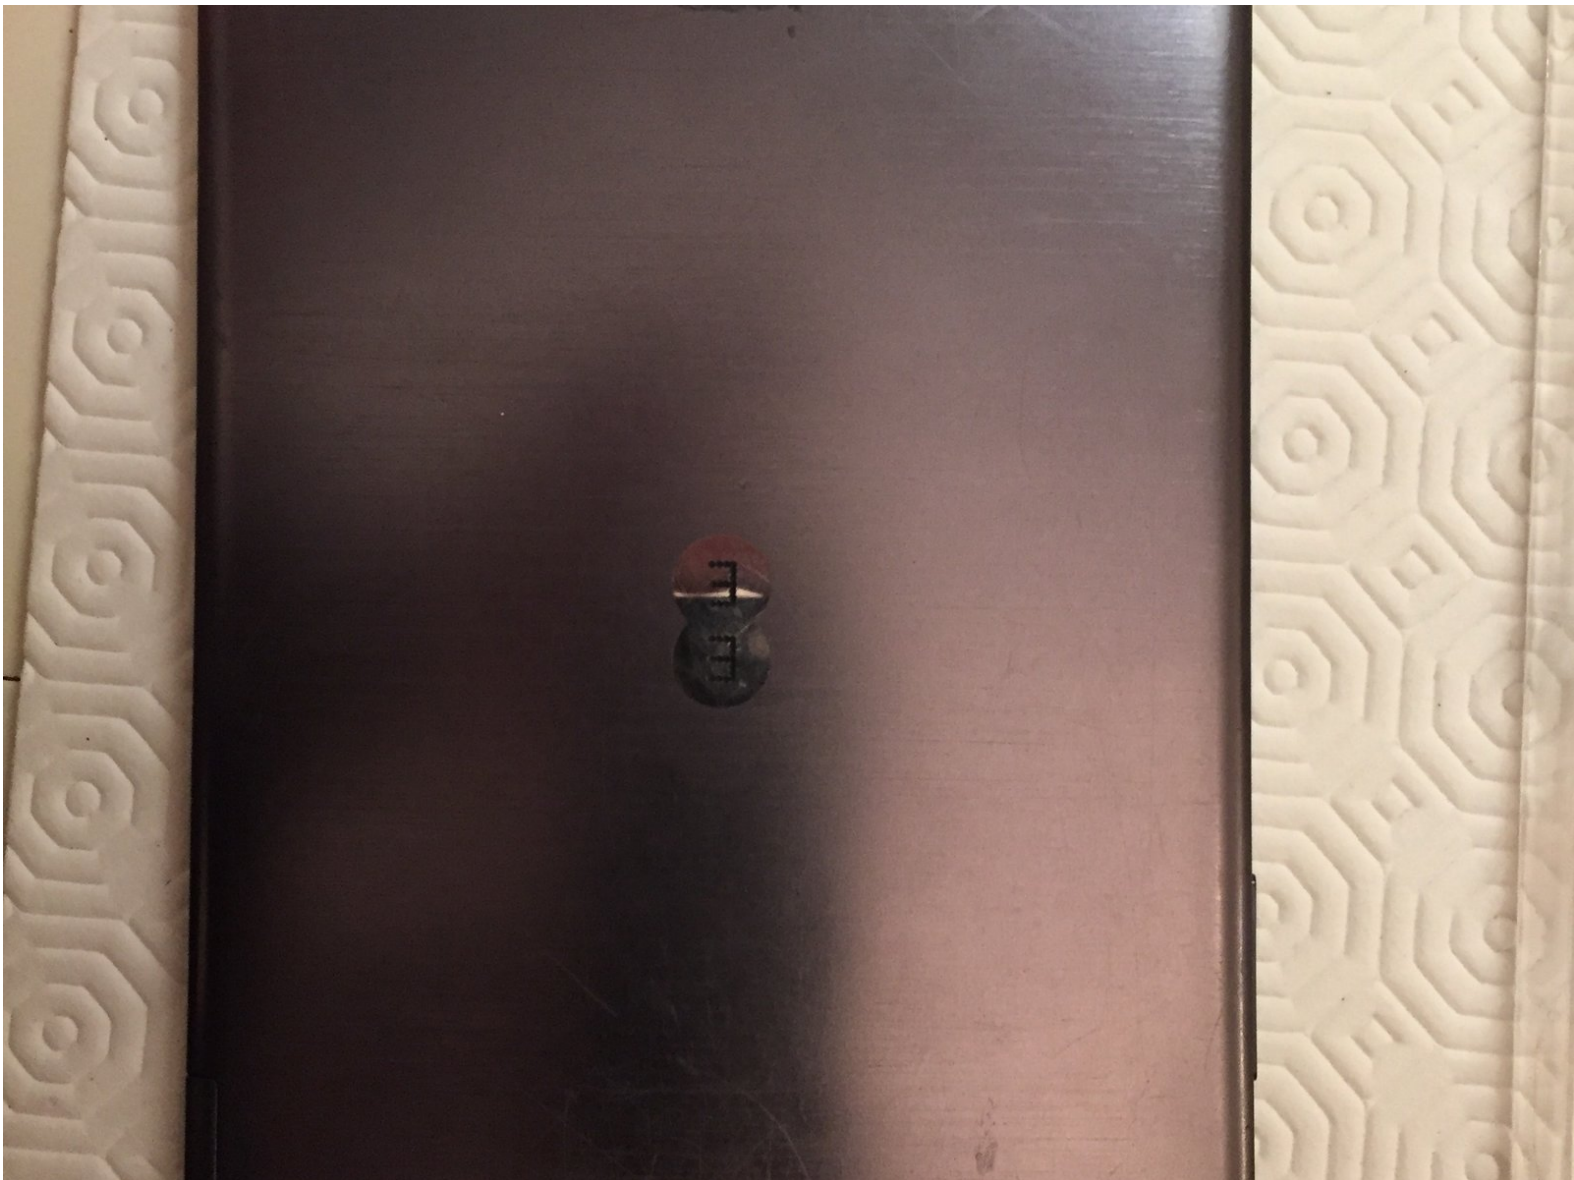

Harrier Tablet by EE Disassembly

Use this guide to disassemble a Harrier Tablet by EE.

Written By: rarazzell



INTRODUCTION

 
Use this guide to disassemble a Harrier Tablet by EE.



TOOLS:

- [Essential Electronics Toolkit](#) (1)
-

Step 1 — opening the first layer

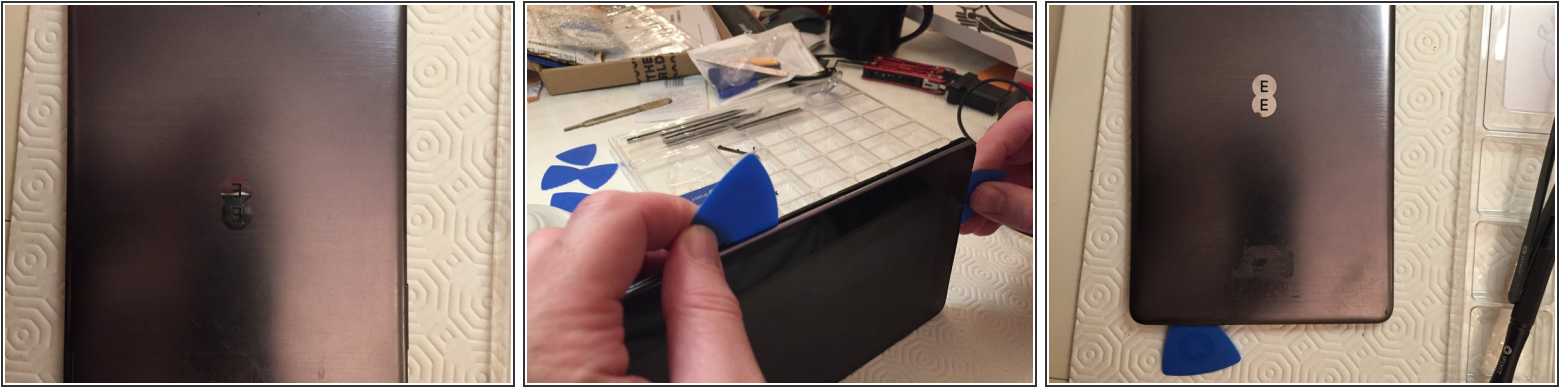

- Lay the tablet on a flat surface with the screen facing downward.
- Use a guitar pick to pry up the rear most layer of the tablet, starting by the cover of the sim card.
- Use a spudger to pry along the edges of the back layer of the tablet. Use the guitar picks to keep the edges propped open.

Step 2 — getting ready for the second layer



- Before opening the second layer, use a screwdriver to remove all the screws along the edges.
- ⓘ The top left screw has an anti-tamper seal on it. Damage to this seal will void any warranties of the tablet.

Step 3 — sort of disassemble entirely



- Once the screws are removed, use a spudger and guitar picks to unclip the bezel.
- ⓘ Removing the battery and flexi rigid circuit board will likely cause damage. In order to disassemble further, you may also need to replace these parts.
- To reassemble, first remove the sim card, then follow these instructions in reverse order.
- ✦ Make sure the buttons are properly seated before snapping the first layer back on.

To reassemble your device, follow these instructions in reverse order.